


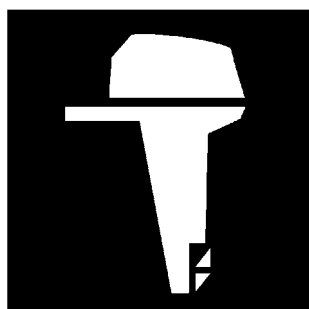

PARTS CATALOGUE

Z300TRC (6D01)

LZ300TRC (6D11)

Z300AETO'04 (6D01)

LZ300AETO'04 (6D11)

FOREWORD

This Parts Catalogue is related to the parts for the model(s) on the cover page. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after the issue of the Parts Catalogue will be announced in the Parts News.
It is advisable that you make the necessary corrections to the Parts Catalogue according to the Parts News.

2. Abbreviations

The following abbreviations are used in this Parts Catalogue.

“UR” Use specified parts number.

“UN” Use as many as needed.

“AP” Alternate Parts

“LM” Locally Made (Parts need to be ordered locally)

“F#” Frame No. (Applicable machine No.)

“O/S” Over Size

3. The number of components for assembly

- Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.
- The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

PART NO.	DESCRIPTION	Q'TY	REMARKS
2F5-83310-60	FRONT FLASHER LIGHT ASSY	2	
115-83311-60	.BULB (6V-18W)	1	

4. Applicable colours of graphics are represented in the “REMARKS” as shown below.



PART NO.	DESCRIPTION	Q'TY	REMARKS
2N4-24110-00-X5	FUEL TANK COMP.	2	MXR
3J1-24240-10	.GRAPHIC, FUEL TANK	1	FOR MXR

5. Note that the illustrations for reference in finding parts numbers are not to be used for assembling. When assembling, please use the applicable service manual.

6. The asterisk (*) before a reference number indicates modified items after the first edition.

7. Applicable Serial No.

Engine Serial No.

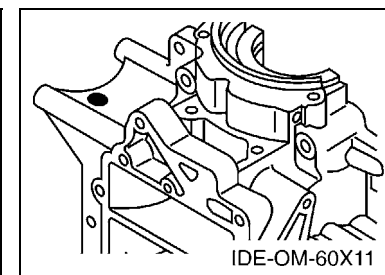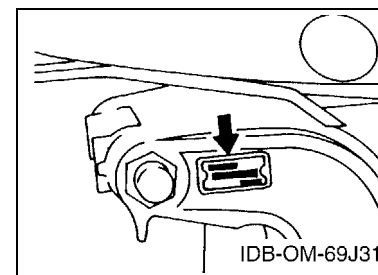

8. Applicable Engine Starting Serial No.

Model	Serial No.	Model	Serial No.
Z300	6D0-1000001	Z300A	6D0-1000001
LZ300	6D1-1000001	LZ300A	6D1-1000001

9. Applicable Colour Code

Abbreviation	Colour Name	Colour Code
DBN1	DARK BLUISH GRAY 1	008D

10. Quantity Column Information

Column No.	Name Of Q'ty Column	Applicable Model
1	6D01	Z300TRC,Z300AETO
2	6D11	LZ300TRC,LZ300AETO

CONTENTS

SHEET1/2

TOP COWLING 1	A4
TOP COWLING 2	A6
CYLINDER & CRANKCASE 1	B1
CRANKSHAFT & PISTON	B4
CYLINDER & CRANKCASE 2	B6
CYLINDER & CRANKCASE 3	C1
FUEL PUMP DRIVE GEAR	C3
VAPOR SEPARATOR 1	C4
VAPOR SEPARATOR 2	C7
FUEL INJECTION PUMP	D1
FUEL INJECTION NOZZLE	D3
INTAKE	D5
OIL PUMP	D7
OIL TANK	E2
FUEL 1	E4
FUEL 2	E6
GENERATOR	E7
ELECTRICAL 1	F1
ELECTRICAL 2	F3
ELECTRICAL 3	F5

INDEX

NUMERICAL INDEX	G1
-----------------------	----

SHEET2/2

ELECTRICAL 4	A4*
STARTING MOTOR	A5*
BOTTOM COWLING	A7*
CONTROL	B3*
BRACKET 1	B6*
BRACKET 2	C1*
POWER TRIM & TILT ASSY 1	C3*
POWER TRIM & TILT ASSY 2	C6*
UPPER CASING	C7*
LOWER CASING & DRIVE 1	D2*
LOWER CASING & DRIVE 2	D6*
LOWER CASING & DRIVE 3	E1*
LOWER CASING & DRIVE 4	E5*
STEERING GUIDE	E7*
REMOTE CONTROL BOX	F1*
METER	F2*
SWITCH & PANEL	F4*
REPAIR KIT 1	F5*
REPAIR KIT 2	F6*

INDEX

NUMERICAL INDEX	G1*
-----------------------	-----

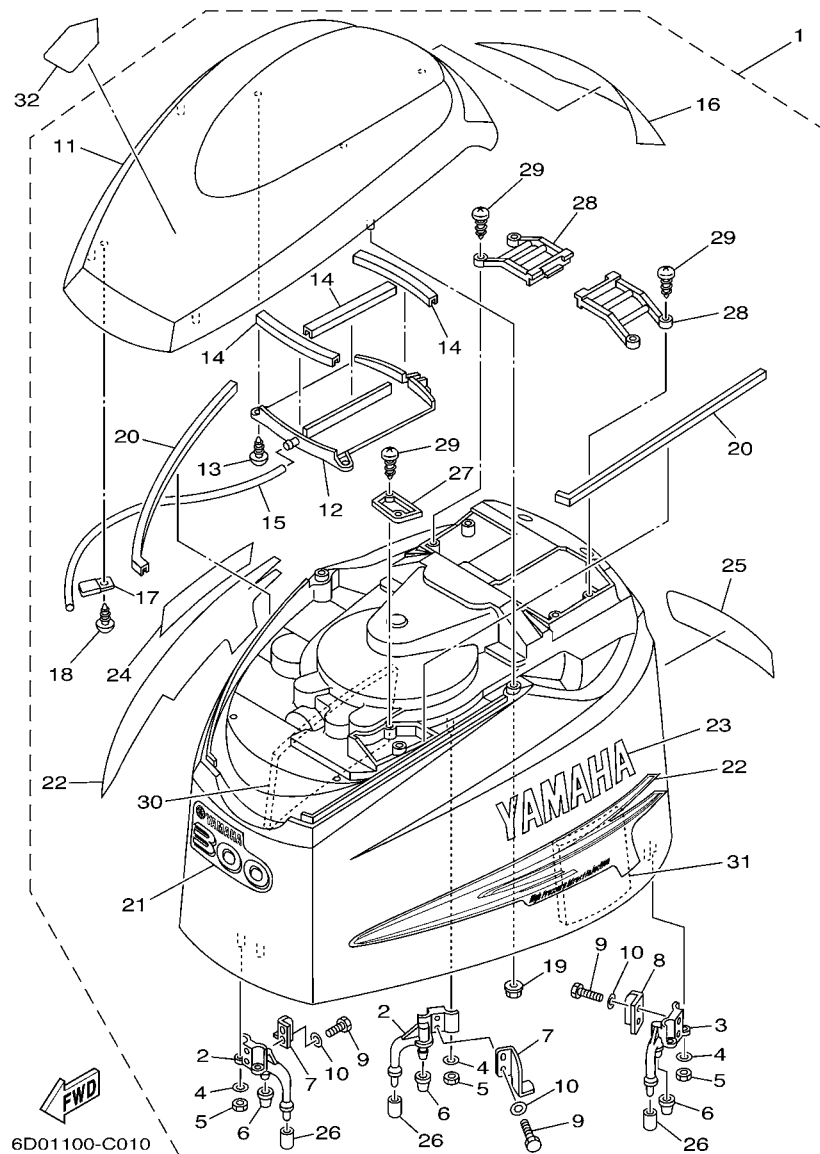


FIG. 1 TOP COWLING 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6D0-42610-00-8D	TOP COWLING ASSY	1	1			FOR USA
2	68F-42647-01-94	.HOLDER, CLAMP BAND	2	2			
3	68F-42648-01-94	.HOLDER, CLAMP BAND	1	1			
4	92990-06100	.WASHER, SPRING	6	6			
5	95380-06600	.NUT, HEXAGON	6	6			
6	68F-42663-00	.DAMPER	3	3			
7	60V-42651-01	.HOOK	2	2			
8	60V-42652-00	.HOOK	1	1			
9	97095-06016	.BOLT	6	6			
10	92995-06600	.WASHER	6	6			
11	60V-42613-00-8D	.MOLDING, AIR DUCT	1	1			
12	60V-42621-00	.MLDG, TOP	1	1			
13	97780-50616	.SCREW, TAPPING	3	3			
14	60V-42664-00	.DAMPER	3	3			
15	90445-11M33	.HOSE (L440)	1	1			
16	60V-42687-00	.EMBLEM, REAR	1	1			
17	90462-08018	.CLAMP	1	1			
18	97780-50612	.SCREW, TAPPING	1	1			
19	90179-06M24	.NUT	6	6			
20	60V-42662-00	.DAMPER	2	2			
21	6D0-42677-00	.GRAPHIC, FRONT	1	1			
22	60V-W0070-00	.GRAPHIC SET	1	1			
23	60V-42681-00	.MARK, COWLING	1	1			
24	60V-42682-00	.MARK, COWLING	1	1			
25	6D0-42678-00	.GRAPHIC, REAR	1	1			
26	67F-13448-00	.CAP	3	3			
27	60V-42626-00	.LOUVER, 1	1	1			

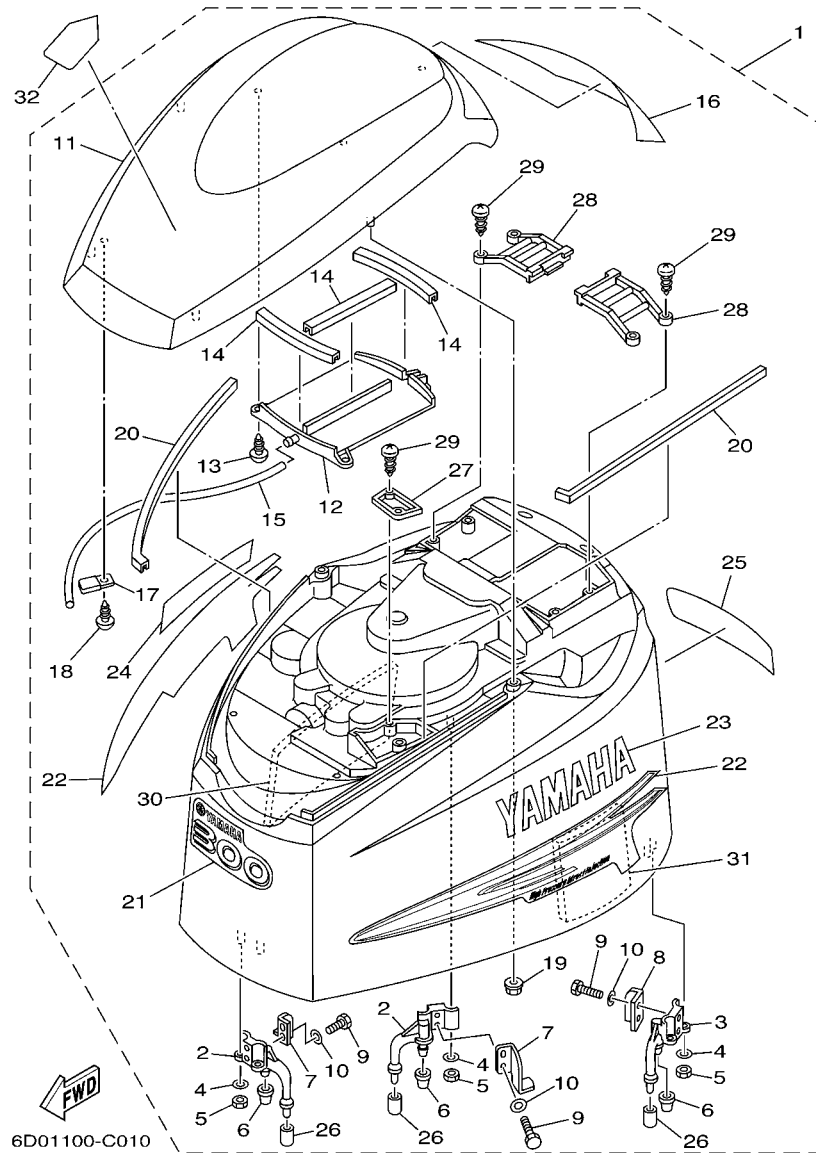


FIG. 1 TOP COWLING 1

[illegible]

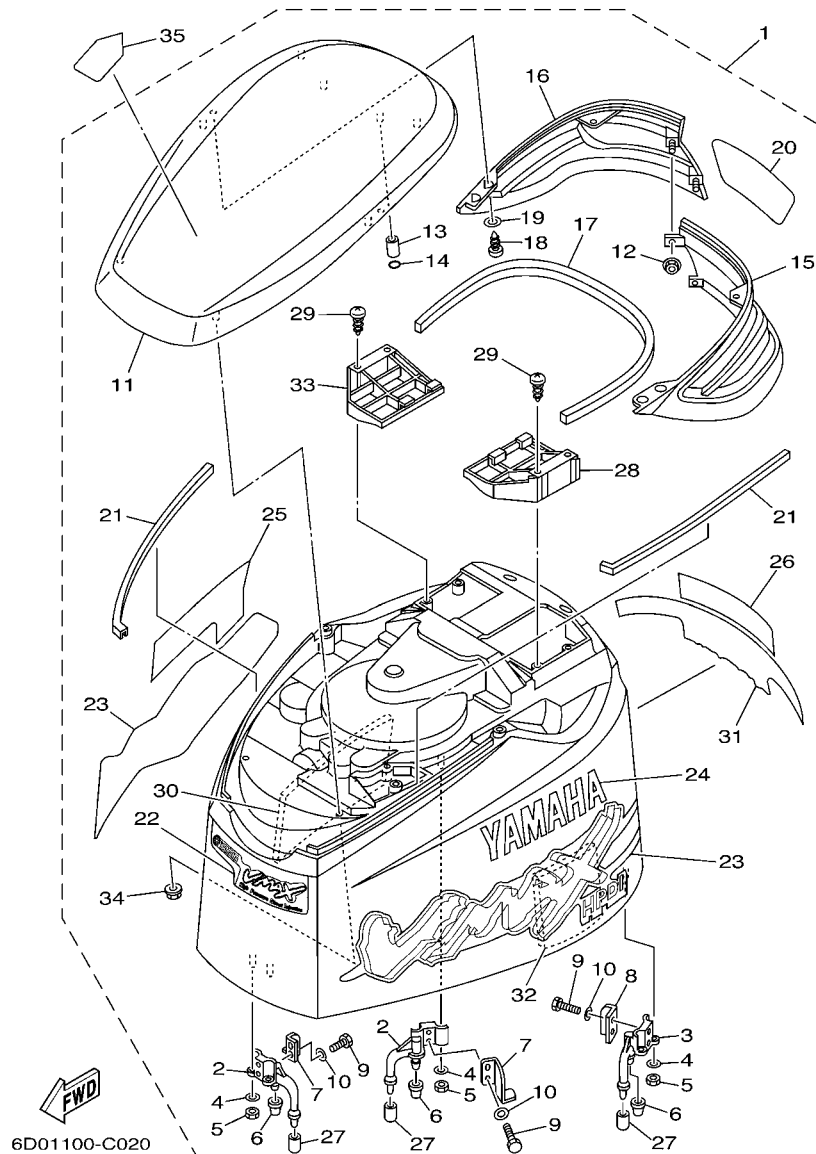


FIG. 2 TOP COWLING 2

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6C9-42610-00-NA	TOP COWLING ASSY	1	1			VMAX-FOR OCE
2	68F-42647-01-94	.HOLDER, CLAMP BAND	2	2			
3	68F-42648-01-94	.HOLDER, CLAMP BAND	1	1			
4	92990-06100	.WASHER, SPRING	6	6			
5	95380-06600	.NUT, HEXAGON	6	6			
6	68F-42663-00	.DAMPER	3	3			
7	60V-42651-01	.HOOK	2	2			
8	60V-42652-00	.HOOK	1	1			
9	97095-06016	.BOLT	6	6			
10	92995-06600	.WASHER	6	6			
11	60X-42613-00-NA	.MOLDING, AIR DUCT	1	1			
12	90179-06M24	.NUT	2	2			
13	90387-06011	.COLLAR	2	2			
14	93210-06270	.O-RING	2	2			
15	60X-42636-00-NA	.LOUVER 2	1	1			
16	60X-42636-10-NA	.LOUVER 2	1	1			
17	60X-42662-00	.DAMPER	1	1			
18	97780-50616	.SCREW, TAPPING	4	4			
19	92990-05200	.WASHER, PLAIN	4	4			
20	6C9-42687-00	.EMBLEM, REAR	1	1			
21	60V-42662-00	.DAMPER	2	2			
22	6C9-42677-00	.GRAPHIC, FRONT	1	1			
23	6C9-W0070-00	.GRAPHIC SET	1	1			
24	6C9-42681-00	.MARK, COWLING	1	1			
25	6C9-42682-00	.MARK, COWLING	1	1			
26	6C9-42678-00	.GRAPHIC, REAR	1	1			
27	67F-13448-00	.CAP	3	3			

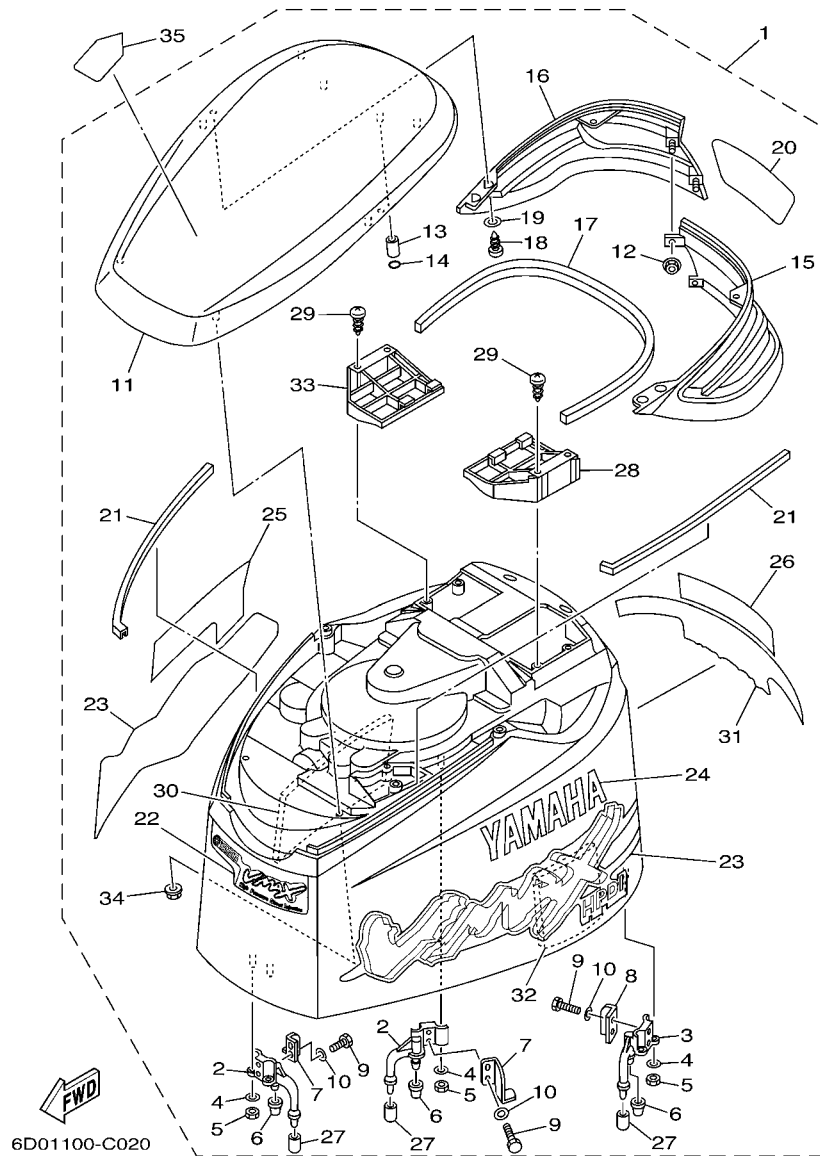


FIG. 2 TOP COWLING 2

[illegible]

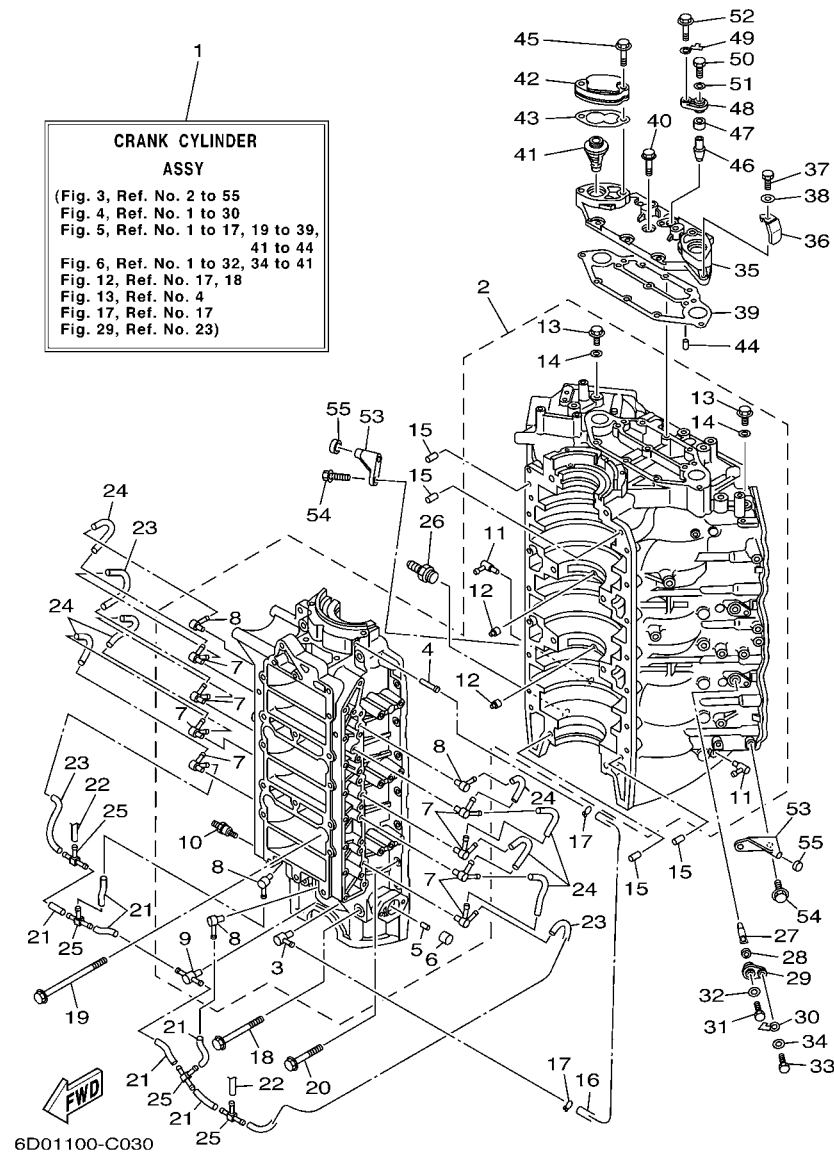


FIG. 3 CYLINDER & CRANKCASE 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11				REMARKS
1	6D0-W0090-10-1S	CRANK CYLINDER ASSY	1	1				
2	6D0-15100-00-1S	CRANKCASE ASSY	1	1				
3	6E5-11372-01	.NIPPLE, HOSE	1	1				
4	624-14485-00	.PIPE, JOINT	1	1				
5	90384-06M07	.BUSH, BIMETAL FORMED	1	1				
6	90383-16M01	.BUSH, FORMED	1	1				
7	60V-11370-00	.CHECK VALVE ASSY	8	8				
8	650-11370-01	.CHECK VALVE ASSY	4	4				
9	60V-11370-10	.CHECK VALVE ASSY	1	1				
10	90116-08012	.BOLT, STUD	1	1				
11	6D0-11372-00	.NIPPLE, HOSE	2	2				
12	663-11518-01	.LOCK, BEARING	2	2				
13	90340-14M00	.PLUG, STRAIGHT SCREW	2	2				
14	90430-14115	.GASKET	2	2				
15	93608-12063	PIN, DOWEL	4	4				
16	90445-07M10	HOSE (L510)	1	1				
17	90468-07M02	CLIP	2	2				
18	97513-10590	BOLT, WITH WASHER	4	4				
19	90119-10M11	BOLT, WITH WASHER	4	4				
20	90119-06089	BOLT, WITH WASHER	14	14				
21	90445-07M03	HOSE (L34)	6	6				
22	90445-07016	HOSE (L60)	2	2				
23	90445-07M29	HOSE (L135)	3	3				
24	90445-07MA6	HOSE (L90)	7	7				
25	6E0-24378-00	PIPE, JOINT 4	4	4				
26	6G5-12581-00	JOINT, HOSE 1	1	1				
27	60V-11325-01	ANODE	3	3				

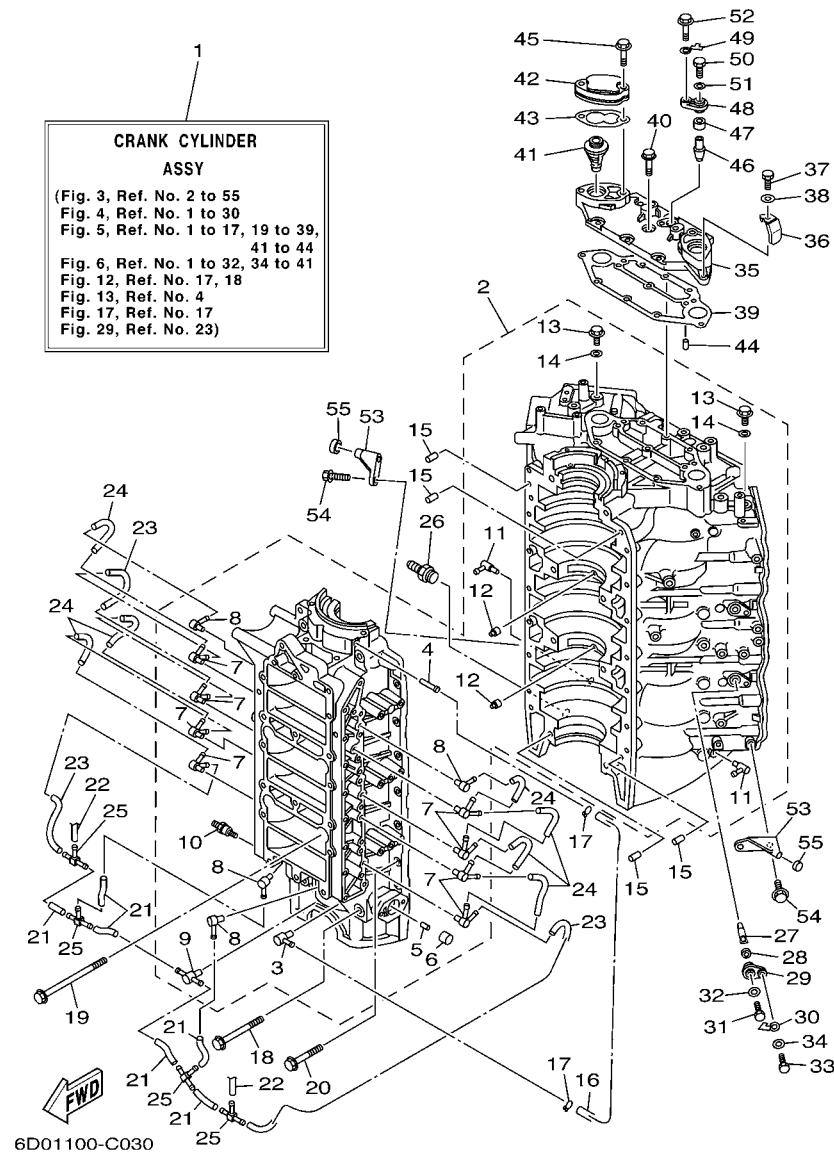


FIG. 3 CYLINDER & CRANKCASE 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
28	66M-11328-00	GROMMET, ANODE	3	3			
29	66M-11327-00-94	COVER, ANODE	3	3			
30	66M-12535-00	PLATE	3	3			
31	97095-05012	BOLT	3	3			
32	92995-05600	WASHER	3	3			
33	97013-06020	BOLT	3	3			
34	92903-06600	WASHER, PLATE	3	3			
35	60V-11371-00-94	COVER	1	1			
36	60V-24135-00	CLAMP 1	1	1			
37	97013-05012	BOLT	1	1			
38	92903-05600	WASHER, PLATE	1	1			
39	60V-11381-00	GASKET 1	1	1			
40	90119-06MA2	BOLT, WITH WASHER	7	7			
41	60V-12411-00	THERMOSTAT	2	2			
42	60V-12413-00-1S	COVER, THERMOSTAT	2	2			
43	60V-12414-A0	GASKET, COVER	2	2			
44	99480-06012	PIN	2	2			
45	90119-06055	BOLT, WITH WASHER	4	4			
46	66M-11325-00	ANODE	1	1			
47	66M-11328-00	GROMMET, ANODE	1	1			
48	66M-11327-00-94	COVER, ANODE	1	1			
49	66M-12535-00	PLATE	1	1			
50	97095-05012	BOLT	1	1			
51	92995-05600	WASHER	1	1			
52	90119-06MA2	BOLT, WITH WASHER	1	1			
53	6E5-42761-00-1S	STOPPER	2	2			
54	90119-06MA2	BOLT, WITH WASHER	4	4			

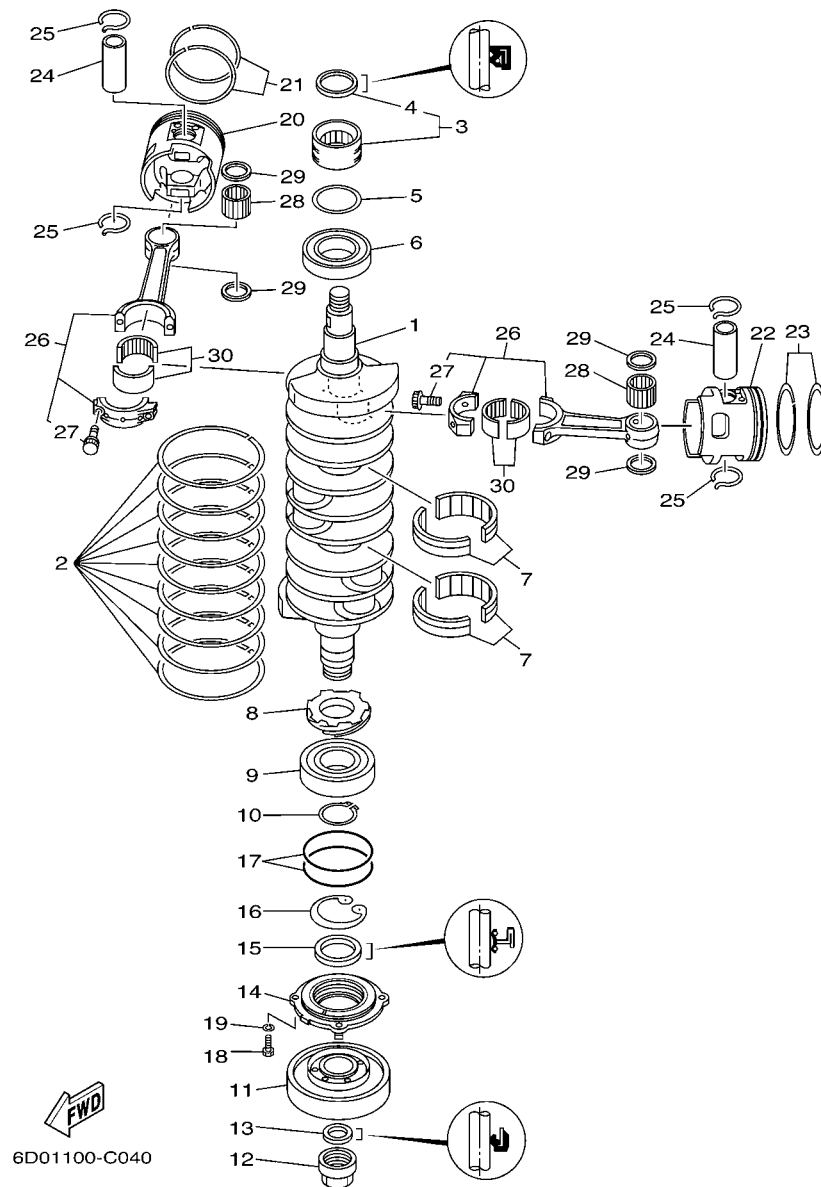


FIG. 4 CRANKSHAFT & PISTON

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6D0-11411-00	CRANKSHAFT	1	1			
2	61A-11447-00	SEAL, CRANK	9	9			
3	93311-940V0	BEARING	1	1			
4	93102-40M38	.OIL SEAL	1	1			
5	60V-11479-00	GASKET	1	1			
6	93306-209U1	BEARING	1	1			
7	93310-959U0	BEARING	2	2			
8	61A-11536-00	GEAR, DRIVE	1	1			
9	93306-308U0	BEARING	1	1			
10	93410-40M03	CIRCLIP	1	1			
11	61A-11586-01	PULLEY, CRANKSHAFT BALANCE	1	1			
12	60V-11555-00	NUT, CRANKSHAFT 1	1	1			
13	93104-22M07	OIL SEAL	1	1			
14	6D0-15359-00-94	HOUSING, OIL SEAL	1	1			
15	93103-40011	OIL SEAL	1	1			
16	93420-61M07	CIRCLIP	1	1			
17	93210-85M32	O-RING	2	2			
18	97095-06020	BOLT	4	4			
19	92995-06100	WASHER, SPRING	4	4			
20	6D0-11631-00-85	PISTON (STD)	3	3			
	6D0-11635-00	PISTON (0.25MM O/S)	3	3			AP
	6D0-11636-00	PISTON (0.50MM O/S)	3	3			AP
21	6D0-11603-00	PISTON RING SET (STD)	3	3			
	6D0-11604-00	PISTON RING SET (0.25MM O/S)	3	3			AP
	6D0-11605-00	PISTON RING SET (0.50MM O/S)	3	3			AP
22	6D0-11642-00-85	PISTON 2 (STD)	3	3			
	6D0-11645-00	PISTON 2 (0.25MM O/S)	3	3			AP

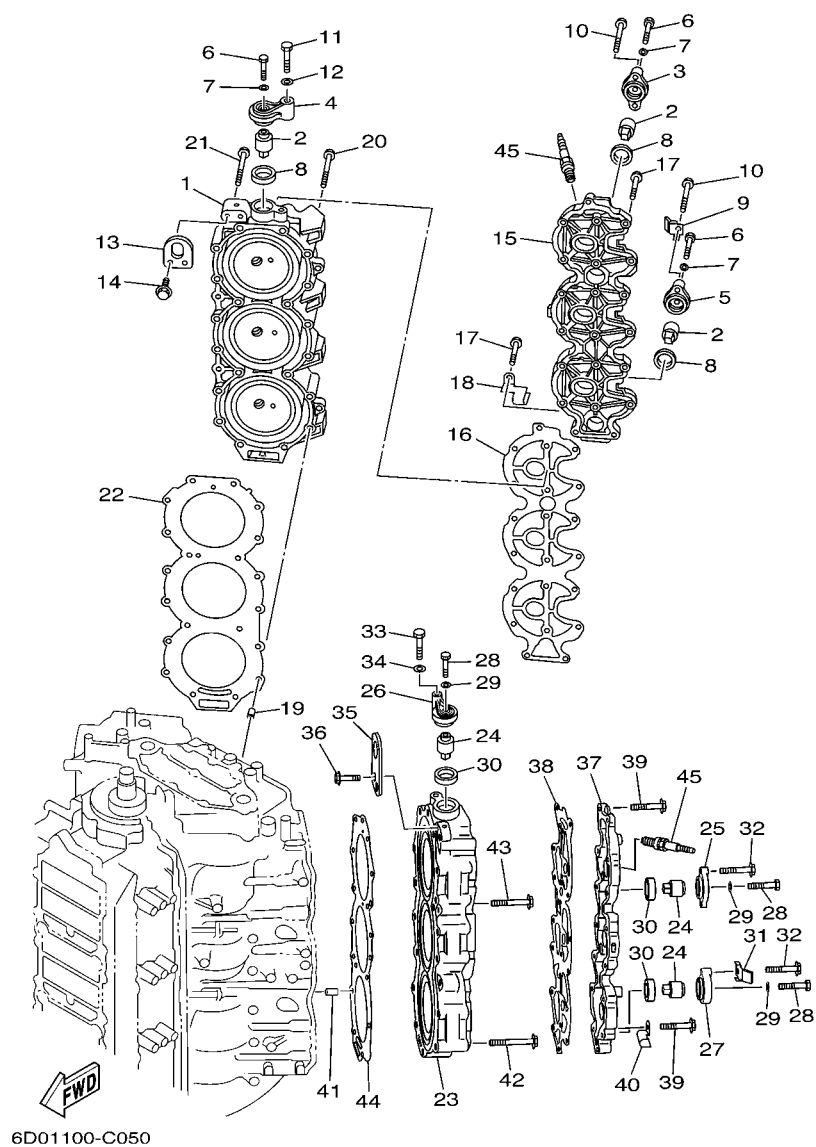


FIG. 5 CYLINDER & CRANKCASE 2

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11				REMARKS
1	6D0-11111-00-1S	HEAD, CYLINDER 1	1	1				
2	67F-11325-00	ANODE	3	3				
3	67F-11327-00-94	COVER, ANODE	1	1				
4	69J-11327-00-94	COVER, ANODE	1	1				
5	60V-11327-00-94	COVER, ANODE	1	1				
6	97075-06020	BOLT	3	3				
7	92995-06600	WASHER	3	3				
8	67F-11328-00	GROMMET, ANODE	3	3				
9	60V-12535-00	PLATE	1	1				
10	97575-08550	BOLT, WITH WASHER	3	3				
11	97075-08035	BOLT	1	1				
12	92995-08600	WASHER	1	1				
13	68F-11119-00	HANGER, ENGINE	1	1				
14	90119-06MA2	BOLT, WITH WASHER	2	2				
15	60V-11191-00-1S	COVER, CYLINDER HEAD 1	1	1				
16	60V-11193-00	GASKET, HEAD COVER 1	1	1				
17	90119-06MA4	BOLT, WITH WASHER	18	18				
18	68F-83919-00	CLAMP, HARNESS	1	1				
19	99590-10114	PIN, DOWEL	2	2				
20	90119-08MA5	BOLT, WITH WASHER	18	18				
21	90119-08MA8	BOLT, WITH WASHER	2	2				
22	6D0-11181-00	GASKET, CYLINDER HEAD 1	1	1				
23	6D0-11121-00-1S	HEAD, CYLINDER 2	1	1				
24	67F-11325-00	ANODE	3	3				
25	67F-11327-00-94	COVER, ANODE	1	1				
26	69J-11327-00-94	COVER, ANODE	1	1				
27	60V-11327-00-94	COVER, ANODE	1	1				

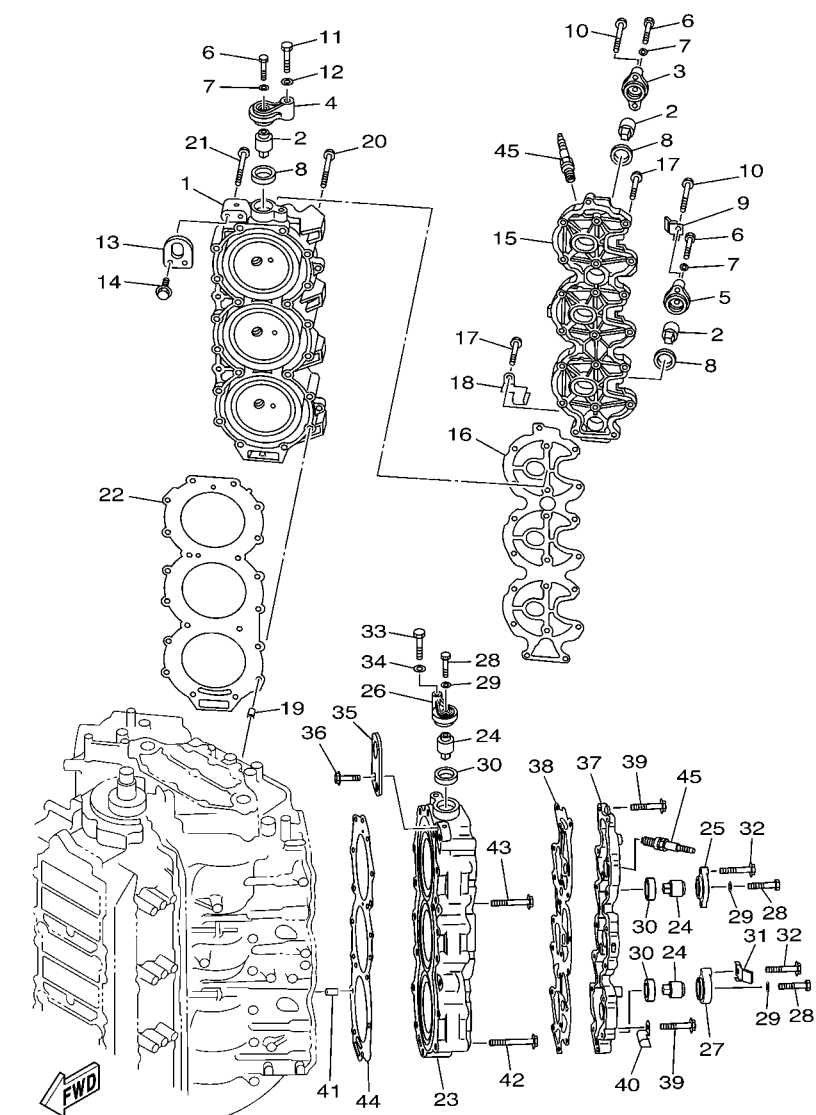


FIG. 5 CYLINDER & CRANKCASE 2

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
28	97075-06020	BOLT	3	3			
29	92995-06600	WASHER	3	3			
30	67F-11328-00	GROMMET, ANODE	3	3			
31	60V-12535-00	PLATE	1	1			
32	97575-08550	BOLT, WITH WASHER	3	3			
33	97075-08035	BOLT	1	1			
34	92995-08600	WASHER	1	1			
35	69J-1111E-00	HANGER, ENGINE 2	1	1			
36	90119-06MA2	BOLT, WITH WASHER	2	2			
37	60V-11192-00-1S	COVER, CYLINDER HEAD 2	1	1			
38	60V-11193-00	GASKET, HEAD COVER 1	1	1			
39	90119-06MA4	BOLT, WITH WASHER	18	18			
40	68F-83919-00	CLAMP, HARNESS	1	1			
41	99590-10114	PIN, DOWEL	2	2			
42	90119-08MA5	BOLT, WITH WASHER	18	18			
43	90119-08MA8	BOLT, WITH WASHER	2	2			
44	6D0-11181-00	GASKET, CYLINDER HEAD 1	1	1			
45	94702-00404	PLUG, SPARK (NGK BKR7EKU)	6	6			


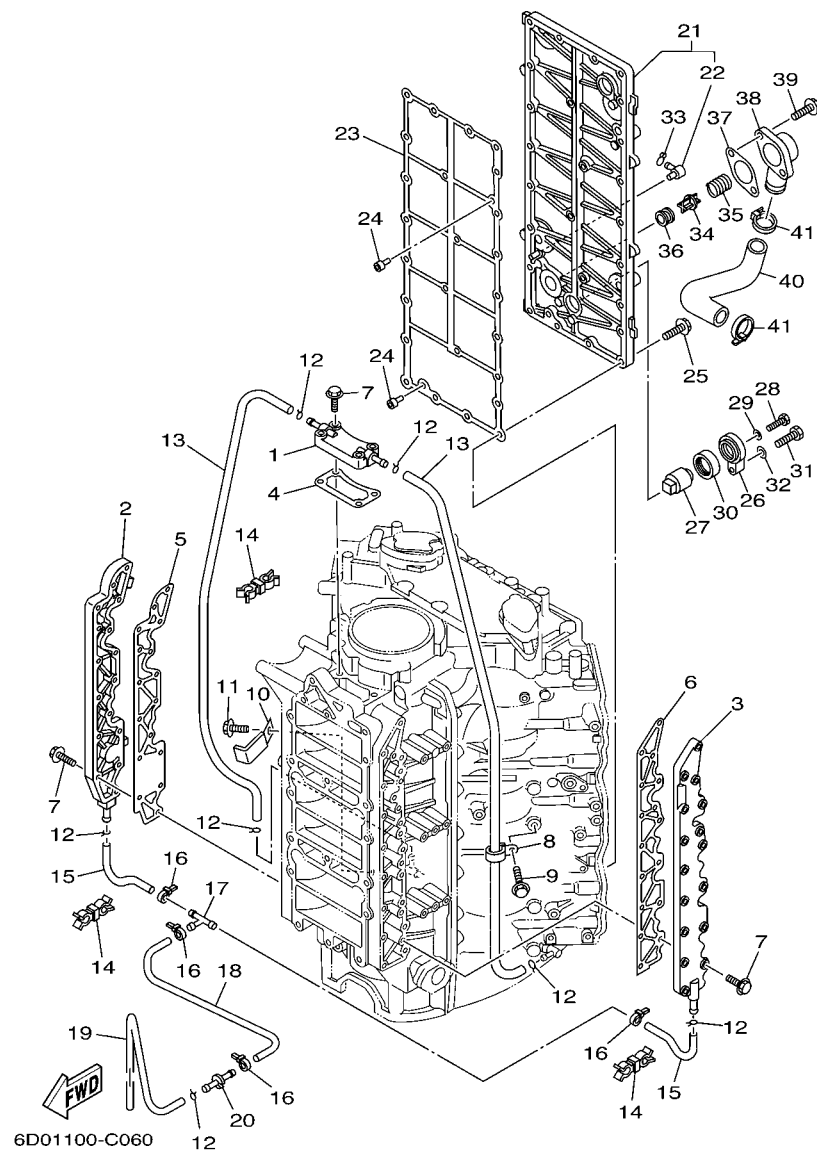


FIG. 6 CYLINDER & CRANKCASE 3

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11				REMARKS
1	6D0-15411-00-1S	COVER, CRANKCASE 1	1	1				
2	6D0-15421-00-1S	COVER, CRANKCASE 2	1	1				
3	6D0-15431-00-1S	COVER, CRANKCASE 3	1	1				
4	6D0-15451-00	GASKET, CRANKCASE COVER 1	1	1				
5	6D0-15461-00	GASKET, CRANKCASE COVER 2	1	1				
6	6D0-15462-00	GASKET, CRANKCASE COVER 3	1	1				
7	90119-06MA3	BOLT, WITH WASHER	36	36				
8	90465-06M88	CLAMP	1	1				
9	97595-06510	BOLT, WITH WASHER	1	1				
10	90465-08M23	CLAMP	1	1				
11	97595-06510	BOLT, WITH WASHER	1	1				
12	90467-08M10	CLIP	7	7				
13	90445-09M30	HOSE (L630)	2	2				
14	90464-07008	CLAMP	3	3				
15	90445-09068	HOSE (L110)	2	2				
16	90465-11M10	CLAMP	4	4				
17	688-24378-00	PIPE, JOINT 4	1	1				
18	90445-09221	HOSE (L205)	1	1				
19	90445-09022	HOSE	1	1				
20	8H8-24376-00	PIPE, JOINT 1	1	1				
21	60V-41113-00-94	OUTER COVER, EXHAUST	1	1				
22	676-11372-00	NIPPLE, HOSE	1	1				
23	60V-41112-00	GASKET, EXHAUST INNER COVER	1	1				
24	60V-41267-00	BUSHING, JOINT	2	2				
25	90119-06MA3	BOLT, WITH WASHER	25	25				
26	60V-11327-00-94	COVER, ANODE	1	1				
27	67F-11325-00	ANODE	1	1				

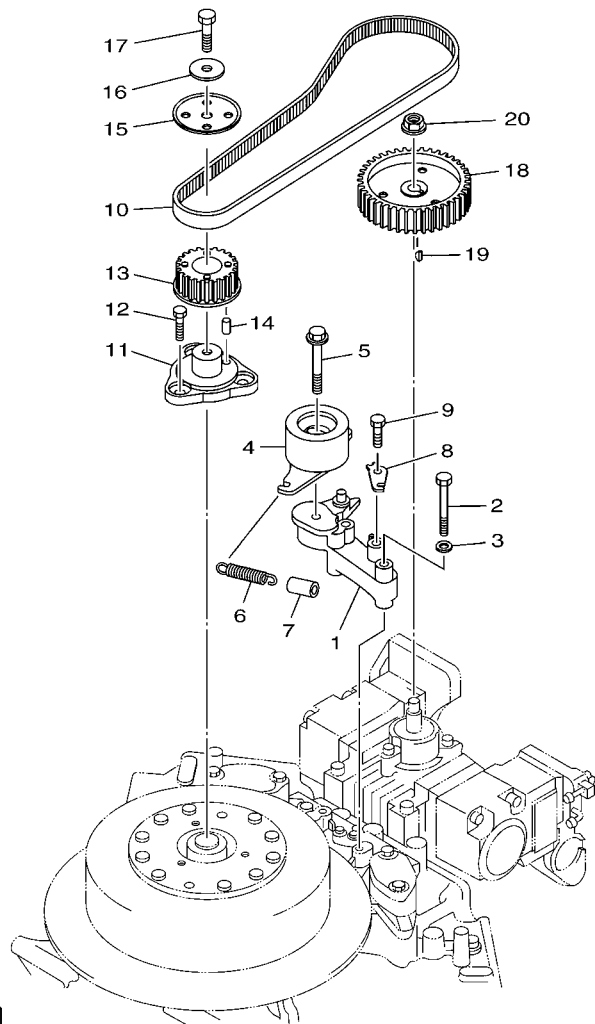

60V2100-C060

FIG. 7 FUEL PUMP DRIVE GEAR

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11				REMARKS
1	60V-11598-00-94	BRACKET, TENSIONER	1	1				
2	97013-08055	BOLT	2	2				
3	92903-08600	WASHER, PLATE	2	2				
4	60V-11590-00	TENSIONER ASSY	1	1				
5	90119-10M72	BOLT, WITH WASHER	1	1				
6	6D0-12113-00	SPRING, VALVE INNER	1	1				
7	90445-15002	HOSE	1	1				
8	60V-11595-00	PLATE, VALVE	1	1				
9	97013-08012	BOLT	1	1				
10	60V-46241-00	V-BELT	1	1				
11	68F-11579-01-94	COUPLING, FLYWHEEL	1	1				
12	97013-08012	BOLT	3	3				
13	68F-11536-00-94	GEAR, DRIVE	1	1				
14	93605-10108	PIN, DOWEL	1	1				
15	60V-11557-00	WASHER 1	1	1				
16	90201-08M00	WASHER, PLATE	1	1				
17	97095-08025	BOLT	1	1				
18	68F-11537-00-94	GEAR, DRIVEN	1	1				
19	90280-03M01	KEY, WOODRUFF	1	1				
20	95707-08600	NUT, FLANGE	1	1				

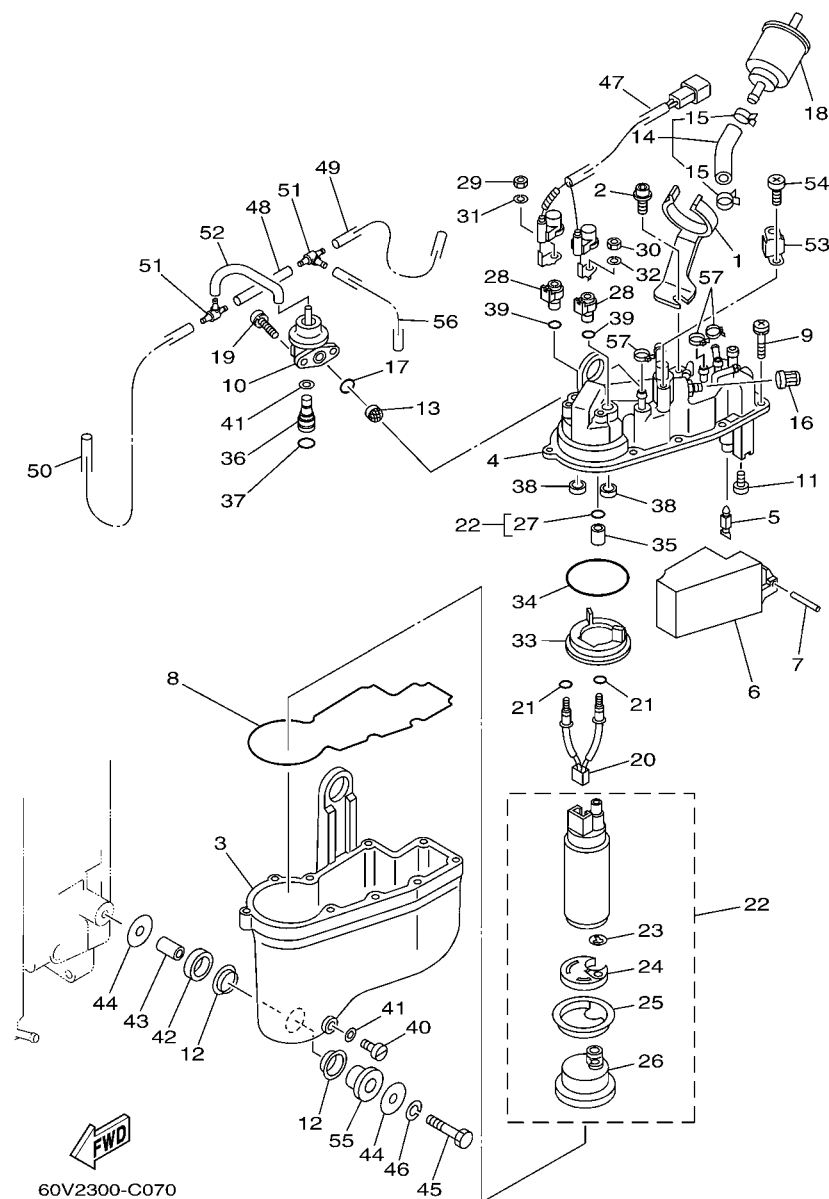


FIG. 8 VAPOR SEPARATOR 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	60V-24216-00	STAY	1	1			
2	6D0-24473-00	SCREW	1	1			
3	60V-14980-00	BODY, FLOAT CHAMBER	1	1			
4	60V-14182-01	COVER, FLOAT CHAMBER	1	1			
5	65L-14546-00	VALVE, NEEDLE	1	1			
6	66K-14985-00	FLOAT	1	1			
7	66K-14548-01	PIN, FLOAT ARM	1	1			
8	66K-14984-00	GASKET, FLOAT CHAMBER	1	1			
9	65L-14125-00	SCREW	10	10			
10	68F-13906-00	REGULATOR, PRESSURE	1	1			
11	66K-14325-01	SCREW, PAN HEAD	2	2			
12	60V-14163-00	SPACER	6	6			
13	65L-13905-00	FILTER COMP	1	1			
14	68F-13971-00	PIPE, FUEL 1	1	1			
15	65L-24387-00	.CLIP	2	2			
16	65L-14966-00	CAP	1	1			
17	65L-24486-00	O-RING	1	1			
18	60V-24251-00	STRAINER 1	1	1			
19	66K-14245-00	SCREW, GUIDE	2	2			
20	68F-82509-00	WIRE, SUB LEAD	1	1			
21	65L-14227-00	O-RING	2	2			
22	60V-13907-00	FUEL PUMP COMP.	1	1			
23	65L-14159-00	.CLIP	1	1			
24	68F-13781-00	.DAMPER, PUMP	1	1			
25	68F-13844-00	.PLATE 2	1	1			
26	68F-13915-00	.FILTER	1	1			
27	65L-1416A-00	.O-RING	1	1			


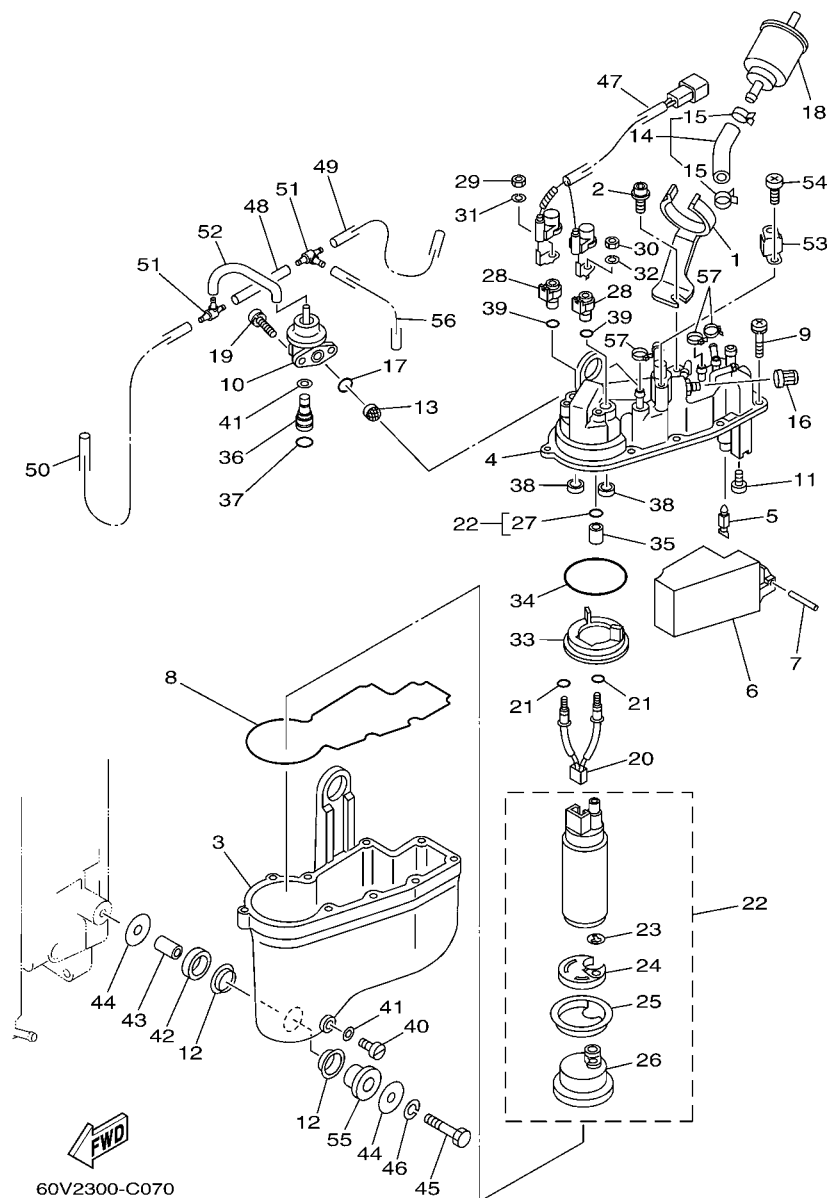


FIG. 8 VAPOR SEPARATOR 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11				REMARKS
28	66K-14271-00	INSULATOR	2	2				
29	65L-8182A-00	NUT	1	1				
30	65L-8182K-00	NUT	1	1				
31	65L-8182E-00	WASHER	1	1				
32	65L-8182F-00	WASHER	1	1				
33	68F-13843-00	PLATE 1	1	1				
34	65L-14147-00	O-RING	1	1				
35	68F-14274-00	CONNECTOR	1	1				
36	66K-24376-00	PIPE, JOINT 1	1	1				
37	66K-24489-00	O-RING	1	1				
38	68F-14271-00	INSULATOR	2	2				
39	65L-14397-00	O-RING	2	2				
40	65L-14992-00	ROD	1	1				
41	65L-14997-00	SEAL	2	2				
42	60V-24375-01	GROMMET	3	3				
43	60V-24397-01	COLLAR	3	3				
44	66K-24579-00	WASHER 2	6	6				
45	65L-24592-00	BOLT	3	3				
46	65L-24169-00	WASHER, LOCK	3	3				
47	60V-82507-00	WIRE, LEAD	1	1				
48	66K-13542-00	HOSE, VACUUM SENSING 1	1	1				
49	66K-13544-00	HOSE, VACUUM SENSING 2	1	1				
50	66K-13532-00	HOSE, VACUUM SENSING 3	1	1				
51	65L-24461-00	PIPE, JOINT	2	2				
52	66K-13533-00	HOSE, VACUUM SENSING 4	1	1				
53	65L-13898-00	HOLDER	1	1				
54	65L-14565-00	SCREW	1	1				

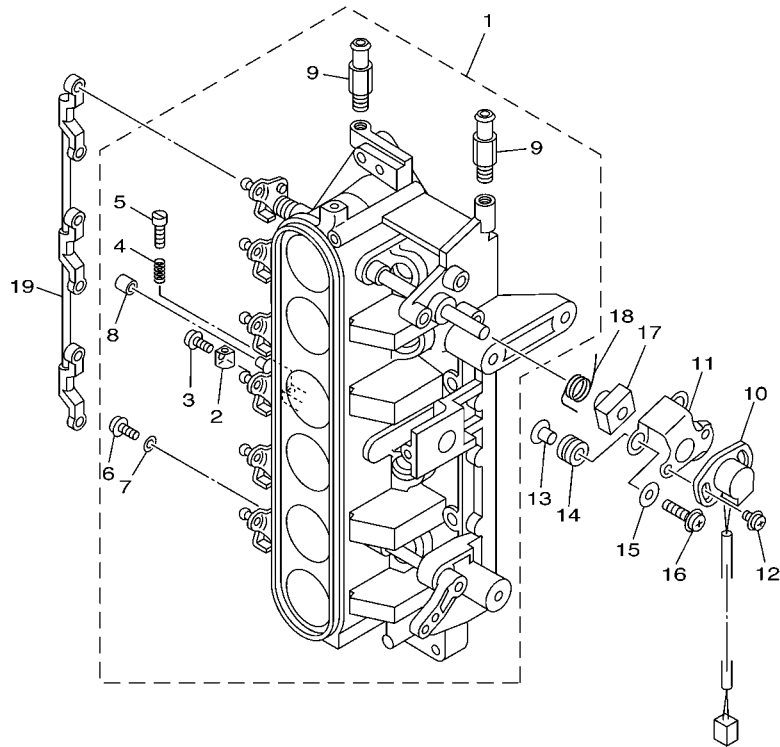

60V1010-3080

FIG. 9 VAPOR SEPARATOR 2

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6D0-13751-00	BODY, THROTTLE 1	1	1			
2	65L-14527-00	.PLATE	1	1			
3	65L-14565-00	.SCREW	1	1			
4	65L-14334-00	.SPRING, AIR ADJUSTING	1	1			
5	65L-14523-00	.SCREW, STOP	1	1			
6	6K5-14592-00	.SCREW	6	6			
7	90201-05552	.WASHER, PLATE	6	6			
8	65L-14578-00	.COLLAR	1	1			
9	68F-13568-00	.STUD	2	2			
10	61A-85885-00	THROTTLE SENSOR ASSY	1	1			
11	6K7-85886-01	BRACKET	1	1			
12	97985-05212	SCREW, WITH WASHER	2	2			
13	90387-05M00	COLLAR	3	3			
14	60V-85516-00	SPACER	3	3			
15	60V-14596-00	WASHER	3	3			
16	97985-05330	SCREW, WITH WASHER	3	3			
17	65L-14573-00	LEVER	1	1			
18	65L-14579-00	SPRING	1	1			
19	65L-41217-00	ROD, ACCEL. LEVER	1	1			

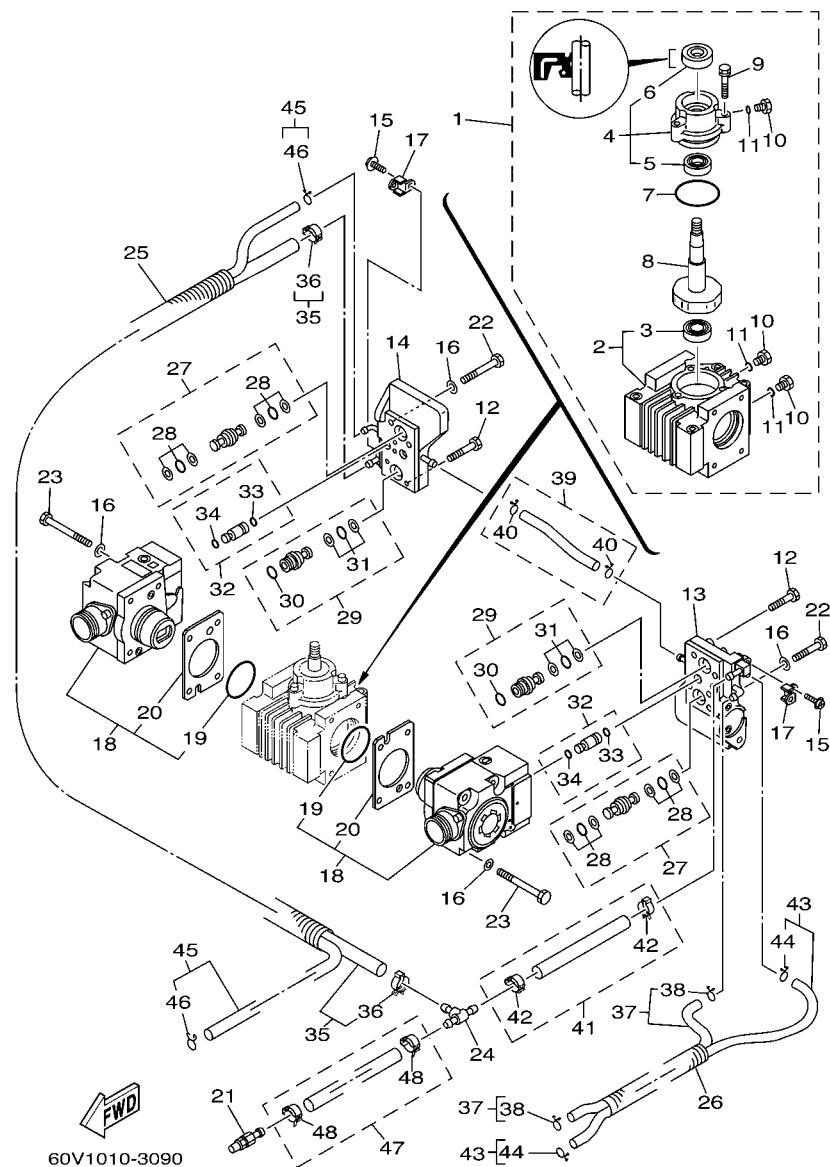


FIG. 10 FUEL INJECTION PUMP

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	60V-12170-00	CAMSHAFT ASSY 1	1	1			
2	60V-12424-00	.PLATE, CARTRIDGE INNER	1	1			
3	93306-00001	..BEARING	1	1			
4	68F-12173-00	.CAP, CAMSHAFT 1	1	1			
5	93306-001U0	..BEARING	1	1			
6	68F-12223-00	..SEAL	1	1			
7	68F-12439-00	.O-RING	1	1			
8	60V-12171-00	.CAMSHAFT 1	1	1			
9	68F-12228-00	.BOLT	3	3			
10	68F-13455-00	.PLUG	3	3			
11	68F-13473-00	.O-RING	3	3			
12	68F-12228-00	BOLT	4	4			
13	60V-13993-00	COVER, CONTROL RACK	1	1			
14	60W-13993-00	COVER, CONTROL RACK	1	1			
15	65L-14565-00	SCREW	2	2			
16	68F-24579-00	WASHER 2	12	12			
17	60V-13854-00	PLATE 4	2	2			
18	60V-13910-00	FUEL PUMP ASSY	2	2			
19	60V-14005-00	.RING, SEAL	1	1			
20	60V-14126-00	.GASKET	1	1			
21	68F-24300-00	FUEL PIPE JOINT	1	1			
22	60V-24178-00	BOLT 3	4	4			
23	60V-24176-00	BOLT 1	8	8			
24	60V-24378-00	PIPE, JOINT 4	1	1			
25	60V-24864-00	TUBE	1	1			
26	60V-2510T-00	TUBE	1	1			
27	68F-13815-00	JOINT 1	2	2			

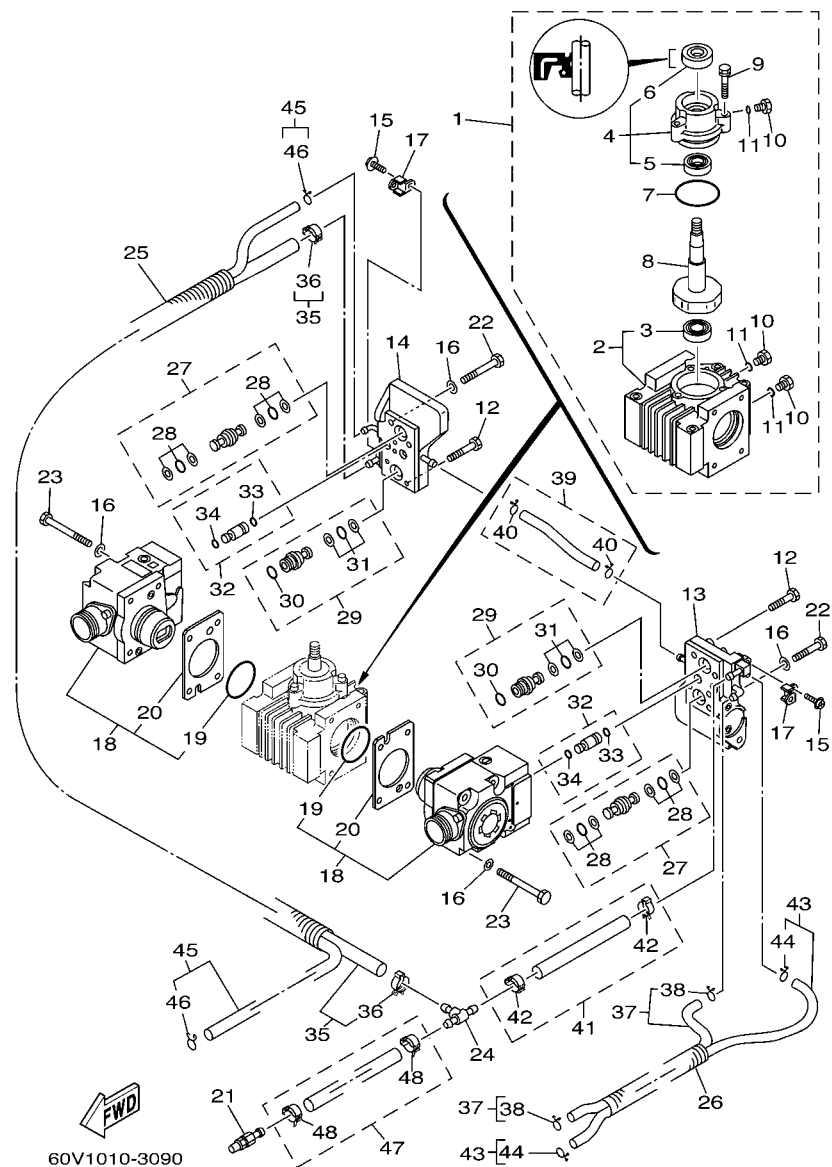


FIG. 10 FUEL INJECTION PUMP

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
28	68F-2466A-00	.PACKING KIT	2	2			
29	60V-13816-00	JOINT 2	2	2			
30	68F-24486-00	.O-RING	1	1			
31	68F-2466A-00	.PACKING KIT	1	1			
32	60V-13505-00	JOINT, PUMP	4	4			
33	68F-13473-00	.O-RING	1	1			
34	60V-13473-00	.O-RING	1	1			
35	60V-14148-00	PIPE	1	1			
36	65L-24387-00	.CLIP	2	2			
37	60V-24312-00	PIPE 2	1	1			
38	68F-24356-00	.CLIP, PIPE 1	2	2			
39	60V-24313-00	PIPE 3	1	1			
40	68F-24356-00	.CLIP, PIPE 1	2	2			
41	60V-14149-00	PIPE	1	1			
42	65L-24387-00	.CLIP	2	2			
43	60V-24314-00	PIPE 4	1	1			
44	68F-24356-00	.CLIP, PIPE 1	2	2			
45	60V-24315-00	PIPE 5	1	1			
46	68F-24356-00	.CLIP, PIPE 1	2	2			
47	60V-13972-00	PIPE, FUEL 2	1	1			
48	65L-24387-00	.CLIP	2	2			

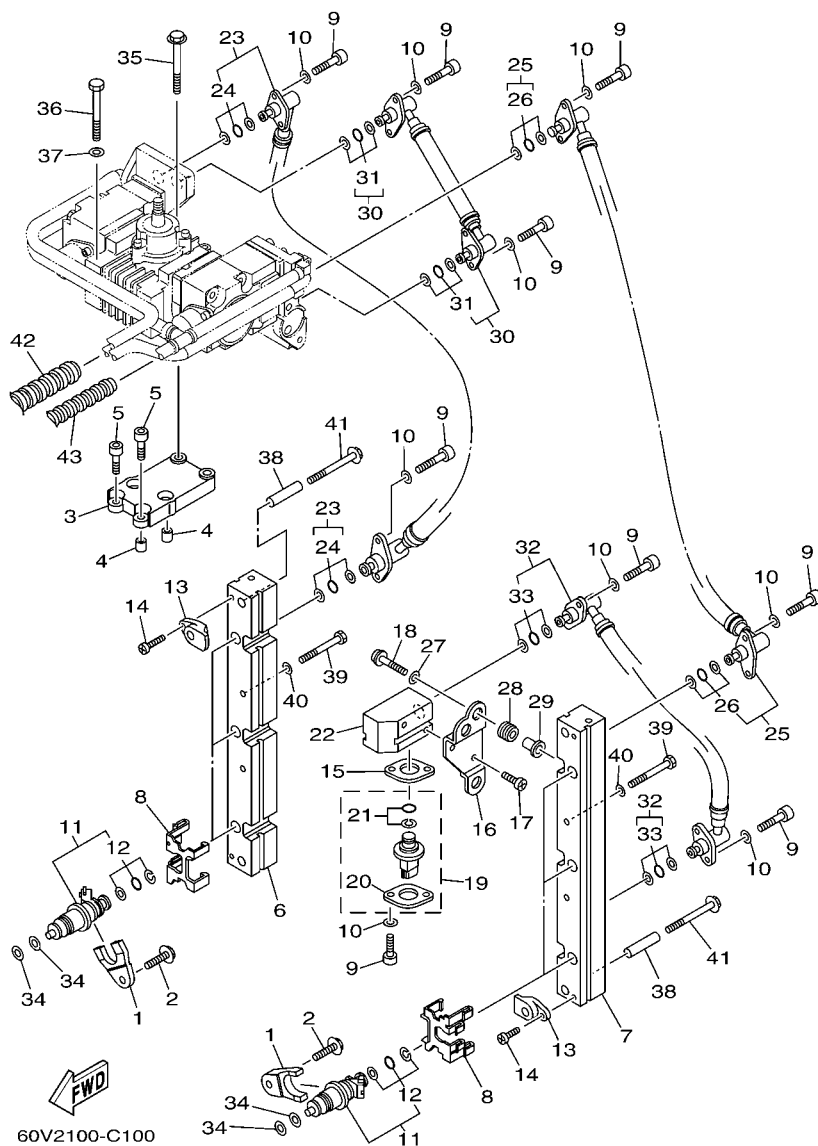


FIG. 11 FUEL INJECTION NOZZLE

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	68F-13767-00	CAP, INJECTOR	6	6			
2	90119-08M60	BOLT, WITH WASHER	6	6			
3	60V-13782-00	STAY	1	1			
4	90387-08M31	COLLAR	2	2			
5	90110-08M04	BOLT, HEXAGON SOCKET HEAD	4	4			
6	60V-13161-00	PIPE, DELIVERY 1	1	1			
7	60V-13171-00	PIPE, DELIVERY 2	1	1			
8	60V-13898-00	HOLDER	6	6			
9	68F-24551-00	BOLT, JOINT	18	18			
10	68F-24576-00	WASHER	18	18			
11	60V-13761-00	INJECTOR ASSY	6	6			
12	68F-1410B-00	.PACKING KIT	1	1			
13	60V-14264-00	COLLAR	4	4			
14	65L-14565-00	SCREW	4	4			
15	60V-82389-00	PLATE 2	1	1			
16	60V-82398-00	PLATE 3	1	1			
17	60V-81545-00	SCREW 1	2	2			
18	60V-81546-00	SCREW 2	3	3			
19	60V-82380-00	SENSOR, PRESSURE	1	1			
20	68F-82388-00	.PLATE	1	1			
21	68F-82384-00	.PACKING KIT	1	1			
22	60V-13938-00	PIPE	1	1			
23	60V-13973-00	PIPE, FUEL 3	1	1			
24	68F-2466A-00	.PACKING KIT	2	2			
25	60V-13974-00	PIPE, FUEL 4	1	1			
26	68F-2466A-00	.PACKING KIT	2	2			
27	65L-14596-00	WASHER	3	3			

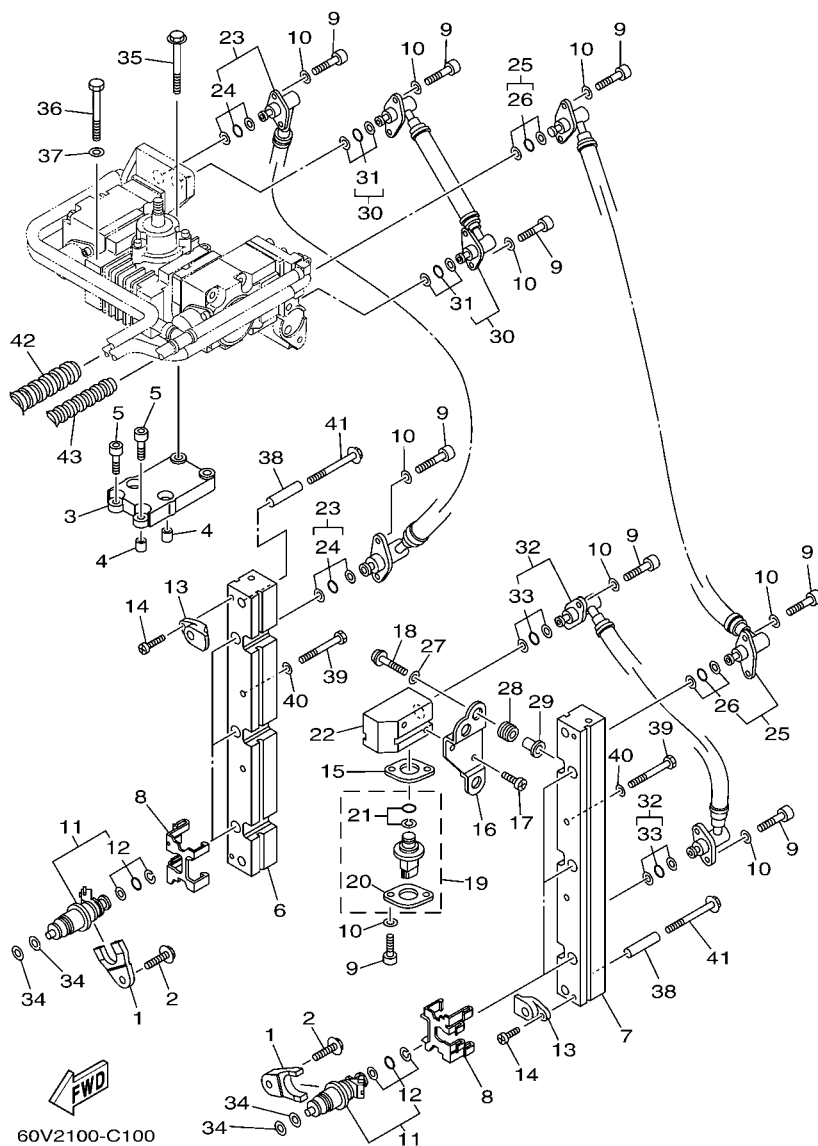


FIG. 11 FUEL INJECTION NOZZLE

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
28	90480-10M23	GROMMET	3	3			
29	90387-05M00	COLLAR	3	3			
30	60V-13975-00	PIPE, FUEL 5	1	1			
31	68F-2466A-00	.PACKING KIT	2	2			
32	60V-13976-00	PIPE, FUEL 6	1	1			
33	68F-2466A-00	.PACKING KIT	2	2			
34	68F-13764-00	GASKET (T=2.2)	12	12			
35	97513-08570	BOLT, WITH WASHER	2	2			
36	97013-08090	BOLT	2	2			
37	92903-08600	WASHER, PLATE	2	2			
38	60V-13716-00	COLLAR	4	4			
39	97013-08055	BOLT	4	4			
40	92903-08600	WASHER, PLATE	4	4			
41	97513-08570	BOLT, WITH WASHER	4	4			
42	90447-22004	HOSE, WITH SPRING	1	1			
43	90447-15001	HOSE, WITH SPRING	1	1			

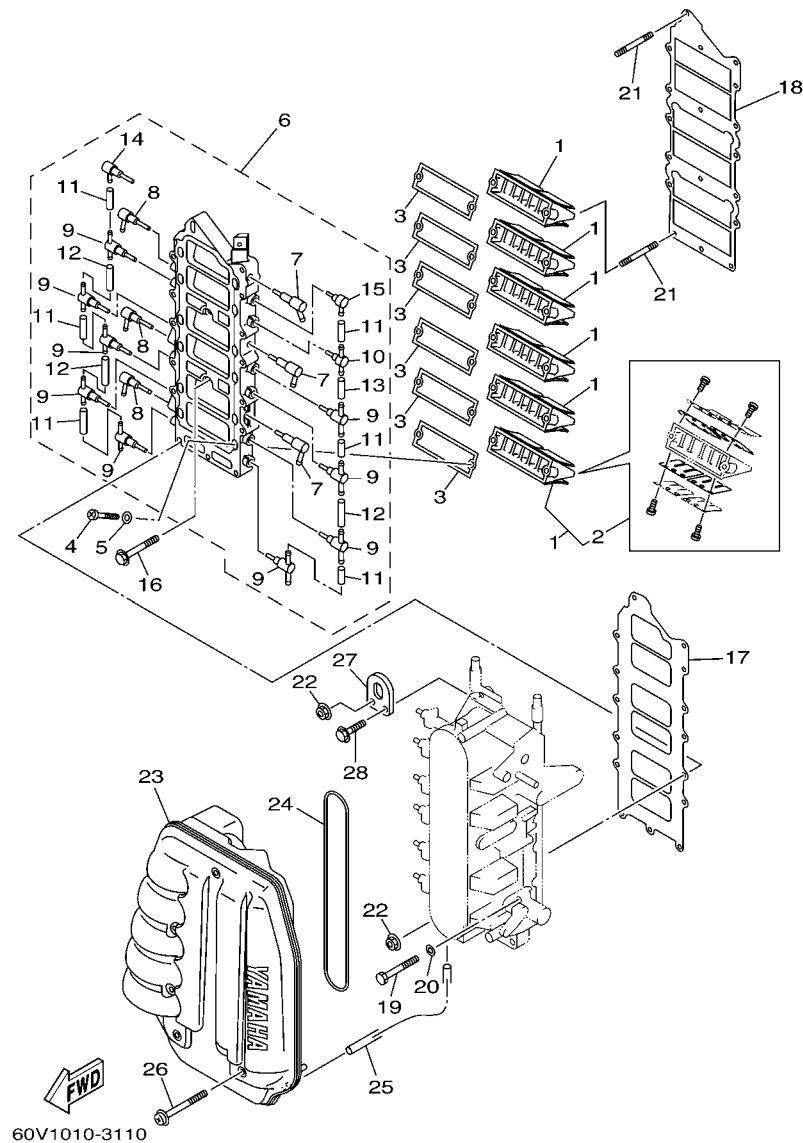


FIG. 12 INTAKE

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6D0-13610-00	REED VALVE ASSY	6	6			
2	60V-W0004-00	.REED SET	1	1			
3	60V-13621-A0	GASKET, VALVE SEAT	6	6			
4	97880-05016	SCREW, PAN HEAD	12	12			
5	92990-05600	WASHER, PLATE	12	12			
6	60V-13624-00-1S	PLATE, REED VALVE	1	1			
7	60V-13552-00	.NOZZLE	3	3			
8	60V-13572-00	.NOZZLE	3	3			
9	60V-11379-00	.VALVE, CHECK	9	9			
10	6F6-11370-01	.CHECK VALVE ASSY	1	1			
11	90445-07M03	.HOSE (L34)	6	6			
12	90445-07016	.HOSE (L60)	3	3			
13	90445-07015	.HOSE (L65)	1	1			
14	60V-11369-00	.VALVE, CHECK	1	1			
15	650-11370-01	.CHECK VALVE ASSY	1	1			
16	90105-06028	BOLT, FLANGE	2	2			
17	60V-13646-00	GASKET, MANIFOLD 2	1	1			
18	60V-13645-00	GASKET, MANIFOLD 1	1	1			
19	97013-06060	BOLT	12	12			
20	92903-06600	WASHER, PLATE	12	12			
21	95670-06660	BOLT, STUD	2	2			
22	90179-06M24	NUT	2	2			
23	60V-14440-00	SILENCER ASSY, INTAKE	1	1			
24	60V-14476-00	SEAL	1	1			
25	90445-07M44	HOSE (L250)	1	1			
26	90159-06M16	SCREW, WITH WASHER	6	6			
27	68F-11119-00	HANGER, ENGINE	1	1			

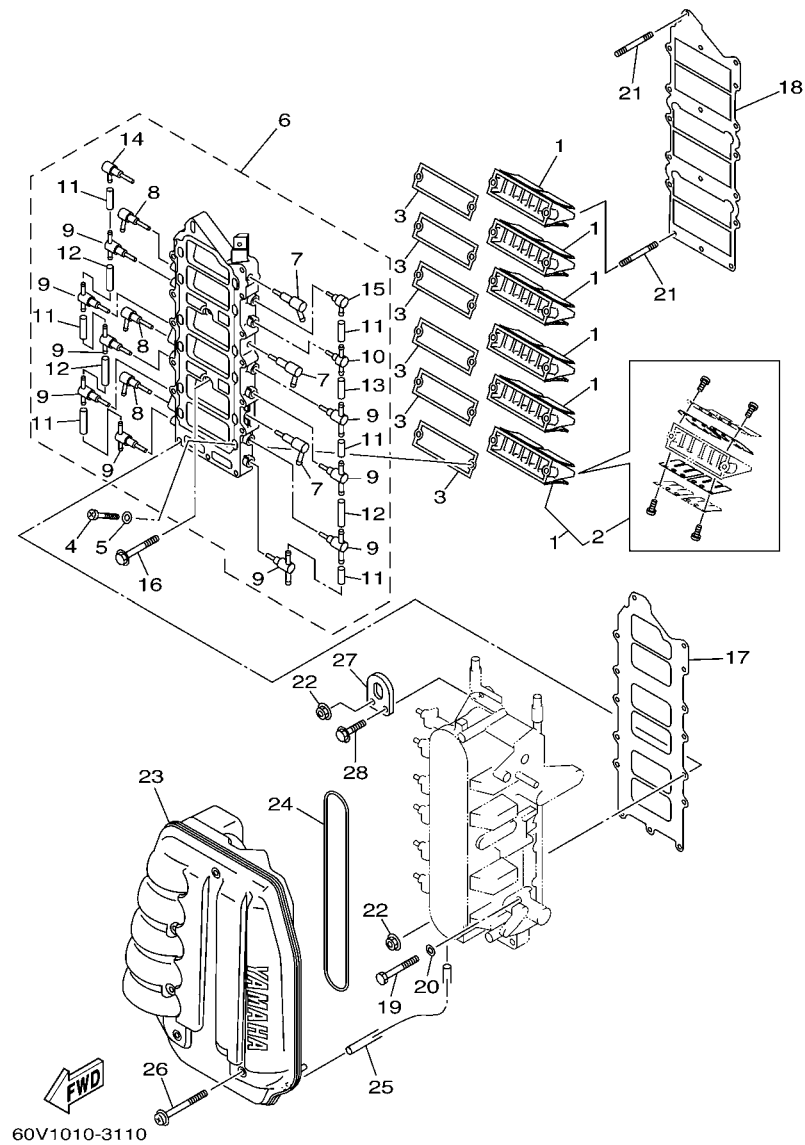


FIG. 12 INTAKE

[illegible]

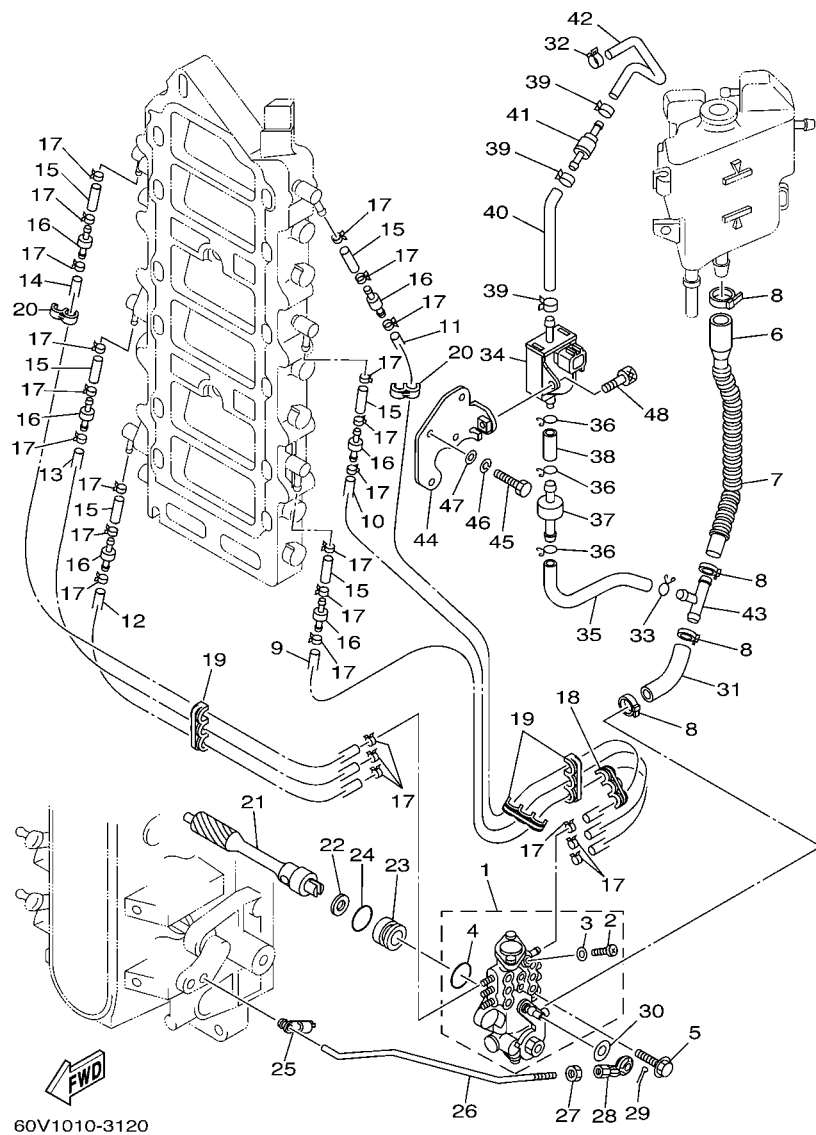


FIG. 13 OIL PUMP

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6D0-13200-00	OIL INJECTION PUMP ASSY	1	1			
2	6R3-13471-00	.PLUG, DRAIN	1	1			
3	6L2-13475-00	.GASKET	1	1			
4	93210-19M82	.O-RING	1	1			
5	90109-06M40	BOLT	2	2			
6	6G5-13416-00	PIPE, OIL 1	1	1			
7	90446-17MA8	HOSE (L200)	1	1			
8	90465-11M10	CLAMP	4	4			
9	90446-07M35	HOSE (L260)	1	1			
10	90445-07M96	HOSE (L310)	1	1			
11	90446-07M48	HOSE (L450)	1	1			
12	90445-07M44	HOSE (L250)	1	1			
13	90445-07M46	HOSE (L360)	1	1			
14	90445-07M10	HOSE (L510)	1	1			
15	90445-07M04	HOSE (L50)	6	6			
16	6R3-13183-00	VALVE, CHECK	6	6			
17	90468-07M02	CLIP	24	24			
18	90464-07M05	CLAMP	1	1			
19	90464-07M05	CLAMP	3	3			
20	90464-07M20	CLAMP	2	2			
21	61A-11537-00	GEAR, DRIVEN	1	1			
22	90201-09M01	WASHER, PLATE	1	1			
23	61A-13117-00	COLLAR, DISTANCE	1	1			
24	93210-18MA9	O-RING	1	1			
25	6R5-41237-00	JOINT, LINK	1	1			
26	65L-41241-10	ROD, LINK	1	1			
27	95380-05600	NUT	1	1			

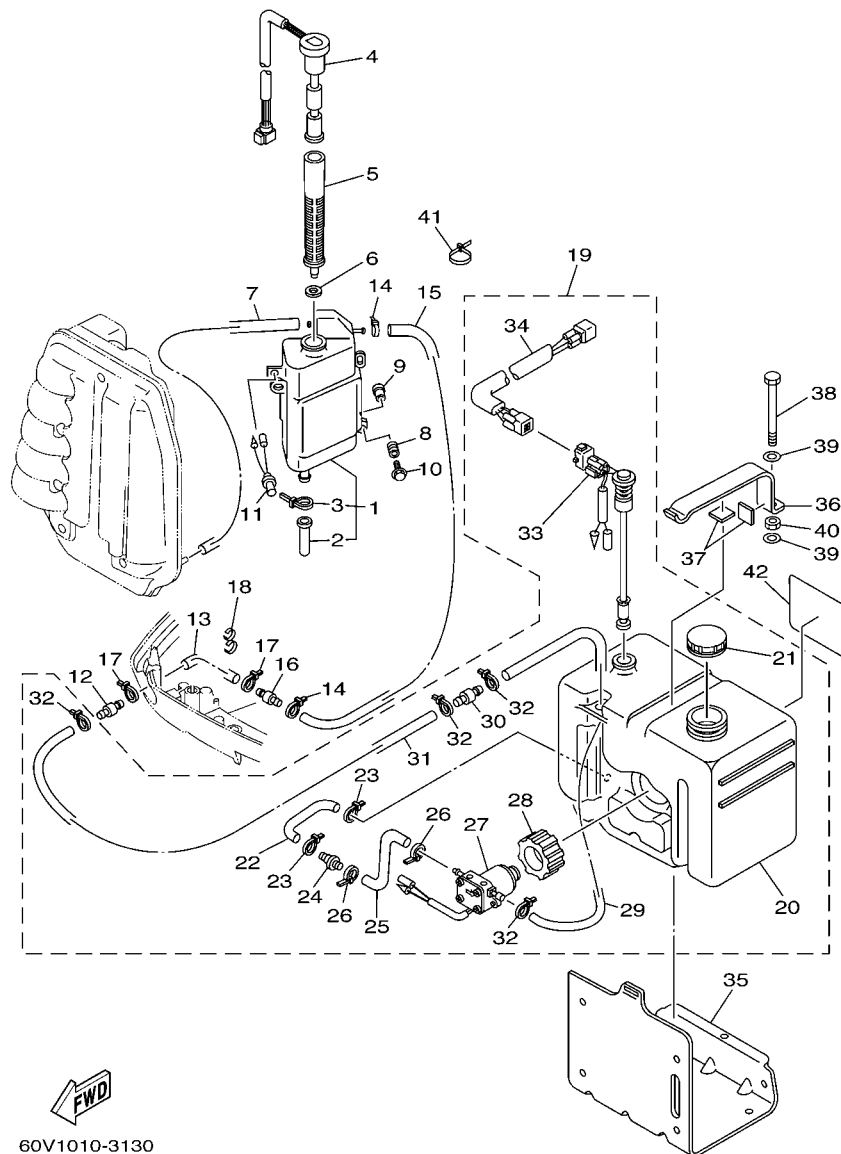


FIG. 14 OIL TANK

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	61A-21750-00	OIL TANK ASSY	1	1			
2	6E5-13448-00	.CAP	1	1			
3	90465-13M11	.CLAMP	1	1			
4	61A-85730-01	OIL LEVEL GAUGE ASSY	1	1			
5	61A-13411-00	STRAINER, OIL	1	1			
6	6E5-13414-00	GASKET, STRAINER COVER	1	1			
7	90445-05M07	HOSE (L700)	1	1			
8	6A0-82317-00	DAMPER, IGNITION COIL	3	3			
9	624-42542-00	PIPE	3	3			
10	90119-06M65	BOLT, WITH WASHER	3	3			
11	6R3-8259E-00	SWITCH ASSY	1	1			
12	6E5-24379-00	PIPE, JOINT 4	1	1			
13	90445-12M04	HOSE (L1900)	1	1			
14	90465-11M10	CLAMP	2	2			
15	6E5-24323-00	PIPE 12	1	1			
16	6E5-24379-00	PIPE, JOINT 4	1	1			
17	90465-11M10	CLAMP	2	2			
18	90464-13M34	CLAMP	1	1			
19	61A-21708-20	SUB OIL TANK ASSY	1	1			FOR OCE
20	6E5-21733-20	.SUB TANK, OIL (10.5L)	1	1			
21	6E5-21770-03	.OIL TANK CAP ASSY	1	1			
22	6E5-24322-00	.PIPE 11	1	1			
23	90465-11M10	.CLAMP	2	2			
24	646-24251-02	.STRAINER 1	1	1			
25	6E5-24319-01	.PIPE, OIL	1	1			
26	90465-11M10	.CLAMP	2	2			
27	6E5-81900-01	.OIL FEED PUMP ASSY	1	1			

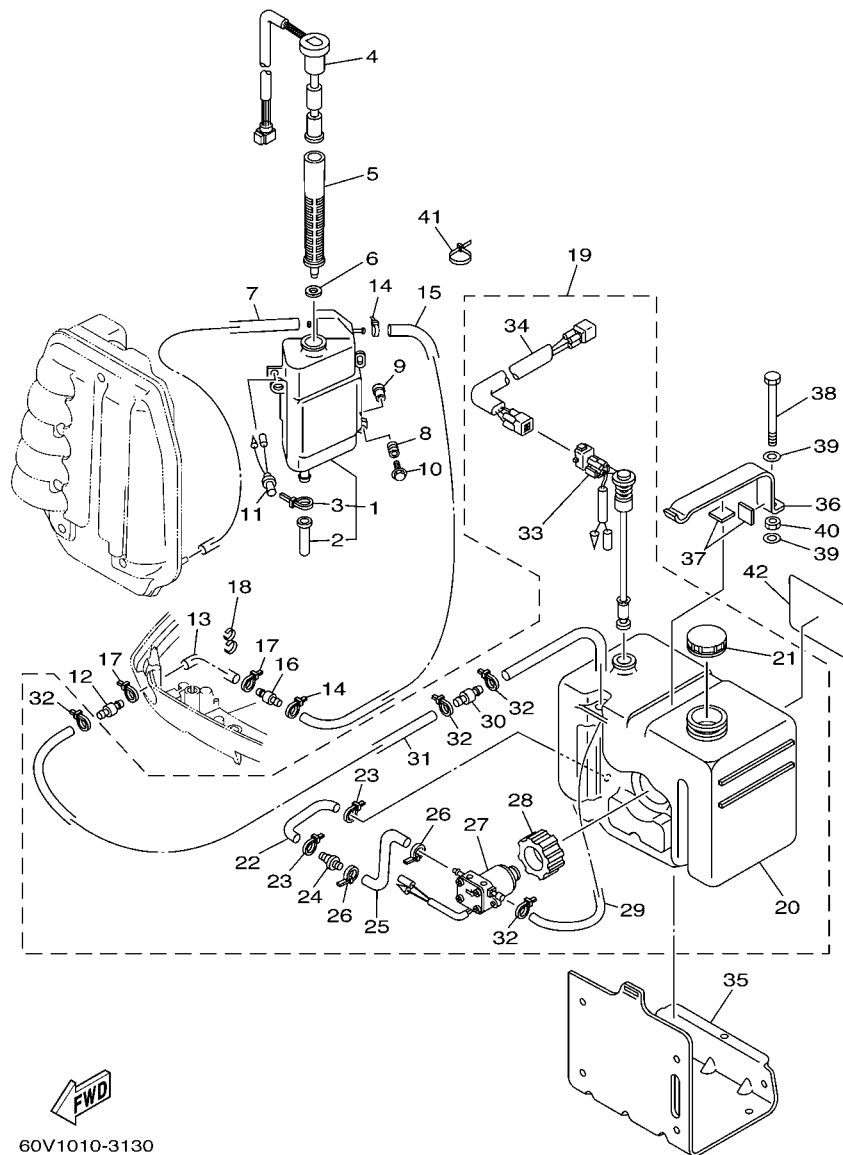


FIG. 14 OIL TANK

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
28	6E5-81922-00	.GROMMET	1	1			
29	6E5-24321-01	.PIPE 10	1	1			
30	6E5-24379-00	.PIPE, JOINT 4	1	1			
31	90445-11M26	.HOSE (L6500)	1	1			
32	90465-11M10	.CLAMP	4	4			
33	6E5-85720-05	.OIL LEVEL GAUGE ASSY	1	1			
34	6R3-85721-80	.WIRE, LEAD (8M)	1	1			
35	6E5-21734-01-33	HOLDER, OIL SUB TANK	1	1			FOR OCE
36	6E5-21798-01-33	BRACKET, DAMPER	1	1			FOR OCE
37	6E5-21746-00	DAMPER	2	2			FOR OCE
38	97080-06100	BOLT	1	1			FOR OCE
39	92990-06600	WASHER, PLATE	2	2			FOR OCE
40	95380-06600	NUT, HEXAGON	1	1			FOR OCE
41	90465-13M11	CLAMP	2	2			FOR OCE
42	6E5-13437-43	MARK, CAUTION	1	1			FOR OCE

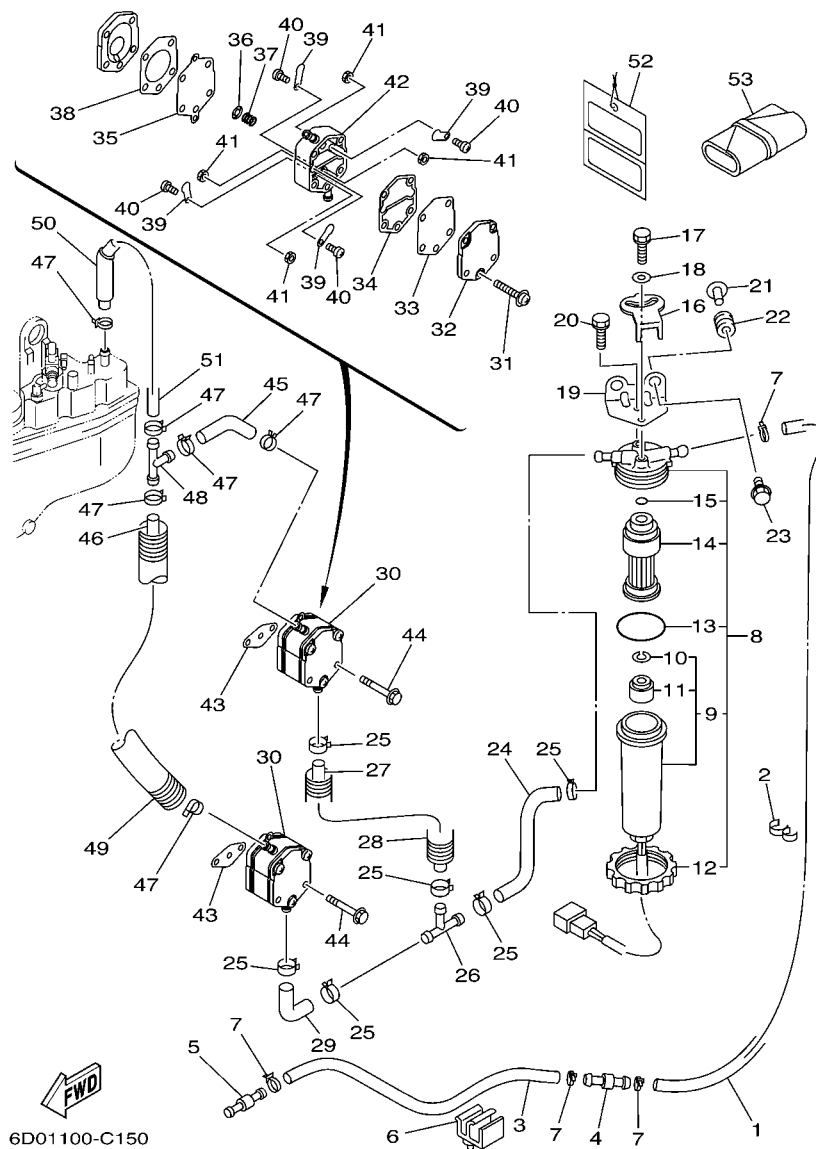


FIG. 15 FUEL 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	61A-24313-00	PIPE 3	1	1			
2	90464-13M34	CLAMP	1	1			
3	90445-13M17	HOSE (L2700)	1	1			
4	6R3-24377-00	PIPE, JOINT 3	1	1			
5	6R3-24377-10	PIPE, JOINT 3	1	1			
6	6E5-82594-00	CLAMP	1	1			
7	90465-11M10	CLAMP	4	4			
8	68F-24560-10	FILTER ASSY	1	1			
9	68F-24562-10	.CUP, FILTER	1	1			
10	68F-24519-10	..CLIP	1	1			
11	68F-24469-10	..FLOAT, WATER LEVEL	1	1			
12	65L-24531-01	.NUT	1	1			
13	61A-24564-00	.O-RING	1	1			
14	68F-24563-10	.ELEMENT, FILTER	1	1			
15	65L-24564-00	.O-RING	1	1			
16	60H-24558-00	HOLDER, FILTER	1	1			
17	97595-06416	BOLT, WITH WASHER	1	1			
18	90201-06068	WASHER, PLATE	1	1			
19	68F-24566-00	BRACKET, FILTER	1	1			
20	97595-06514	BOLT, WITH WASHER	1	1			
21	90387-06M60	COLLAR	2	2			
22	90480-10M23	GROMMET	2	2			
23	90119-06M88	BOLT, WITH WASHER	2	2			
24	68F-24311-00	PIPE, FUEL 1	1	1			
25	90465-11M10	CLAMP	6	6			
26	6E5-24378-00	PIPE, JOINT 3	1	1			
27	6G5-24315-00	PIPE 5	1	1			

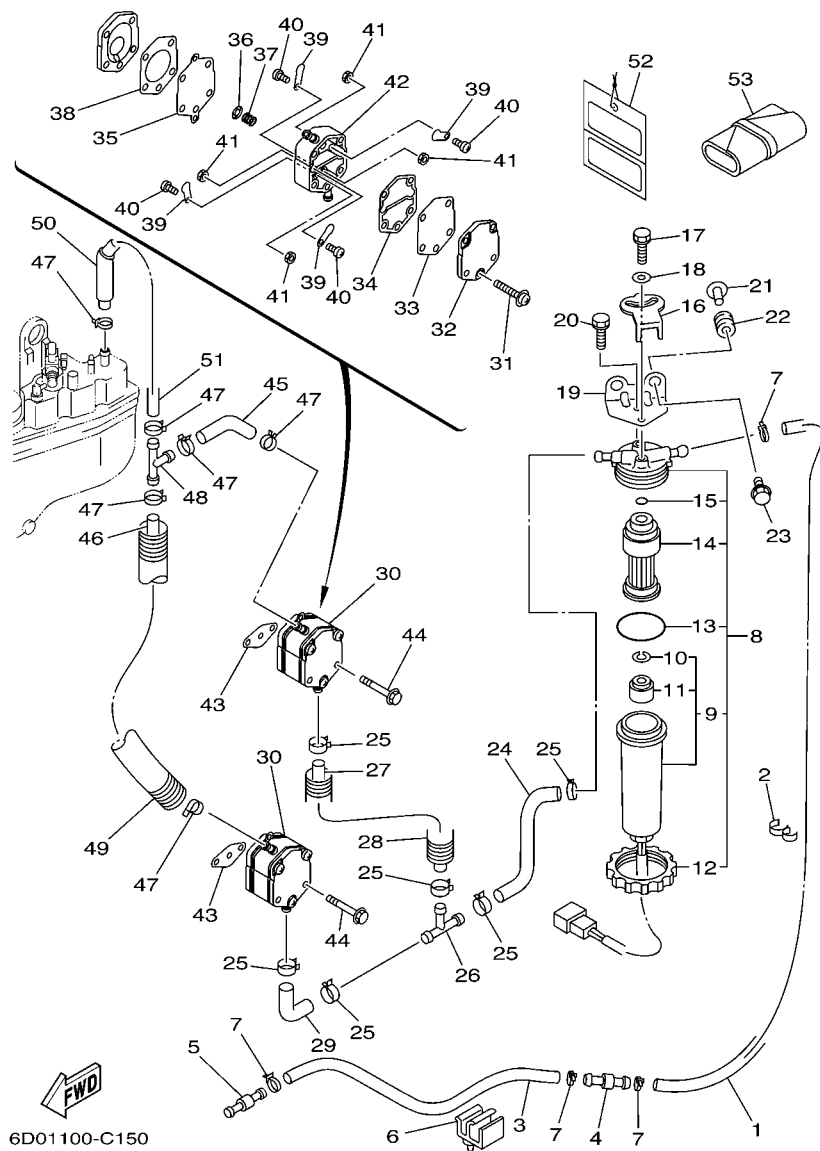


FIG. 15 FUEL 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
28	90447-19004	HOSE, WITH SPRING (L=130)	1	1			
29	6E5-24315-00	PIPE 5	1	1			
30	6E5-24410-03	FUEL PUMP ASSY	2	2			
31	6E5-24444-00	.SCREW	3	3			
32	6E5-24413-00	.BODY 2	1	1			
33	6E5-24471-00	.DIAPHRAGM	1	1			
34	6E5-24435-00	.GASKET, BODY 2	1	1			
35	6E5-24411-00	.DIAPHRAGM	1	1			
36	648-24424-00	.SEAT, SPRING	1	1			
37	6E5-24423-00	.SPRING, DIAPHRAGM	1	1			
38	6E5-24434-02	.GASKET, BODY	1	1			
39	6A0-24421-01	.VALVE, CHECK	4	4			
40	6A0-14325-00	.SCREW, PAN HEAD	4	4			
41	95380-03600	.NUT	4	4			
42	6E5-24412-10	.BODY 1	1	1			
43	650-24431-A0	GASKET, FUEL PUMP 1	2	2			
44	90101-06M00	BOLT	4	4			
45	6G5-24316-10	PIPE 6	1	1			
46	6E5-24313-00	PIPE 3	1	1			
47	90465-11M10	CLAMP	6	6			
48	6E5-24378-00	PIPE, JOINT 3	1	1			
49	65L-83557-00	TUBE	1	1			
50	90446-15M07	HOSE (L60)	1	1			
51	90445-13M12	HOSE (L235)	1	1			
52	61H-2819R-31	TAG, WARNING	1	1			
53	68F-28100-00	TOOL KIT	1	1			AP



E6

[illegible]

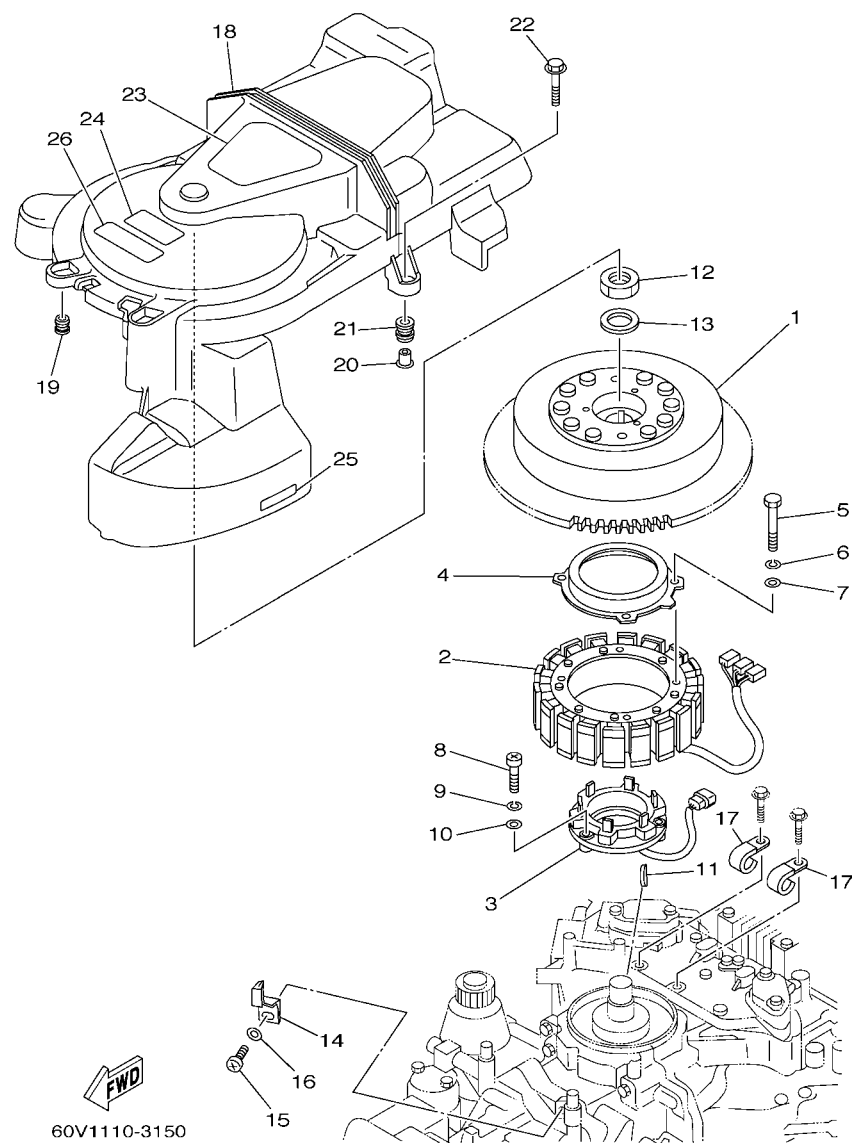


FIG. 17 GENERATOR

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	60V-81450-00	ROTOR ASSY	1	1			
2	60V-81410-01	STATOR ASSY	1	1			
3	60V-85580-00	COIL, PULSER	1	1			
4	61A-83721-00	COVER	1	1			
5	97013-06035	BOLT	4	4			
6	92903-06100	WASHER, SPRING	4	4			
7	92903-06600	WASHER, PLATE	4	4			
8	97885-05030	SCREW, PAN HEAD	3	3			
9	92995-05100	WASHER	3	3			
10	92995-05600	WASHER	3	3			
11	90280-05015	KEY, WOODRUFF	1	1			
12	90170-24M22	NUT	1	1			
13	90201-25M02	WASHER, PLATE	1	1			
14	60V-81332-00	PLATE, TIMING	1	1			
15	97885-06010	SCREW, PAN HEAD	1	1			
16	92995-06600	WASHER	1	1			
17	90465-06M86	CLAMP	2	2			
18	60V-81337-00	COVER, FLYWHEEL	1	1			
19	663-82317-01	DAMPER, IGNITION COIL	2	2			
20	624-42542-00	PIPE	2	2			
21	6A0-82317-00	DAMPER, IGNITION COIL	2	2			
22	95895-06030	BOLT, FLANGE	2	2			
23	60V-14488-00	LABEL, CAUTION	1	1			
24	6A1-83625-41	MARK 5	1	1			
25	6E5-85711-40	MARK, CAUTION	1	1			
26	6K1-83623-41	MARK 3		1			

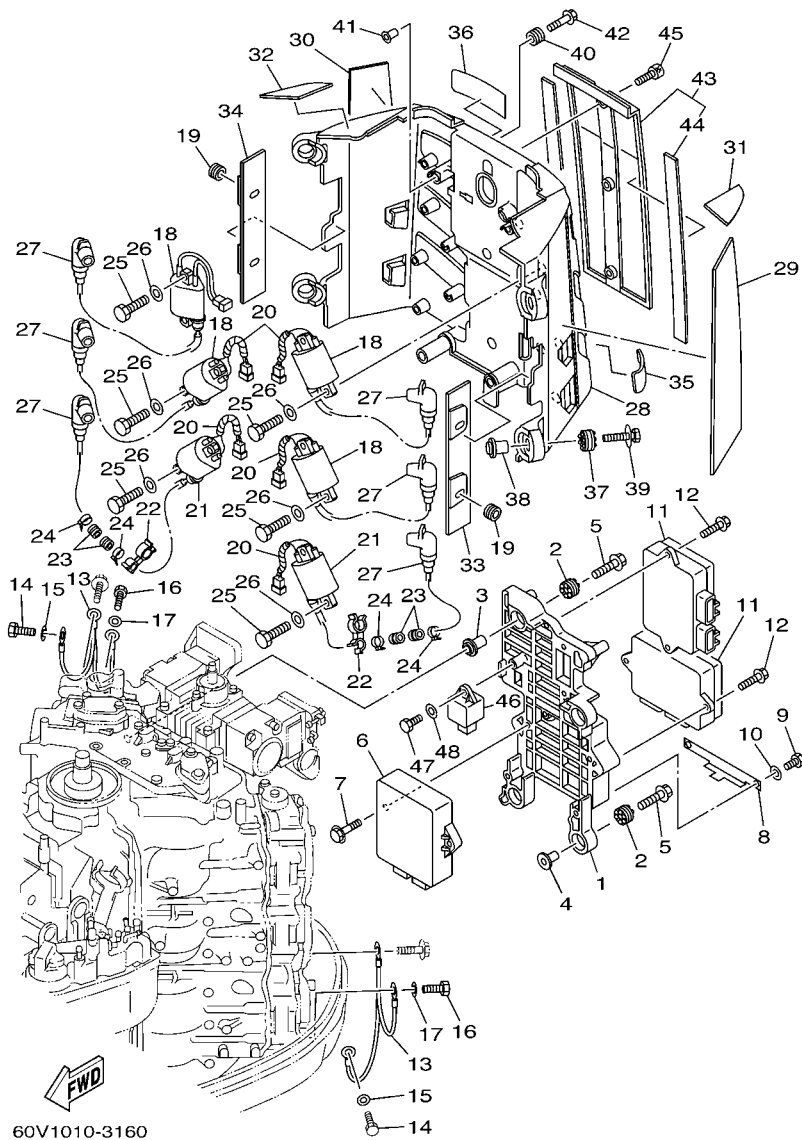


FIG. 18 ELECTRICAL 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	60V-85542-01-94	BRACKET	1	1			
2	60V-85564-00	GROMMET	4	4			
3	68F-86129-00	COLLAR	2	2			
4	68F-86129-10	COLLAR	2	2			
5	68F-85119-00	BOLT	4	4			
6	6D0-8591A-00	ENGINE CONTROL UNIT ASSY	1	1			
7	90119-06MA3	BOLT, WITH WASHER	2	2			
8	60V-85548-00	HOLDER	1	1			
9	97013-06014	BOLT	2	2			
10	92903-06600	WASHER, PLATE	2	2			
11	60V-8591B-00	DRIVER, INJECTOR ASSY	2	2			
12	90119-06MA2	BOLT, WITH WASHER	4	4			
13	6E5-82519-00	WIRE, EARTH LEAD	2	2			
14	97095-06012	BOLT	2	2			
15	92995-06600	WASHER	2	2			
16	97095-06012	BOLT	2	2			
17	92995-06600	WASHER	2	2			
18	60V-82310-00	IGNITION COIL ASSY	4	4			
19	90480-25161	GROMMET	4	4			
20	90446-10M01	HOSE (L60)	5	5			
21	60V-82310-10	IGNITION COIL ASSY	2	2			
22	90464-18003	CLAMP	2	2			
23	90480-22M15	GROMMET	4	4			
24	90465-11M10	CLAMP	4	4			
25	97013-05020	BOLT	12	12			
26	92903-05600	WASHER, PLATE	12	12			
27	68F-82370-01	PLUG CAP ASSY	6	6			

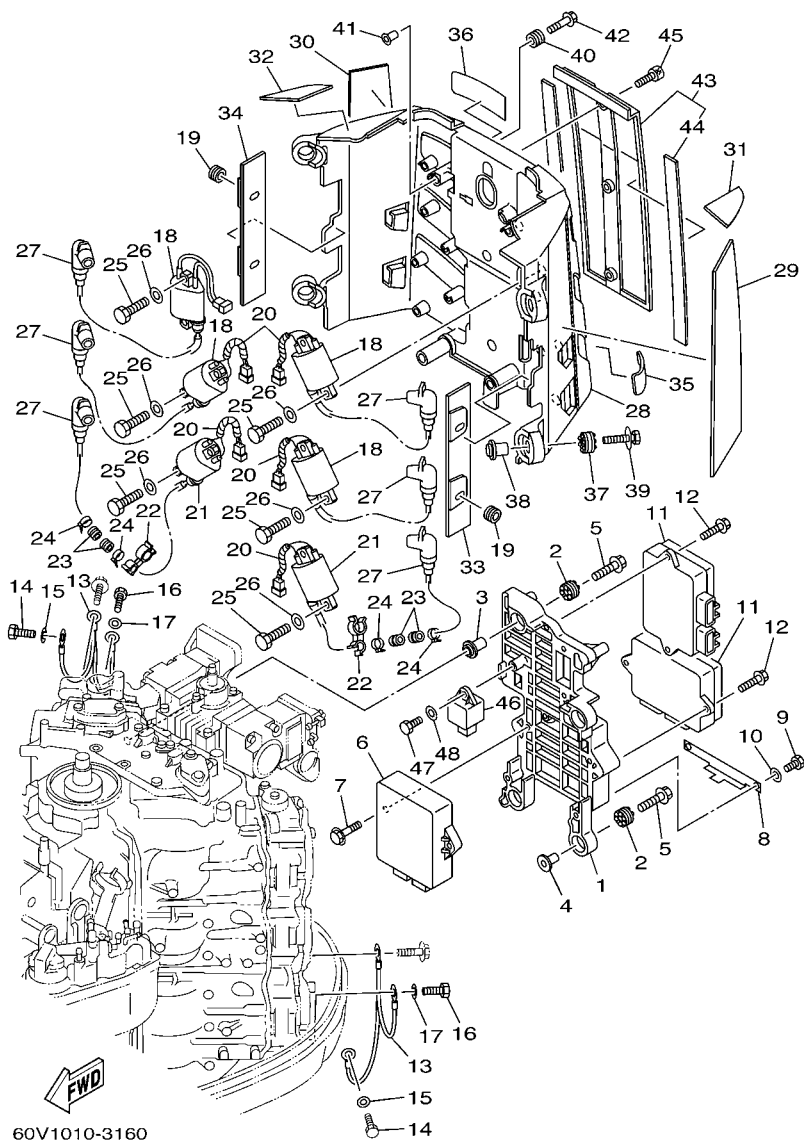


FIG. 18 ELECTRICAL 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
28	60V-82314-01	COVER, IGNITION COIL	1	1			
29	60V-24198-00	SEAT, RUBBER	1	1			
30	60V-24198-10	SEAT, RUBBER	1	1			
31	60V-8818D-00	SEAT 1	1	1			
32	60V-8818D-10	SEAT 1	1	1			
33	60V-23116-00	SEAT 2	1	1			
34	60V-23116-10	SEAT 2	1	1			
35	60V-2318U-00	PLATE, SEAT	3	3			
36	60V-2318U-10	PLATE, SEAT	3	3			
37	68F-85516-01	SPACER	4	4			
38	68F-86129-10	COLLAR	4	4			
39	68F-85119-00	BOLT	4	4			
40	6A0-82317-00	DAMPER, IGNITION COIL	4	4			
41	624-42542-00	PIPE	4	4			
42	90119-06M65	BOLT, WITH WASHER	4	4			
43	60V-8252U-00	COVER	1	1			
44	60V-23115-00	SEAT 1	2	2			
45	90111-06034	BOLT	3	3			
46	68V-81950-00	RELAY ASSY	1	1			
47	97095-06016	BOLT	1	1			
48	92995-06600	WASHER	1	1			

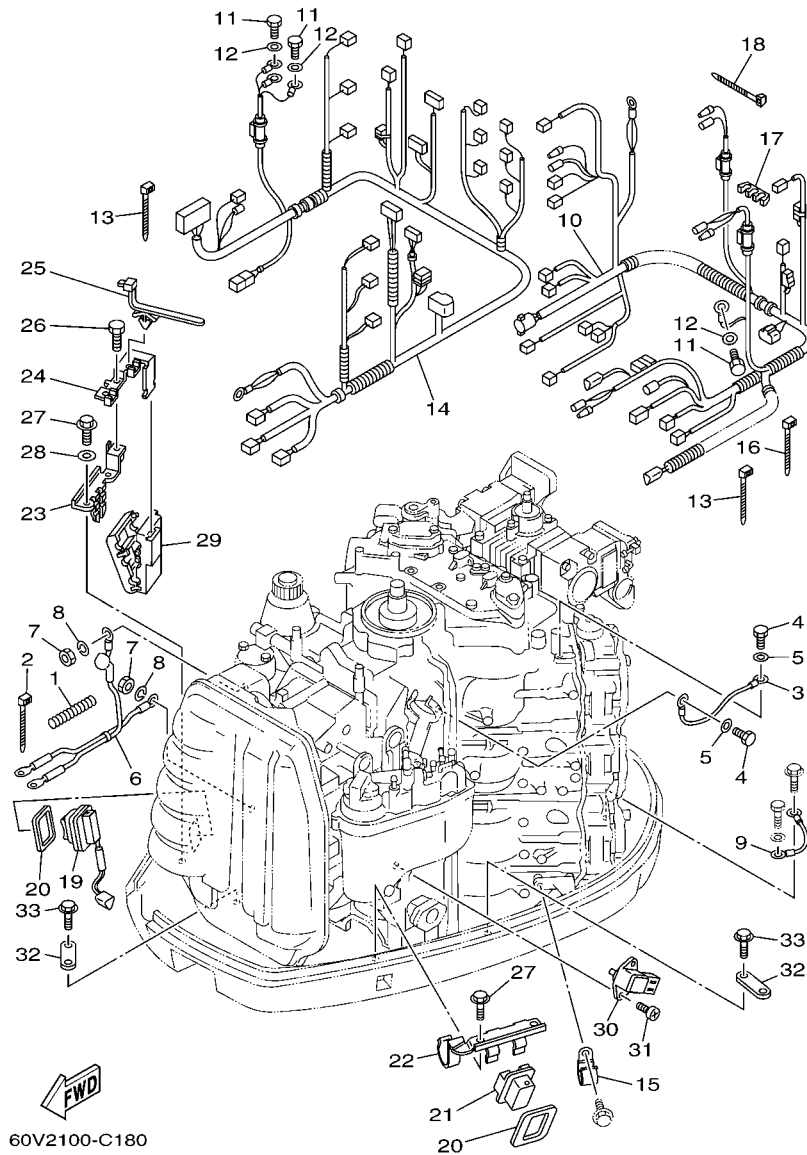


FIG. 19 ELECTRICAL 2

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	90447-07011	HOSE, WITH SPRING	1	1			
2	90465-11M10	CLAMP	1	1			
3	61A-81949-00	WIRE, LEAD	1	1			
4	97095-06012	BOLT	2	2			
5	92995-06600	WASHER	2	2			
6	60V-82105-00	WIRE HARNESS	1	1			
7	95333-08600	NUT	2	2			
8	92903-08100	WASHER, SPRING	2	2			
9	6D0-82531-00	WIRE, LEAD	1	1			
10	60V-82590-20	WIRE HARNESS ASSY	1	1			FOR USA
	60V-82590-30	WIRE HARNESS ASSY	1	1			FOR OCE
11	97095-06012	BOLT	4	4			
12	92995-06600	WASHER	4	4			
13	90465-11M52	CLAMP	2	2			
14	60V-8259M-00	WIRE HARNESS ASSY 2	1	1			
15	90465-05M87	CLAMP	1	1			
16	90465-11M10	CLAMP	1	1			
17	90464-11008	CLAMP	1	1			
18	90465-11M10	CLAMP	1	1			
19	69J-82563-00	TRIM & TILT SWITCH ASSY	1	1			
20	69J-82587-00	GASKET	2	2			
21	69J-42723-00	COVER, BOTTOM	1	1			
22	60V-83614-00	BRACKET	1	1			
23	60V-83614-10	BRACKET	1	1			
24	60V-83635-10	BRACKET	1	1			
25	90464-20213	CLAMP	2	2			
26	97095-06014	BOLT	1	1			

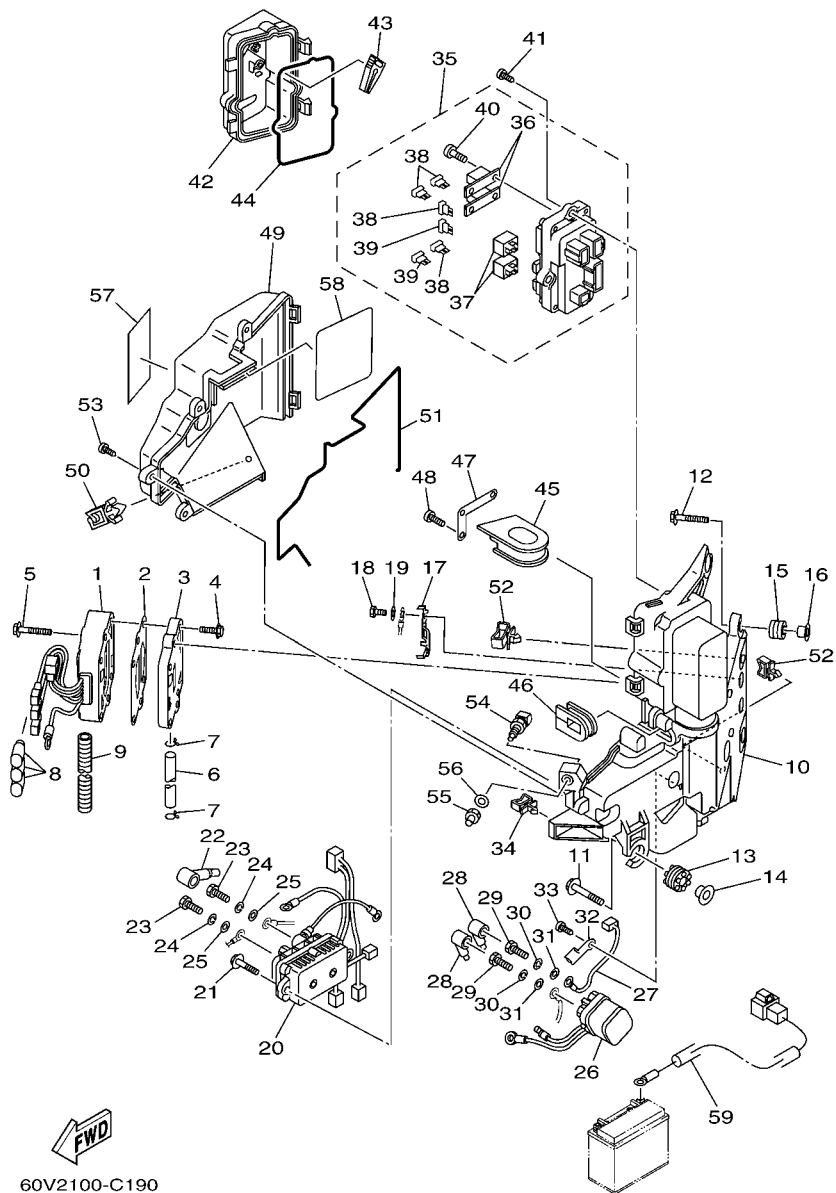


FIG. 20 ELECTRICAL 3

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	60V-81960-01	RECTIFIER & REGULATOR ASSY	1	1			
2	60V-81975-A0	PLATE, RECTIFIER FITTING	1	1			
3	60V-81972-00-1S	COVER, RECTIFIER	1	1			
4	90119-06MA3	BOLT, WITH WASHER	4	4			
5	90119-06MA4	BOLT, WITH WASHER	2	2			
6	90445-09M25	HOSE (L600)	2	2			
7	90467-08M18	CLIP	2	2			
8	6L2-82599-01	COVER, CONNECTER	3	3			
9	90447-10004	HOSE, WITH SPRING	1	1			
10	60V-81948-00	BRACKET	1	1			
11	68F-85119-00	BOLT	3	3			
12	90119-06M65	BOLT, WITH WASHER	1	1			
13	68F-85516-01	SPACER	3	3			
14	68F-86129-00	COLLAR	3	3			
15	6A0-82317-00	DAMPER, IGNITION COIL	1	1			
16	624-42542-00	PIPE	1	1			
17	60V-87149-00	CONNECTOR	1	1			
18	97095-06012	BOLT	2	2			
19	92995-06600	WASHER	2	2			
20	60V-81950-00	RELAY ASSY	1	1			
21	90119-06MA4	BOLT, WITH WASHER	2	2			
22	682-82119-01	COVER, LEAD WIRE	1	1			
23	97095-06010	BOLT	2	2			
24	92995-06100	WASHER, SPRING	2	2			
25	92995-06600	WASHER	2	2			
26	68V-8194A-00	RELAY	1	1			
27	68F-82117-00	WIRE, LEAD	1	1			

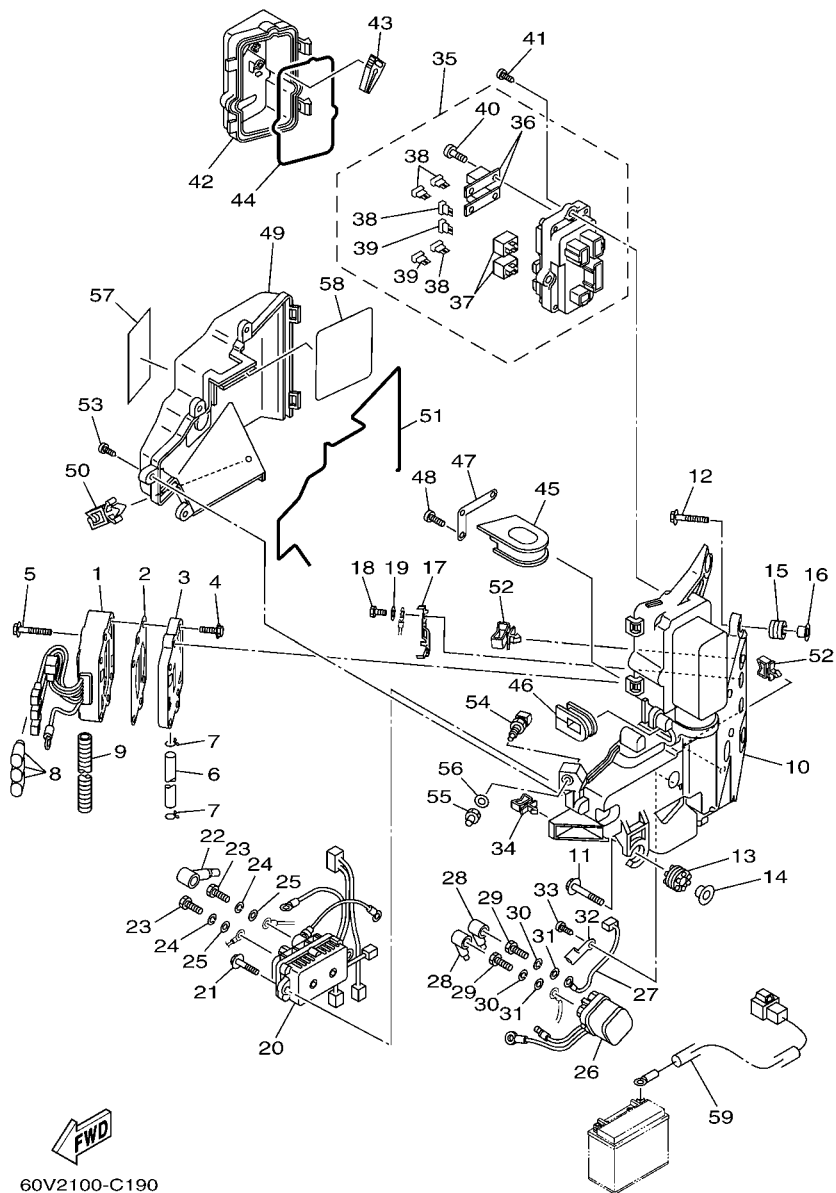
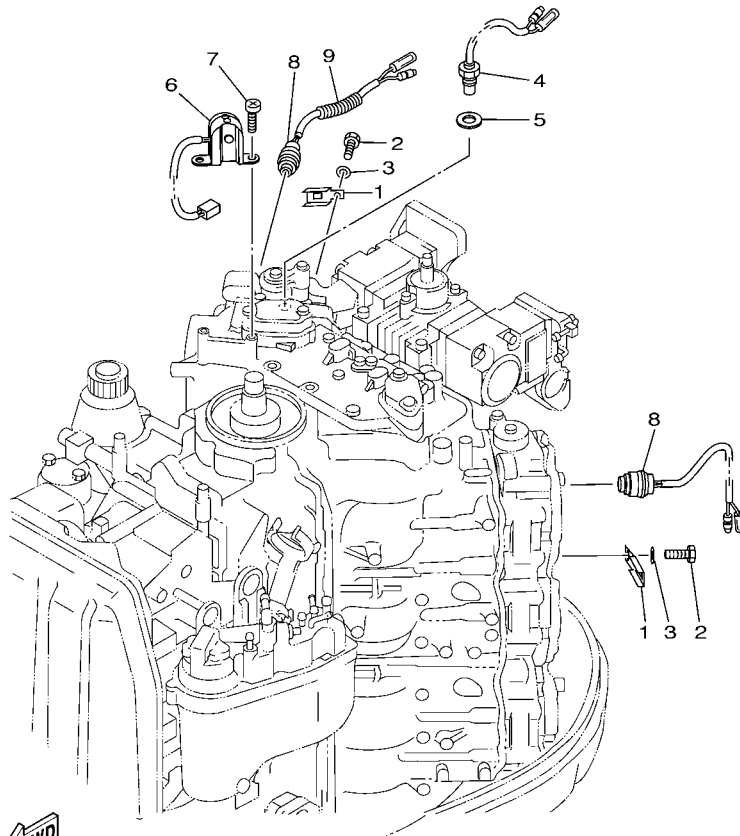


FIG. 20 ELECTRICAL 3

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
28	682-82119-01	COVER, LEAD WIRE	2	2			
29	97095-06010	BOLT	2	2			
30	92995-06100	WASHER, SPRING	2	2			
31	92995-06600	WASHER	2	2			
32	68V-81953-00	STAY, RELAY	1	1			
33	97780-60620	SCREW, TAPPING	1	1			
34	90464-23199	CLAMP	2	2			
35	60V-82170-00	FUSE BOX ASSY	1	1			
36	60V-82151-00	.FUSE (100A)	2	2			
37	68F-8195A-00	.RELAY ASSY	2	2			
38	67F-82151-00	.FUSE (20A)	4	4			
39	67F-82151-10	.FUSE (30A)	2	2			
40	68F-82846-00	.SCREW, PAN HEAD (M5)	4	4			
41	97780-50620	SCREW, TAPPING	3	3			
42	60V-85544-00	CASE	1	1			
43	67F-2812A-00	PULLER, FUSE	1	1			
44	60V-82157-00	DAMPER	1	1			
45	60V-81336-00	GROMMET	1	1			
46	60V-81336-10	GROMMET	1	1			
47	60V-81128-00	CLAMP	1	1			
48	97780-50620	SCREW, TAPPING	3	3			
49	60V-81942-10	COVER	1	1			
50	90464-08004	CLAMP	1	1			
51	60V-82176-00	DAMPER	1	1			
52	90464-23199	CLAMP	2	2			
53	90169-05M00	SCREW, TRUSS HEAD TAPPING	4	4			
54	65L-85886-00	THERMOSENSOR	1	1			

FIG. 21 ELECTRICAL 4

[illegible]

60V1010-3190

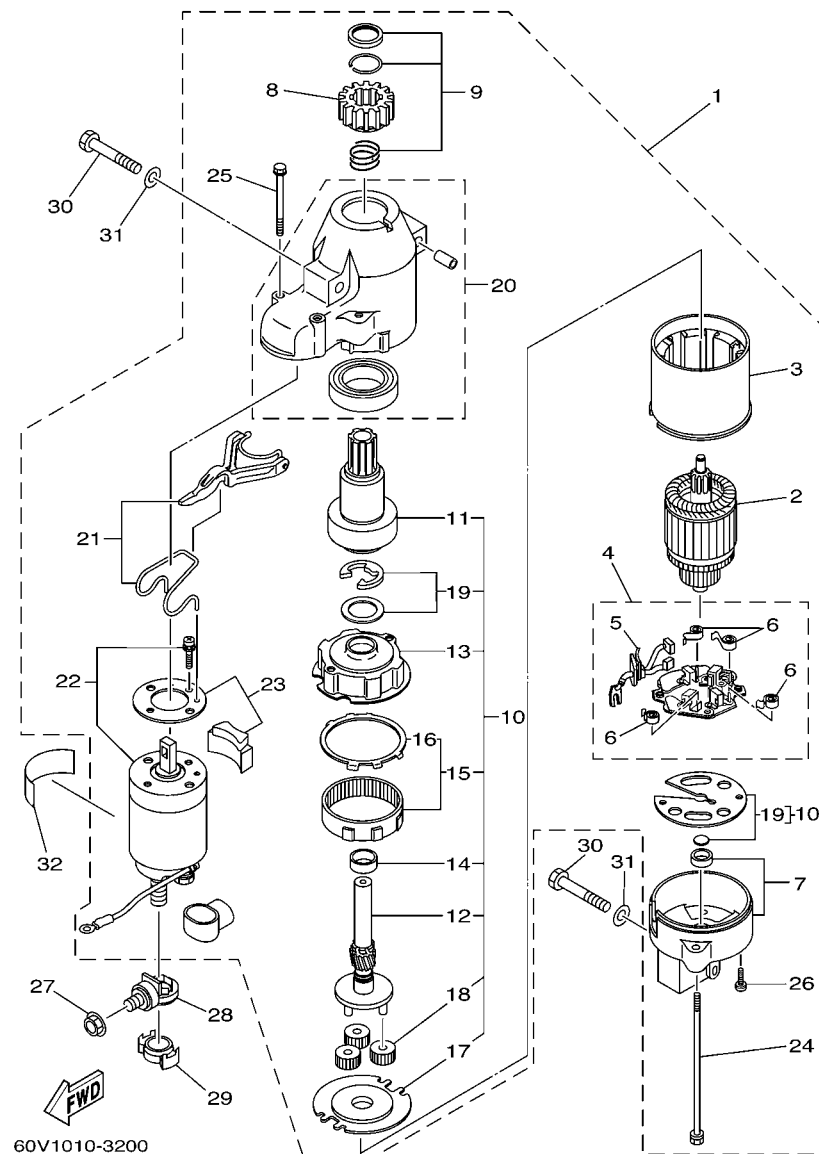


FIG. 22 STARTING MOTOR

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11				REMARKS
1	6D0-81800-00	STARTING MOTOR ASSY	1	1				
2	67F-81850-00	.ARMATURE ASSY	1	1				
3	67F-81810-00	.STATOR ASSY	1	1				
4	69J-81840-00	.BRUSH HOLDER ASSY	1	1				
5	69J-81801-00	..BRUSH SET	1	1				
6	67F-81813-00	..SPRING, BRUSH	4	4				
7	68F-81820-00	.REAR BRACKET ASSY	1	1				
8	67F-81808-00	.PINION ASSY	1	1				
9	67F-81857-00	.PINION STOPPER SET	1	1				
10	67F-81807-00	.GEAR ASSY, STARTING MOTOR	1	1				
11	67F-81832-00	..CLUTCH, OVER RUN	1	1				
12	67F-81836-00	..SHAFT, PINION	1	1				
13	67F-81821-00	..BRACKET, CENTER 1	1	1				
14	67F-81841-00	..BEARING	1	1				
15	67F-81891-00	..GEAR, RING	1	1				
16	67F-8183R-00	...GASKET	1	1				
17	67F-81830-00	..BRACKET, CENTER 2	1	1				
18	60V-8183T-00	..GEAR, IDLER	3	3				
19	67F-81809-00	..WASHER KIT	1	1				
20	60X-81842-00	.COVER	1	1				
21	69J-81839-00	.LEVER ASSY	1	1				
22	6D0-81941-00	.STARTER RELAY ASSY	1	1				
23	69J-81869-00	.COVER, DUST	1	1				
24	6K7-81826-10	.BOLT	2	2				
25	69J-81828-00	.BOLT 2	2	2				
26	67F-81846-00	..SCREW	2	2				
27	90179-08003	NUT	1	1				

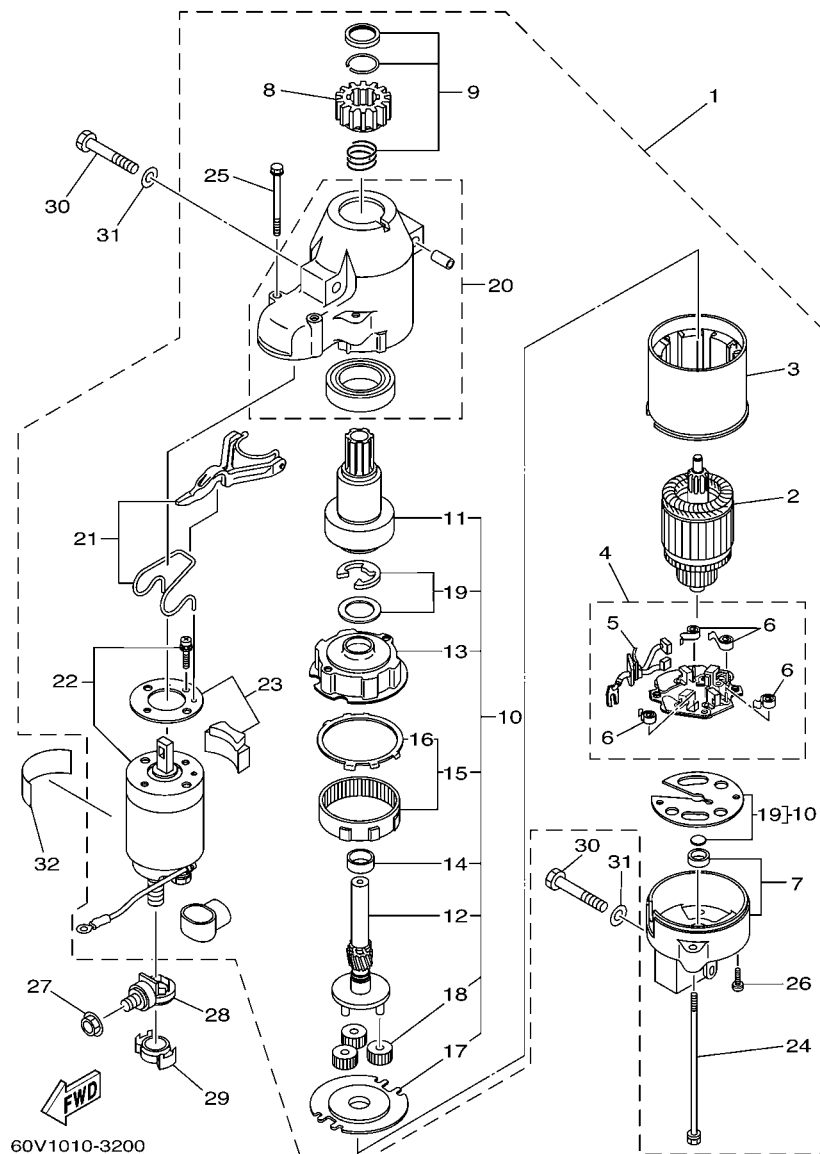


FIG. 22 STARTING MOTOR

[illegible]

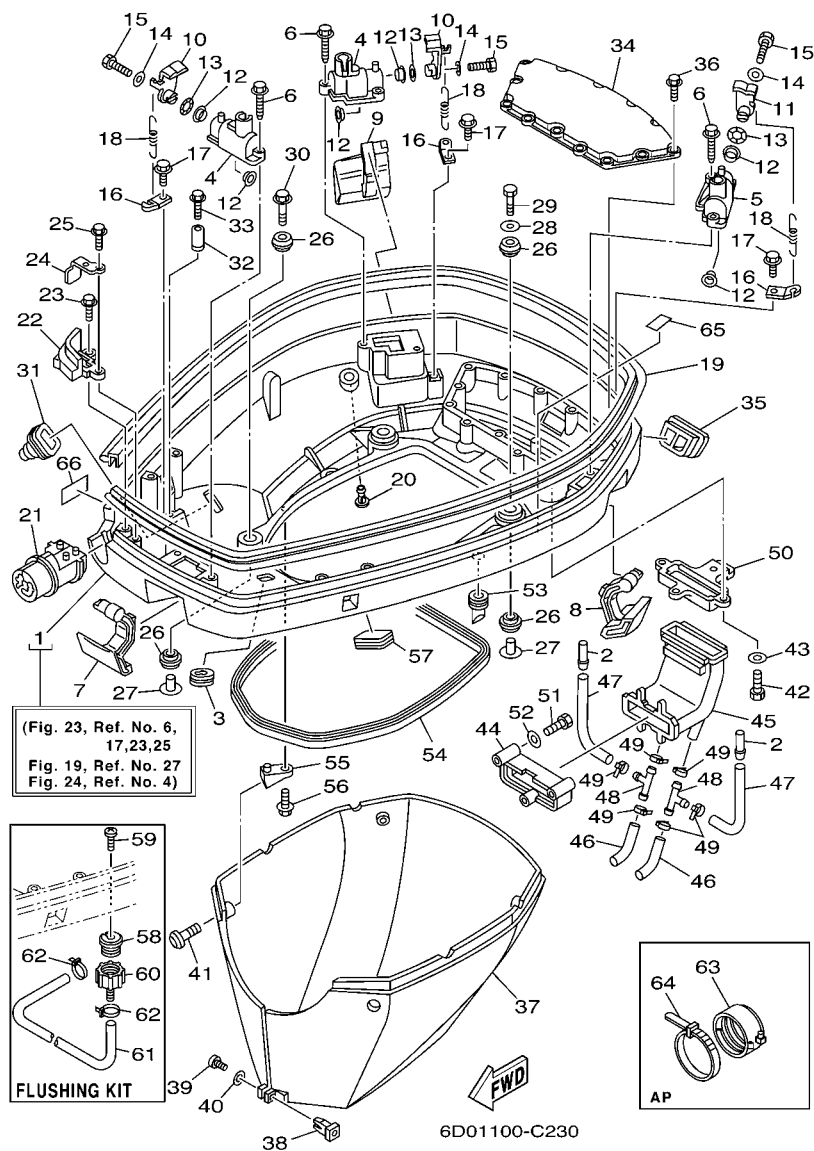


FIG. 23 BOTTOM COWLING

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	60V-42710-00-8D	BOTTOM COWLING ASSY	1	1			
2	6E5-24377-00	PIPE, JOINT 3	2	2			
3	6D0-42727-00	GROMMET	1	1			
4	68F-42828-00-94	PLATE, CLAMP	2	2			
5	68F-42828-10-94	PLATE, CLAMP	1	1			
6	90109-06M82	BOLT	6	6			
7	60V-42815-00-8D	LEVER, CLAMP	1	1			
8	60V-42816-00-8D	LEVER, CLAMP	1	1			
9	60V-42817-00-8D	LEVER, CLAMP	1	1			
10	68F-42818-00	LEVER, CLAMP	2	2			
11	67F-42818-00	LEVER, CLAMP	1	1			
12	90386-15M73	BUSH	6	6			
13	90206-15M18	WASHER, WAVE	3	3			
14	90201-06068	WASHER, PLATE	3	3			
15	97095-06016	BOLT	3	3			
16	64D-43144-00	HOOK, SPRING	3	3			
17	90109-06M80	BOLT	3	3			
18	90506-16M34	SPRING, TENSION	3	3			
19	60V-42615-00	SEAL	1	1			
20	6E5-44391-00	NIPPLE, HOSE	1	1			
21	60V-42725-00	GROMMET	1	1			
22	60V-42738-00-8D	PLATE, FITTING	1	1			
23	90109-06M81	BOLT	2	2			
24	64D-42738-10-5B	PLATE, FITTING	1	1			
25	90109-06M81	BOLT	1	1			
26	90480-22M81	GROMMET	8	8			
27	90387-08M37	COLLAR	4	4			

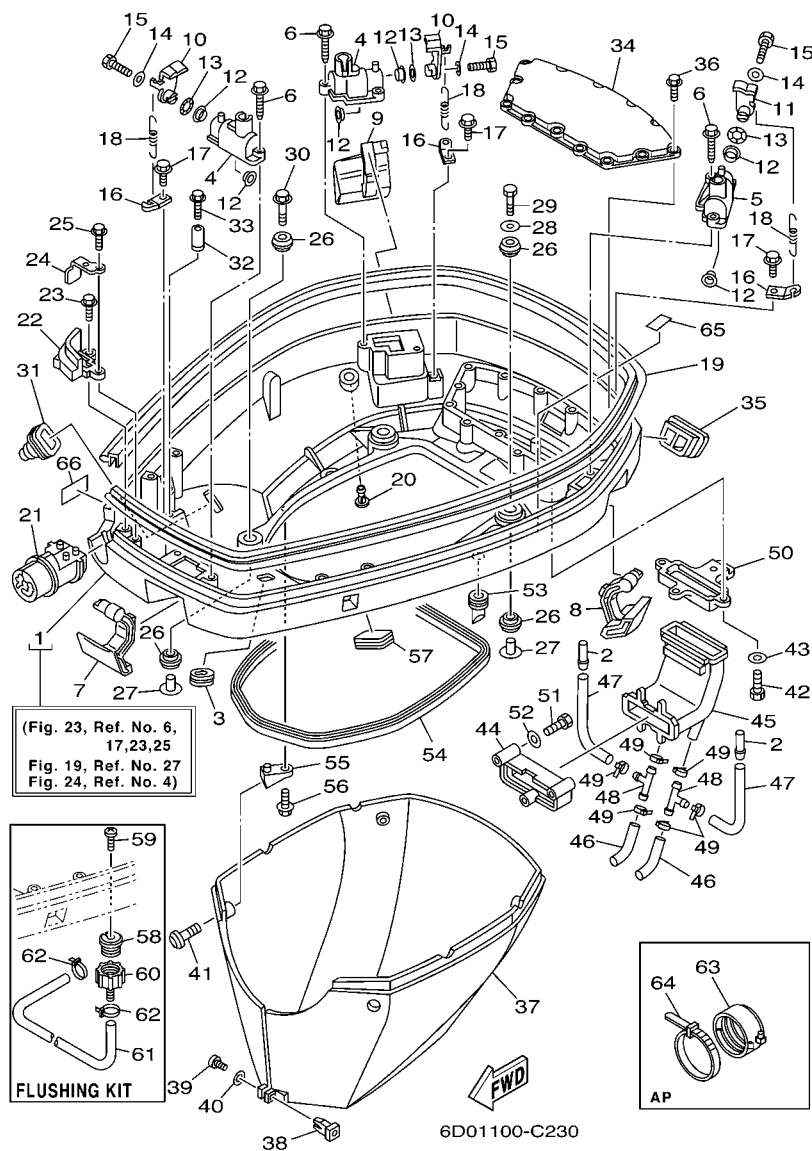


FIG. 23 BOTTOM COWLING

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
28	90201-08M54	WASHER, PLATE	1	1			
29	97075-08035	BOLT	1	1			
30	90119-08M22	BOLT, WITH WASHER	3	3			
31	688-42726-10	GROMMET	1	1			
32	6E5-82588-00	PLATE	1	1			
33	95895-06020	BOLT, FLANGE	1	1			
34	6D0-42723-00-5B	COVER, BOTTOM	1	1			
35	60V-42718-00	RUBBER, SEAL 3	1	1			
36	95895-06020	BOLT, FLANGE	13	13			
37	60V-42741-00-8D	APRON	1	1			
38	60V-42756-00	STAY, CLAMP	1	1			
39	97880-04016	SCREW, PAN HEAD	1	1			
40	92990-04600	WASHER, PLATE	1	1			
41	90111-06034	BOLT	4	4			
42	97095-06020	BOLT	4	4			
43	92995-06600	WASHER	4	4			
44	60V-12581-00	JOINT, HOSE 1	1	1			
45	60V-12576-00	HOSE 1	1	1			
46	60V-12578-00	HOSE 3	2	2			
47	60V-12588-00	HOSE 5	2	2			
48	6E5-24378-00	PIPE, JOINT 3	2	2			
49	90465-11M10	CLAMP	6	6			
50	60V-42771-00	APRON	1	1			
51	97075-08055	BOLT	3	3			
52	92995-08600	WASHER	3	3			
53	61A-42717-00	RUBBER, SEAL 2	4	4			
54	61A-42716-00	RUBBER, SEAL 1	1	1			

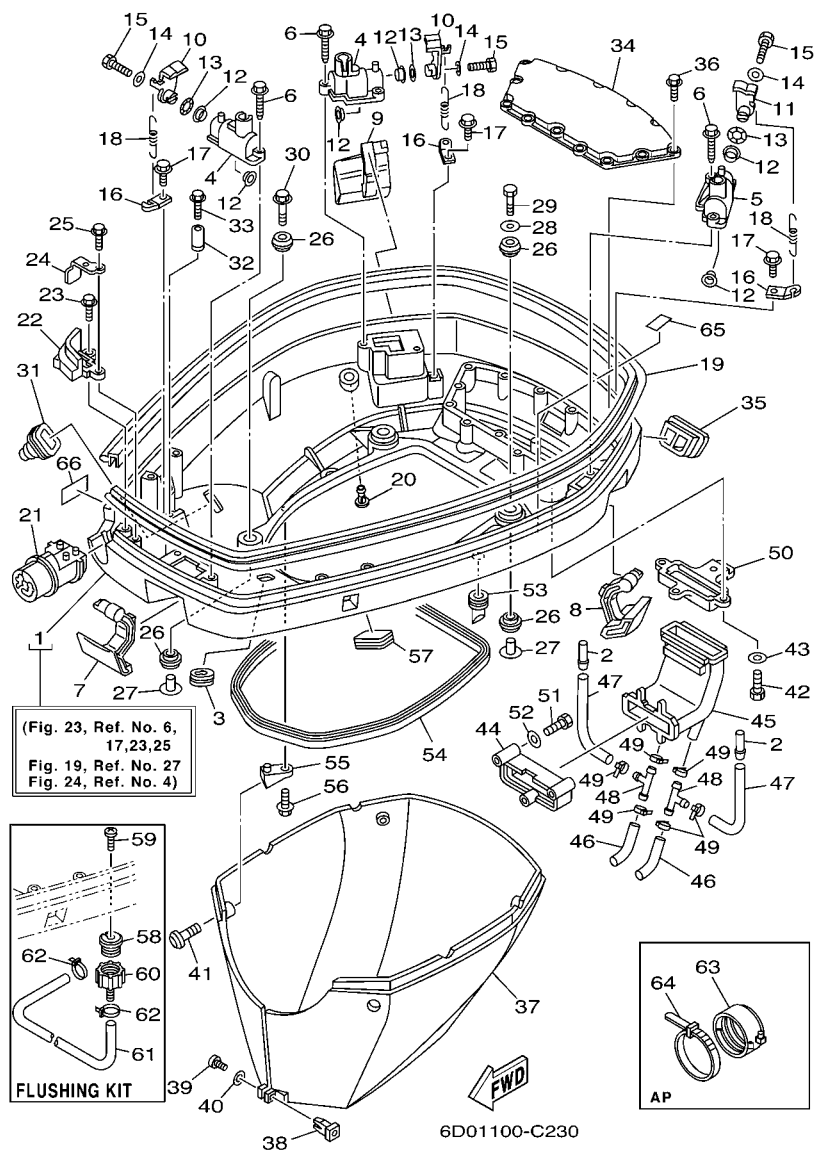


FIG. 23 BOTTOM COWLING

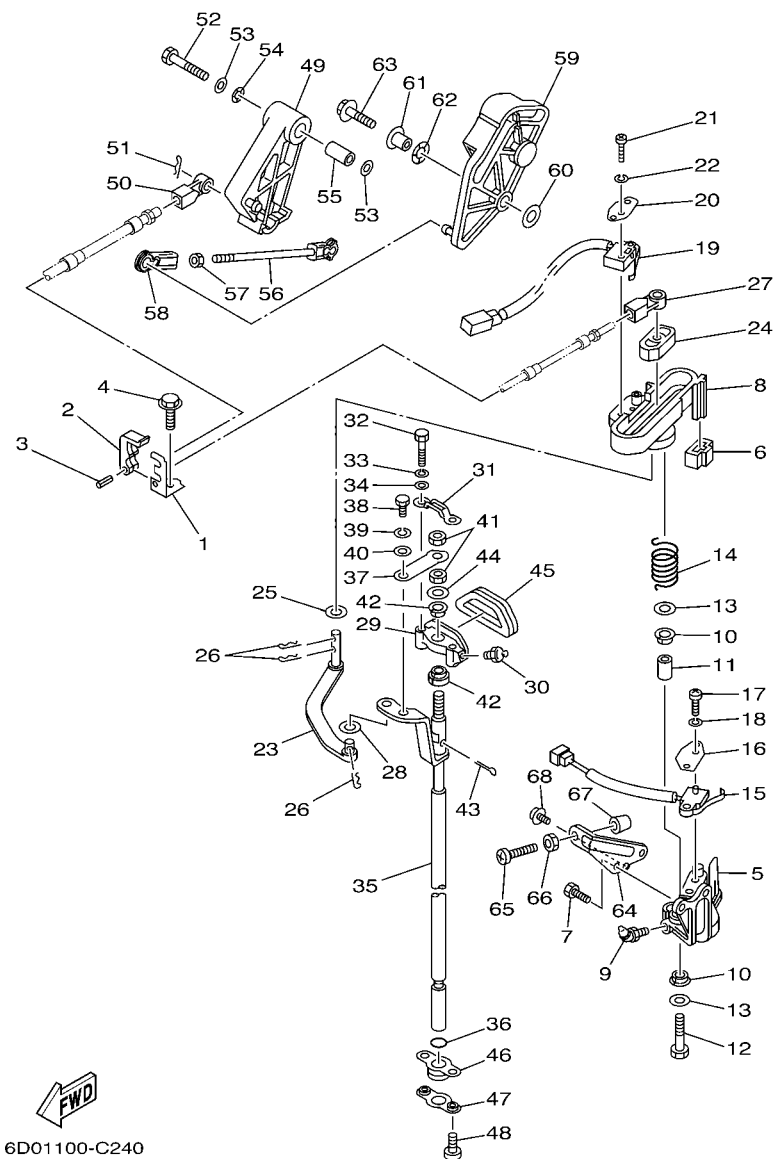


FIG. 24 CONTROL

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	60V-48531-10	BRACKET, REMOTE CONTROL 1	1	1			
2	663-48538-00	CLAMP, CABLE 1	1	1			
3	91690-30010	PIN, SPRING	1	1			
4	90109-06M80	BOLT	1	1			
5	60V-44117-00-1S	BRACKET	1	1			
6	60V-44194-00	CAP	1	1			
7	97095-06020	BOLT	2	2			
8	60V-44176-00-1S	BRACKET	1	1			
9	93700-06M01	NIPPLE, GREASE	1	1			
10	90386-12069	BUSH	2	2			
11	90387-08M09	COLLAR	1	1			
12	97095-08035	BOLT	1	1			
13	92995-08200	WASHER	2	2			
14	90508-20M31	SPRING, TORSION	1	1			
15	61A-8259F-00	SWITCH ASSY	1	1			
16	61A-82588-01	PLATE	1	1			
17	97885-04016	SCREW, PAN HEAD	2	2			
18	92995-04100	WASHER	2	2			
19	60V-8259F-00	SWITCH ASSY	1	1			
20	61A-82588-01	PLATE	1	1			
21	97885-04016	SCREW, PAN HEAD	2	2			
22	92995-04100	WASHER	2	2			
23	61A-44121-00	LEVER, SHIFT ROD	1	1			
24	68J-44122-01	BUSHING, SHIFT ROD LEVER	1	1			
25	90202-08M20	WASHER, PLATE	1	1			
26	90468-18008	CLIP	3	3			
27	6E5-48344-00	CABLE END, REMOTE CONTROL	1	1			

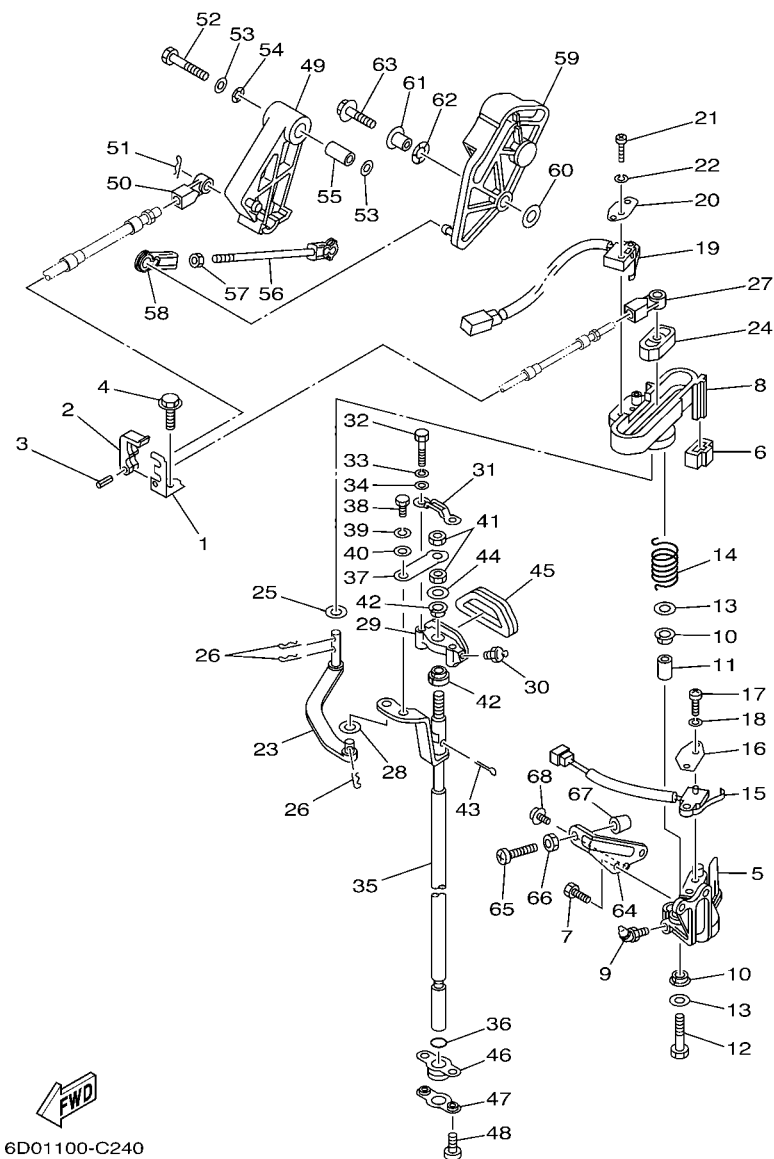


FIG. 24 CONTROL

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11				REMARKS
28	90202-06007	WASHER, PLATE	1	1				
29	61A-44118-00-8D	BRACKET	1	1				
30	93700-06M03	NIPPLE, GREASE	1	1				
31	61A-44116-00	SPRING	1	1				
32	97095-06030	BOLT	2	2				
33	92995-06100	WASHER, SPRING	2	2				
34	92995-06600	WASHER	2	2				
35	61A-44120-22	HANDLE GEAR SHIFT ASSY	1	1				X
	61A-44120-32	HANDLE GEAR SHIFT ASSY	1	1				U
36	93210-09165	O-RING	1	1				
37	61A-44112-00	STAY, HANDLE GEAR SHIFT	1	1				
38	97013-06012	BOLT	1	1				
39	92903-06100	WASHER, SPRING	1	1				
40	92903-06600	WASHER, PLATE	1	1				
41	95313-08600	NUT	2	2				
42	90386-90M90	BUSH	2	2				
43	91490-20012	PIN, COTTER	1	1				
44	90201-09M02	WASHER, PLATE	1	1				
45	61A-15315-00	SEAL, CRANKCASE	1	1				
46	61A-42724-00	GROMMET	1	1				
47	61A-44138-00	WASHER	1	1				
48	97885-06008	SCREW, PAN HEAD	2	2				
49	65L-41632-01	LEVER, MAGNETO CONTROL	1	1				
50	6E5-48344-00	CABLE END, REMOTE CONTROL	1	1				
51	90468-18008	CLIP	1	1				
52	97013-08045	BOLT	1	1				
53	92990-08200	WASHER, PLAIN	2	2				

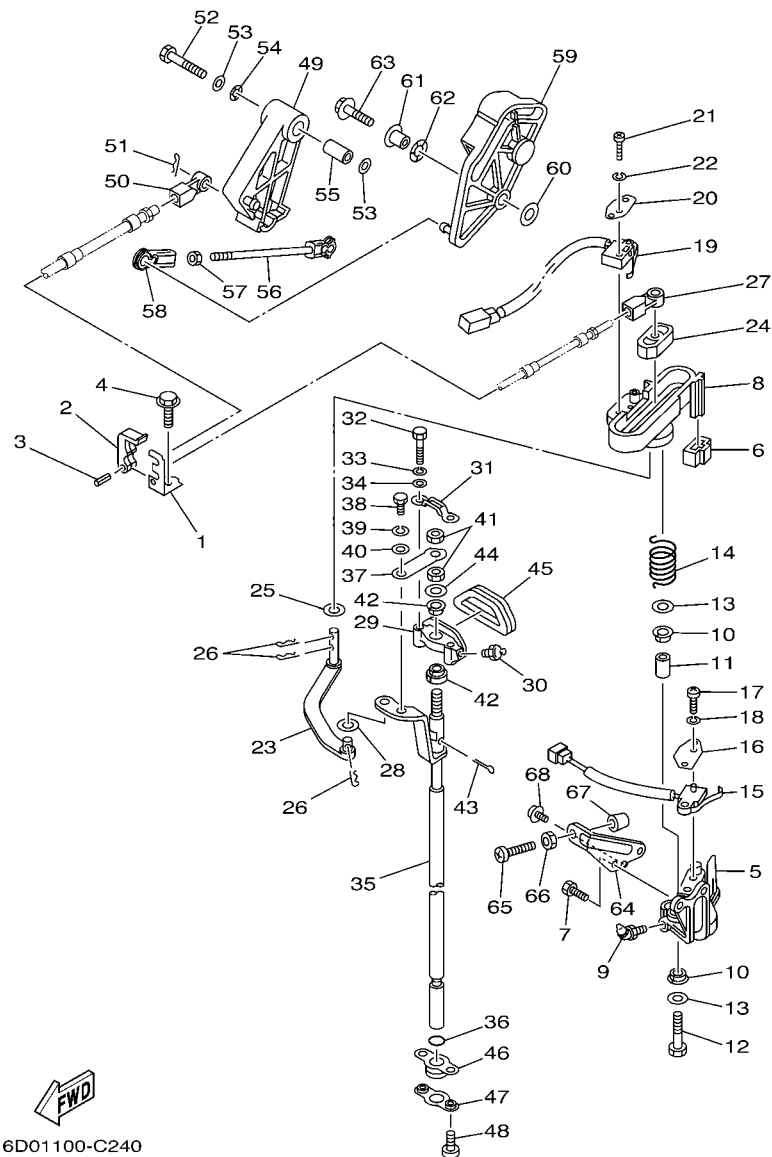


FIG. 24 CONTROL

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11				REMARKS
54	90206-12M00	WASHER, WAVE	1	1				
55	90387-08M16	COLLAR	1	1				
56	61A-41237-00	JOINT, LINK	1	1				
57	95380-05600	NUT	1	1				
58	6H4-41237-00	JOINT, LINK	1	1				
59	6D0-41230-00	CAM ACCELERATOR COMP	1	1				
60	90201-06M31	WASHER, PLATE	1	1				
61	90387-06M29	COLLAR	1	1				
62	90206-10M04	WASHER, WAVE	1	1				
63	90119-06MA4	BOLT, WITH WASHER	1	1				
64	69L-42744-00	STAY	1	1				
65	90157-06006	SCREW, PAN HEAD	1	1				
66	95380-06600	NUT, HEXAGON	1	1				
67	688-44194-00	CAP	1	1				
68	90159-05M25	SCREW, WITH WASHER	1	1				

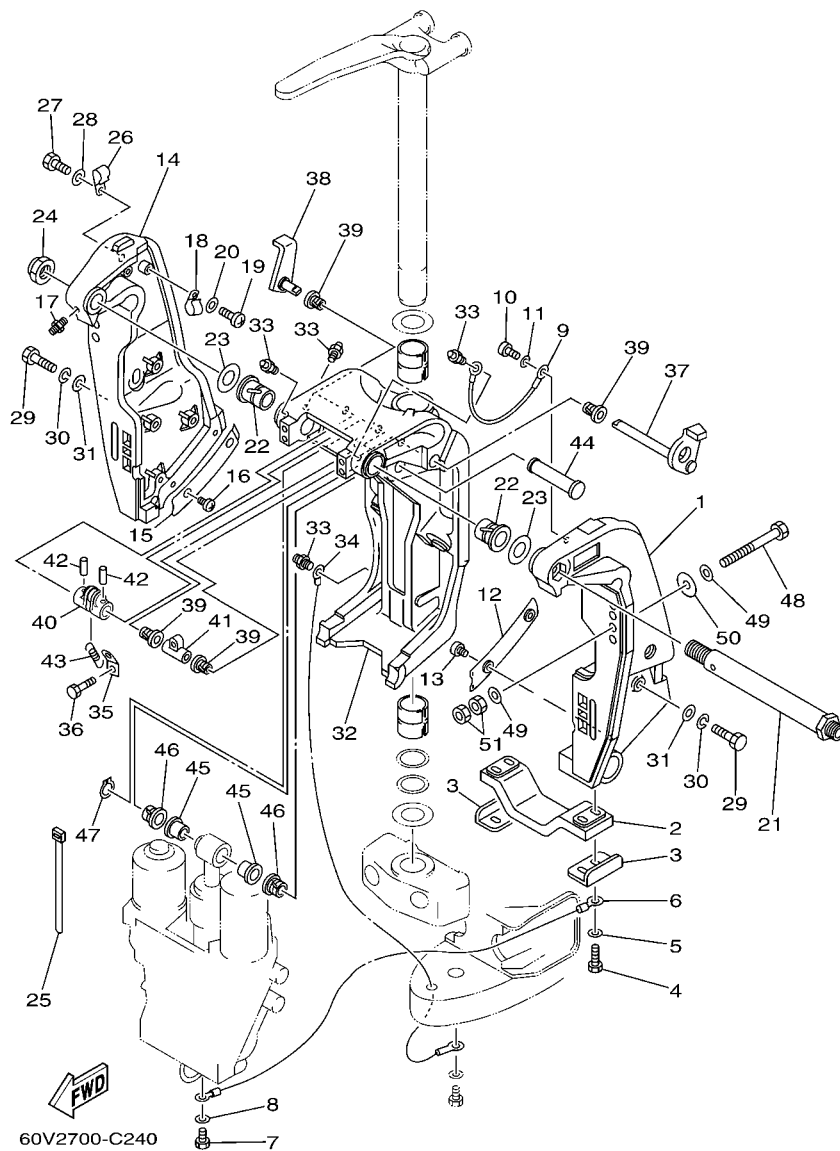


FIG. 25 BRACKET 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	69J-43111-01-8D	BRACKET, CLAMP	1	1			
2	6G5-45251-02	ANODE	1	1			
3	6G5-44526-00	PLATE	2	2			
4	97095-06025	BOLT	4	4			
5	92995-06600	WASHER	4	4			
6	6H1-82148-00	WIRE, LEAD 4	1	1			
7	97095-06010	BOLT	1	1			
8	92995-06600	WASHER	1	1			
9	6E5-82148-00	WIRE, LEAD 4	1	1			
10	97885-06012	SCREW, PAN HEAD	1	1			
11	92995-06600	WASHER	1	1			
12	61A-43132-00	WASHER, FRICTION	1	1			
13	97885-06010	SCREW, PAN HEAD	2	2			
14	69J-43112-01-8D	BRACKET, CLAMP	1	1			
15	61A-43133-00	WASHER, FRICTION	1	1			
16	97885-06010	SCREW, PAN HEAD	2	2			
17	93700-06M03	NIPPLE, GREASE	1	1			
18	90465-08M83	CLAMP	1	1			
19	97885-06012	SCREW, PAN HEAD	1	1			
20	92995-06600	WASHER	1	1			
21	6R3-43131-00	BOLT, CLAMP BRACKET	1	1			
22	90386-25M31	BUSH	2	2			
23	90201-26M59	WASHER, PLATE	2	2			
24	90185-22M11	NUT, SELF-LOCKING	1	1			
25	90465-11M10	CLAMP	4	4			
26	90465-08M83	CLAMP	1	1			
27	97095-06014	BOLT	1	1			

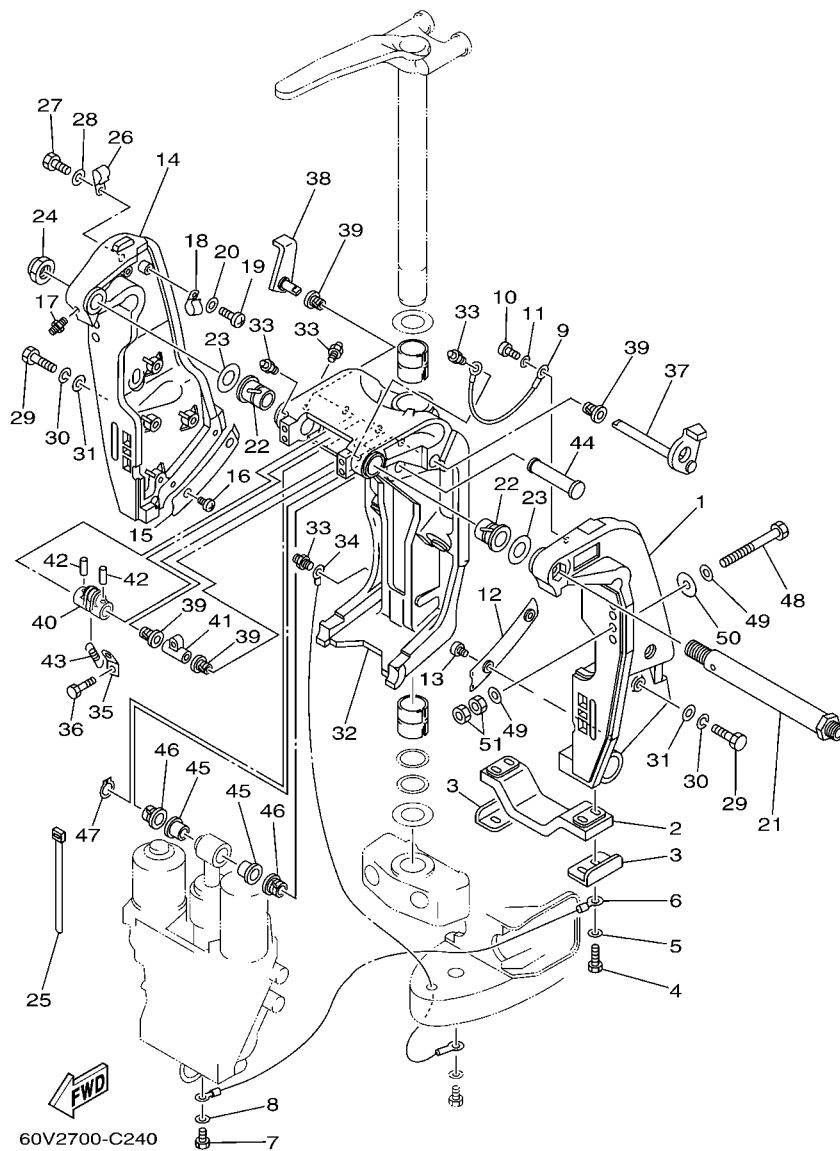


FIG. 25 BRACKET 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
28	92995-06600	WASHER	1	1			
29	97095-10045	BOLT	8	8			
30	92995-10100	WASHER	8	8			
31	92995-10600	WASHER	8	8			
32	61A-43311-21-8D	BRACKET, SWIVEL 1	1	1			X
	61A-43311-31-8D	BRACKET, SWIVEL 1	1	1			U
33	93700-06M03	NIPPLE, GREASE	5	5			
34	61A-82147-20	WIRE, LEAD 4	1	1			X
	61A-82147-30	WIRE, LEAD 4	1	1			U
35	6G5-43144-00	HOOK, SPRING	1	1			
36	97095-06010	BOLT	1	1			
37	61A-43181-01	LEVER, TILT STOP	1	1			
38	6G5-43185-02	LEVER, TILT STOP	1	1			
39	90386-10M16	BUSH	4	4			
40	6G5-43148-10	COLLAR, DISTANCE	1	1			
41	90387-10M02	COLLAR	1	1			
42	91690-30020	PIN, SPRING	2	2			
43	90506-20011	SPRING, TENSION	1	1			
44	6E5-43126-02	PIN, UPPER SHOCK MOUNT	1	1			
45	90386-18M63	BUSH	2	2			
46	90386-18M14	BUSH	2	2			
47	93410-18M02	CIRCLIP	1	1			
48	90101-12M05	BOLT (L:130MM)	4	4			UR
	90101-12M77	BOLT (L:150MM)	2	2			UR
49	90201-13M01	WASHER, PLATE	8	8			
50	90201-12M05	WASHER, PLATE	4	4			
51	95380-12600	NUT	8	8			

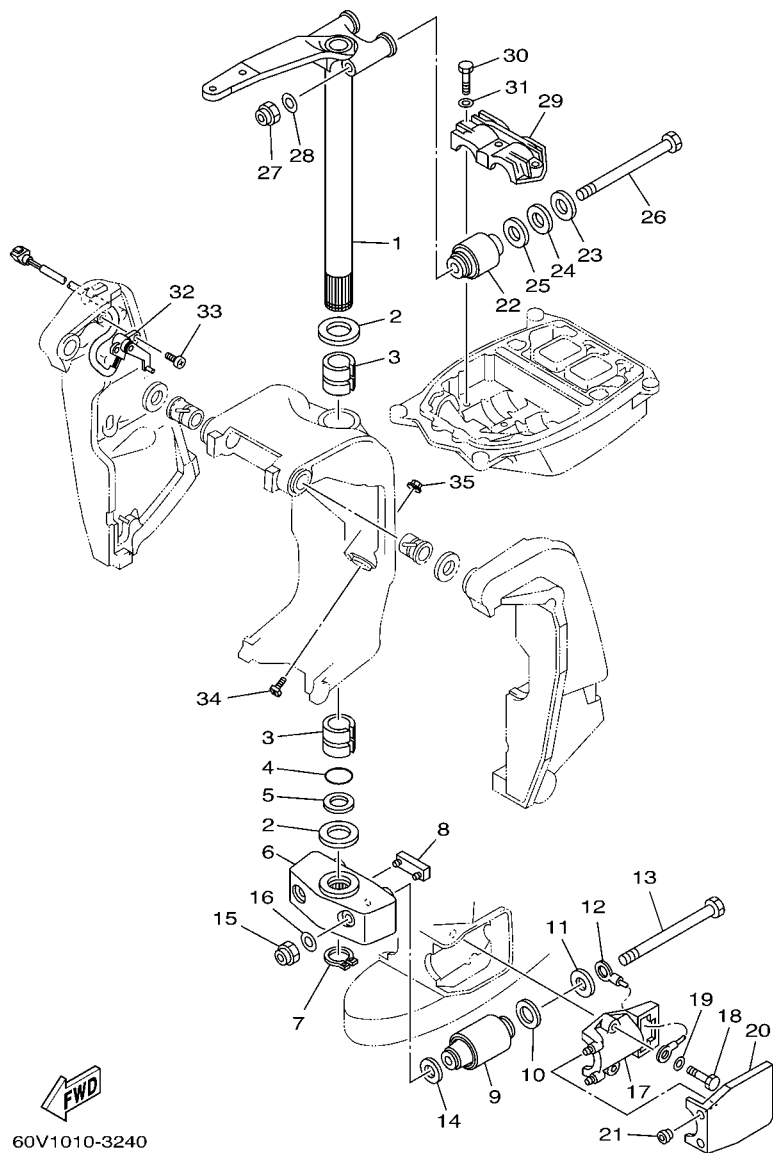


FIG. 26 BRACKET 2

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	60V-42510-20-8D	STEERING BRACKET ASSY	1	1			X
	60V-42510-30-8D	STEERING BRACKET ASSY	1	1			U
2	90201-40M00	WASHER, PLATE	2	2			
3	90386-39M89	BUSH	2	2			
4	93210-35321	O-RING	1	1			
5	90202-40M47	WASHER, PLATE	1	1			
6	61A-44551-01-8D	HOUSING, LOWER MOUNT RUBBER	1	1			
7	93410-37M04	CIRCLIP	1	1			
8	61A-44575-00	DAMPER, LOWER MOUNT RUBBER	1	1			
9	60V-44555-00-94	MOUNT DAMPER, LOWER SIDE	2	2			
10	90202-32M19	WASHER, PLATE	2	2			
11	90201-16M55	WASHER, PLATE	2	2			
12	6E5-82149-00	WIRE, LEAD 3	1	1			
13	90109-14M48	BOLT	2	2			
14	90201-15M58	WASHER, PLATE	2	2			
15	95380-14800	NUT	2	2			
16	92995-14600	WASHER	2	2			
17	61A-44552-01-94	HOUSING, LOWER MOUNT RUBBER	2	2			
18	97095-10045	BOLT	4	4			
19	92995-10600	WASHER	4	4			
20	61A-44553-00-8D	COVER, LOWER MOUNT	2	2			
21	6A0-15789-00	DAMPER	4	4			
22	60V-44514-00-94	MOUNT DAMPER, UPPER SIDE	2	2			
23	90201-16M01	WASHER, PLATE	2	2			
24	90202-28M46	WASHER, PLATE	2	2			
25	90201-28M01	WASHER, PLATE	2	2			
26	90109-14M10	BOLT	2	2			

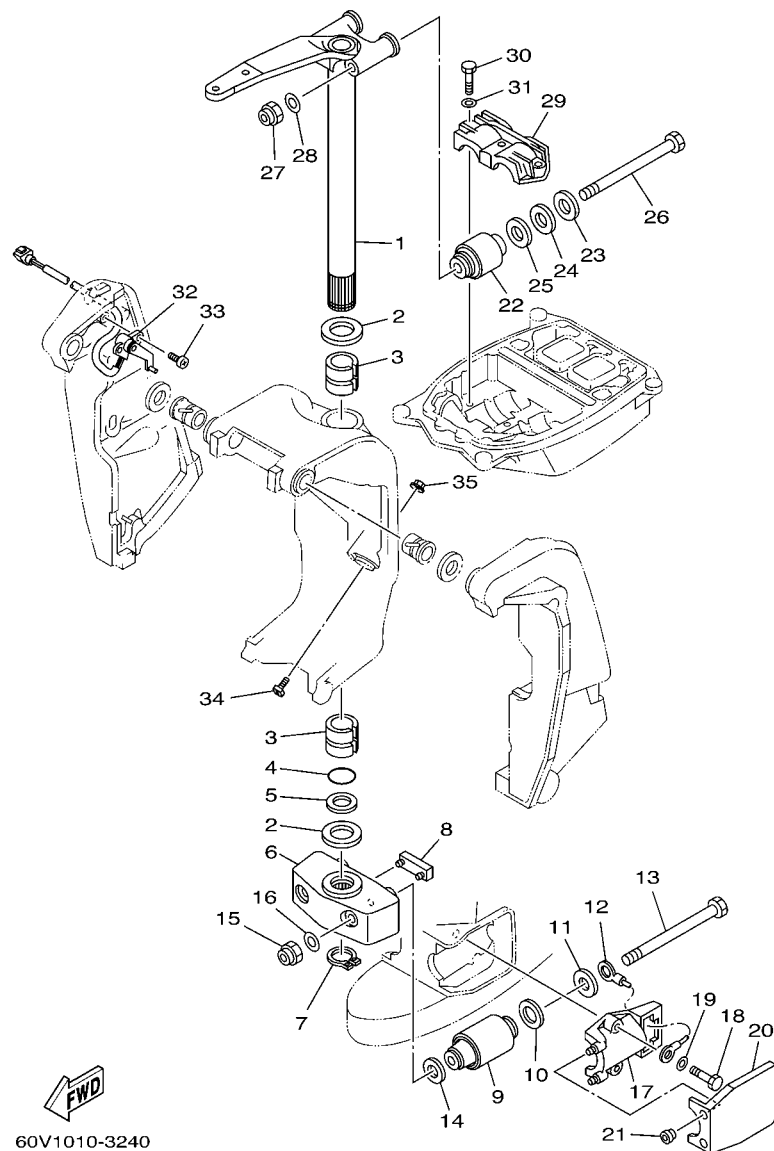


FIG. 26 BRACKET 2

[illegible]

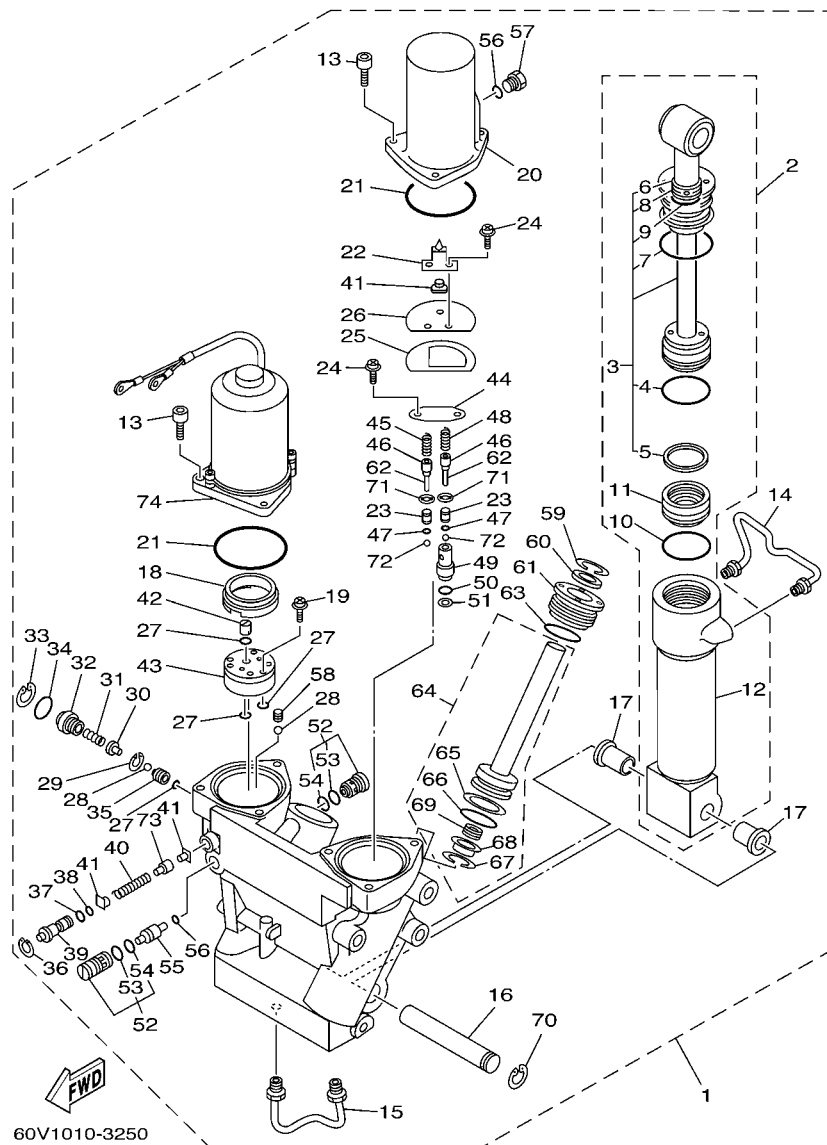


FIG. 27 POWER TRIM & TILT ASSY 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	60V-43800-00-4D	POWER TRIM & TILT ASSY	1	1			
2	61A-43840-01	.POWER TILT ASSY	1	1			
3	61A-43810-00	..TILT PISTON SUB ASSY	1	1			
4	61A-43861-00	...O-RING	1	1			
5	61A-43871-00	...RING, BACK UP	1	1			
6	93106-19N50	...OIL SEAL	1	1			
7	6H1-43861-00	...O-RING	1	1			
8	6H1-43872-00	...RING, BACK UP	1	1			
9	61A-4389H-00	...O-RING	1	1			
10	61A-43861-00	..O-RING	1	1			
11	6H1-43814-00	..PISTON, FREE	1	1			
12	61A-43813-01	..CYLINDER, TILT	1	1			
13	69J-43888-00	.BOLT, SOCKET	6	6			
14	61A-43835-01	.PIPE	1	1			
15	61A-43833-01	.PIPE	1	1			
16	61A-43818-00	.PIN, LOWER SHOCK MOUNT	1	1			
17	90386-18M14	.BUSH	2	2			
18	6H1-43817-00	.FILTER 2	1	1			
19	97607-04230	.SCREW,WITH WASHER	3	3			
20	69J-43828-00	.BODY, RESERVOIR	1	1			
21	6H1-43869-00	.O-RING	2	2			
22	61A-4384L-00	.SPRING, TRIM DOWN	1	1			
23	6T4-43851-00	.SEAT, RELIEF VALVE	2	2			
24	97607-05210	.SCREW,WITH WASHER	4	4			
25	61A-4384K-00	.PLATE, TRIM DOWN	1	1			
26	61A-4384J-00	.SEAL, TRIM DOWN	1	1			
27	93210-064A5	.O-RING	4	4			

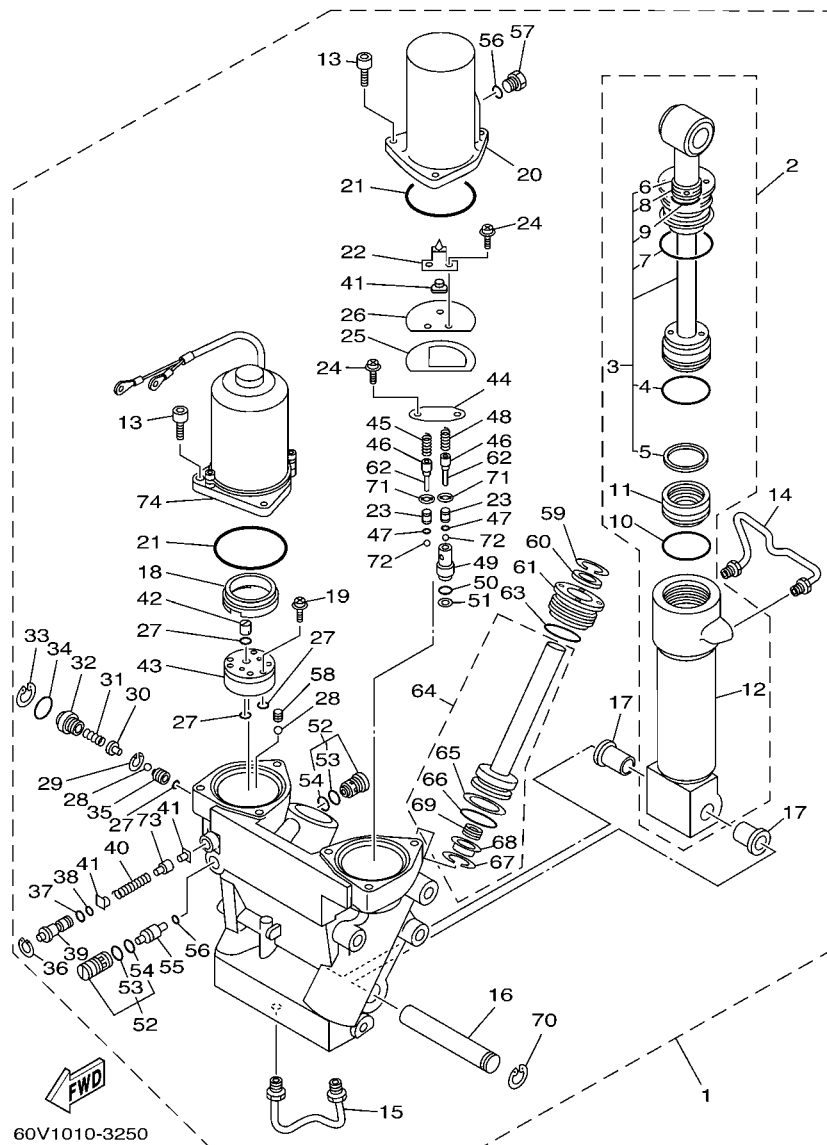


FIG. 27 POWER TRIM & TILT ASSY 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
28	93505-32038	.BALL	2	2			
29	61A-43875-00	.RING, SNAP	1	1			
30	61A-43848-00	.ROD, MANUAL RELEASE	1	1			
31	61A-43854-00	.SPRING, MANUAL RELEASE	1	1			
32	61A-43845-00	.SCREW, MANUAL RELEASE	1	1			
33	6H1-43875-00	.RING, SNAP	1	1			
34	93210-18397	.O-RING	1	1			
35	61A-43847-00	.SEAT, MANUAL VALVE	1	1			
36	6T4-43876-00	.RING, SNAP	1	1			
37	93210-07003	.O-RING	1	1			
38	93210-06001	.O-RING	1	1			
39	6T4-43849-00	.PIN, VALVE SUPPORT	1	1			
40	61A-4385H-00	.SPRING, SEAL	1	1			
41	61A-4384F-00	.SEAL, MAIN VALVE	3	3			
42	6H1-43831-00	.CONNECTOR, SHAFT	1	1			
43	6T4-43830-00	.GEAR PUMP ASSY	1	1			
44	61A-4382K-00	.CAP, RELIEF VALVE	1	1			
45	6H1-43856-10	.SPRING, DOWN RELIEF	1	1			
46	6T4-43844-00	.PIN, VALVE SUPPORT	2	2			
47	6T4-4384G-00	.SEAL, RELIEF VALVE	2	2			
48	6T4-43855-00	.SPRING, UP RELIEF	1	1			
49	6T4-43895-00	.SEAT, RELIEF VALVE	1	1			
50	93210-10M74	.O-RING	1	1			
51	6H1-43816-00	.FILTER 1	1	1			
52	6T4-43802-03	.VALVE SUB ASSY	2	2			
53	6H1-43866-00	..O-RING	1	1			
54	6H1-43867-00	..O-RING	1	1			

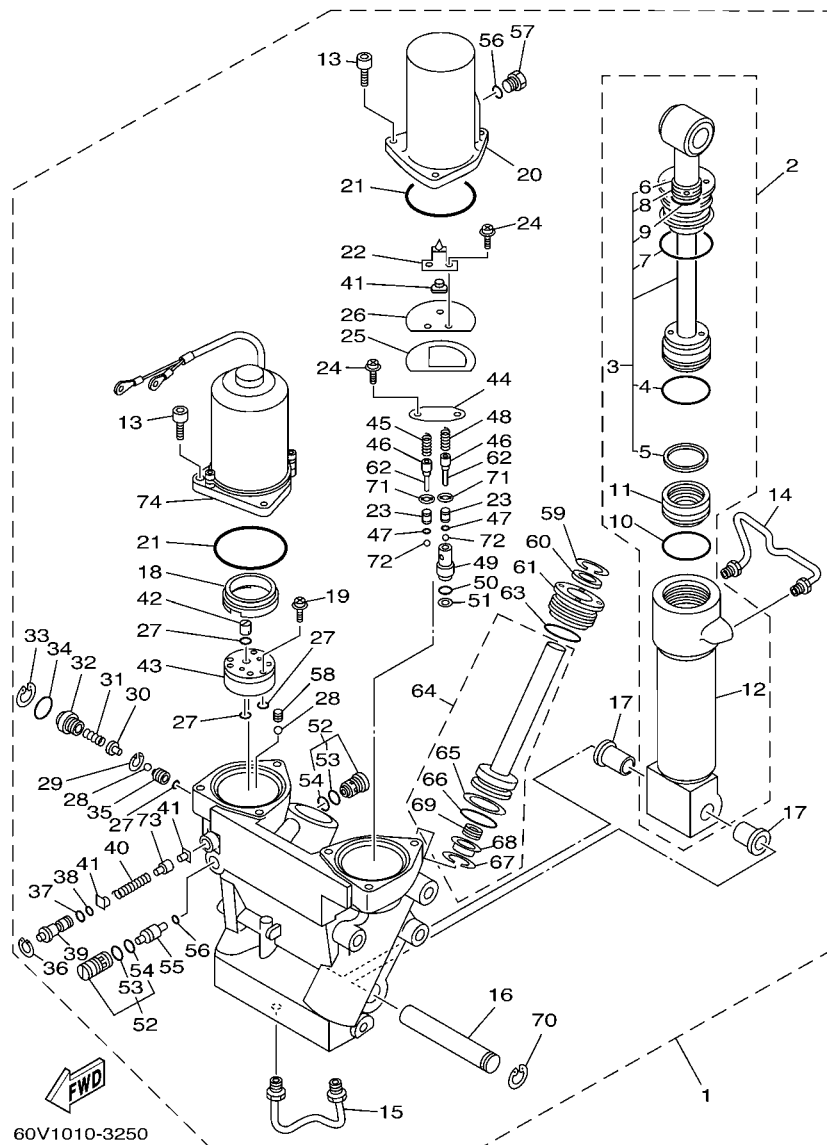


FIG. 27 POWER TRIM & TILT ASSY 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11		REMARKS
55	6T4-43841-00	.PISTON, SHUTTLE	1	1		
56	93210-09165	.O-RING	2	2		
57	6H1-43829-00	.PLUG, RESERVOIR	1	1		
58	61A-43878-00	.BOLT, SOCKET	1	1		
59	6T4-43875-01	.RING, SNAP	2	2		
60	61A-43822-00	.SEAL, TRIM DUST	2	2		
61	61A-43821-00	.SCREW, TRIM CYLINDER END	2	2		
62	91609-10014	.PIN, SPRING	2	2		
63	61A-43861-00	.O-RING	2	2		
64	61A-43820-10	.TRIM PISTON SUB ASSY	2	2		
65	61A-43874-00	..RING, BACK UP	1	1		
66	61A-43864-00	..O-RING	1	1		
67	61A-43875-10	..RING, SNAP	1	1		
68	61A-4383H-11	..HOSE, OIL 5	1	1		
69	61A-4384H-10	..SPRING	1	1		
70	61A-43876-00	.RING, SNAP	1	1		
71	6T4-43893-00	.WASHER	2	2		
72	93501-08001	.BALL	2	2		
73	61A-4382A-00	.ADAPTOR 1	1	1		
74	69J-43880-00	.MOTOR ASSY	1	1		REFER TO FIG.28

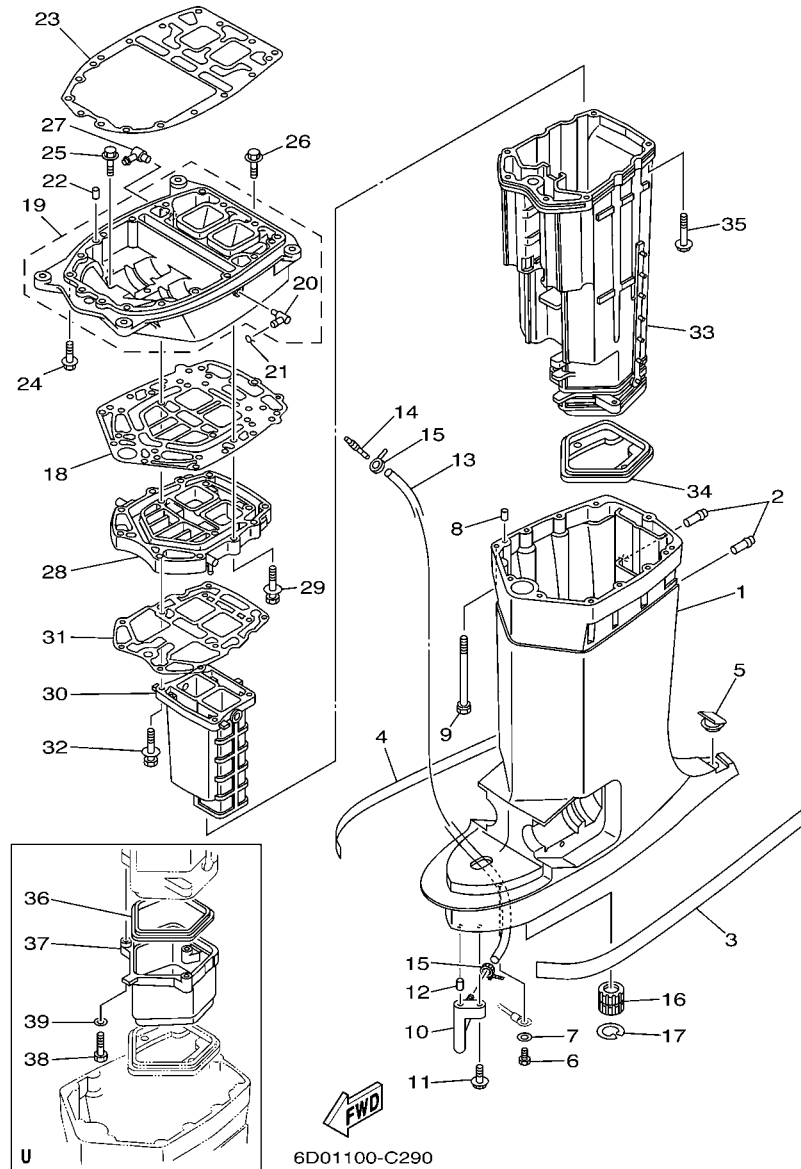
 


FIG. 29 UPPER CASING

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6D0-45111-20-8D	CASING, UPPER	1	1			X
	6D0-45111-30-8D	CASING, UPPER	1	1			U
2	6E5-24377-00	PIPE, JOINT 3	2	2			
3	61A-42791-S0	MARK 1	1	1			
4	61A-42792-S0	MARK	1	1			
5	61A-45155-00	CAP	1	1			
6	97095-06010	BOLT	1	1			
7	92995-06600	WASHER	1	1			
8	93608-12M05	PIN, DOWEL	2	2			
9	90119-08052	BOLT, WITH WASHER	8	8			
10	61A-45378-00	NIPPLE, HOSE	1	1			
11	90119-06M17	BOLT, WITH WASHER	1	1			
12	93606-12019	PIN, DOWEL	1	1			
13	90445-07MF0	HOSE (L1030)	1	1			X
	90445-07M21	HOSE (L1160)	1	1			U
14	6E5-83558-00	END, NIPPLE	1	1			
15	90465-11M10	CLAMP	2	2			
16	6E5-45318-00	BUSHING, DRIVE SHAFT	1	1			
17	93420-36M01	CIRCLIP	1	1			
18	60V-45114-00	GASKET, UPPER CASING	1	1			
19	6D0-41137-00-94	GUIDE, EXHAUST	1	1			
20	676-11372-00	.NIPPLE, HOSE	1	1			
21	90467-08M10	CLIP	1	1			
22	93608-12M05	PIN, DOWEL	2	2			
23	60V-45113-01	GASKET, UPPER CASING	1	1			
24	90119-08068	BOLT, WITH WASHER	4	4			
25	90119-08072	BOLT, WITH WASHER	4	4			

[illegible]

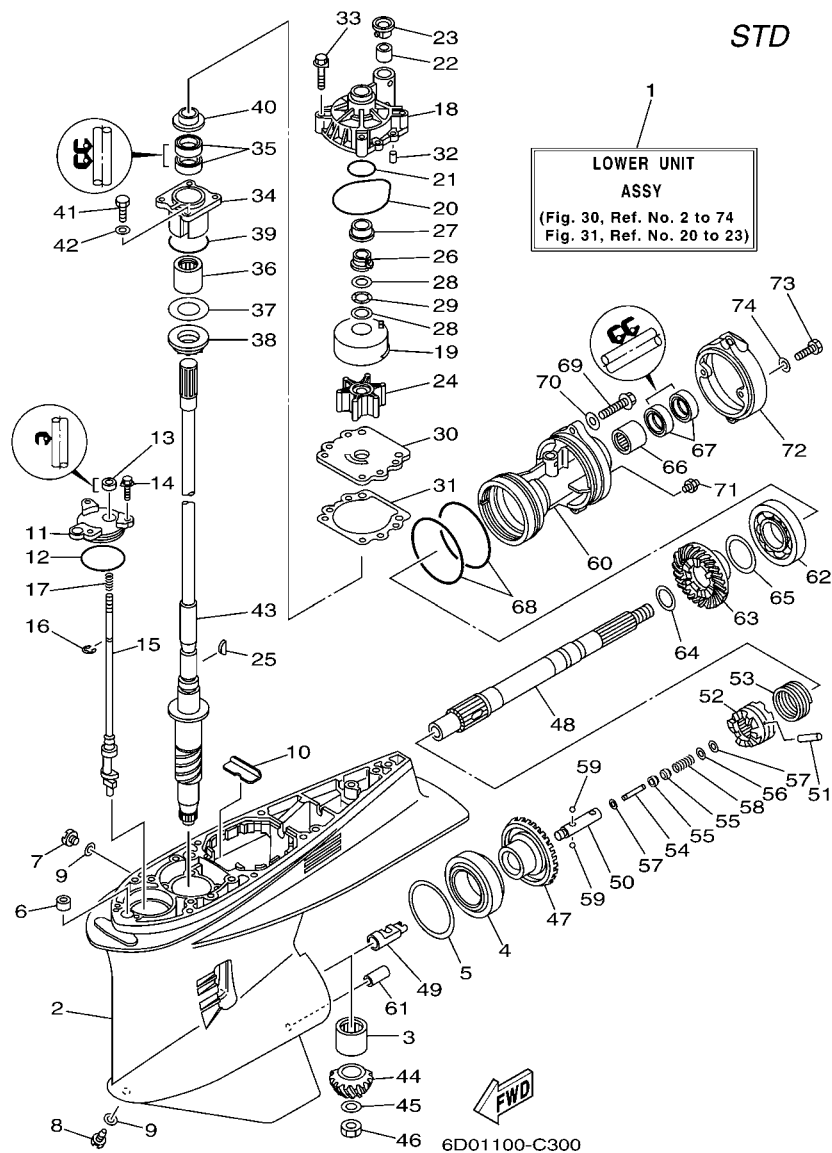


FIG. 30 LOWER CASING & DRIVE 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6D0-45300-20-8D	LOWER UNIT ASSY	1				X
	6D0-45300-30-8D	LOWER UNIT ASSY	1				U
2	6D0-45301-00-8D	CASING, LOWER	1				
3	93311-83280	BEARING	1				
4	93332-000W1	BEARING	1				
5	61A-45567-00-10	SHIM (T:0.10MM)	1				UR
	61A-45567-00-12	SHIM (T:0.12MM)	1				UR
	61A-45567-00-15	SHIM (T:0.15MM)	1				UR
	61A-45567-00-18	SHIM (T:0.18MM)	1				UR
	61A-45567-00-30	SHIM (T:0.30MM)	1				UR
	61A-45567-00-40	SHIM (T:0.40MM)	1				UR
	61A-45567-00-50	SHIM (T:0.50MM)	1				UR
6	663-44366-00	DAMPER, WATER SEAL	1				
7	90340-08002	PLUG, STRAIGHT SCREW	1				
8	688-45341-10	PLUG, DRAIN	1				
9	90430-08020	GASKET	2				
10	61A-45376-00-94	GUIDE, SEAL DAMPER	1				
11	61A-45321-01	PLATE	1				
12	93210-64488	O-RING	1				
13	93106-09014	OIL SEAL	1				
14	90119-06M10	BOLT, WITH WASHER	3				
15	60V-44150-00	SHIFT CAM ASSY	1				
16	99001-08600	CIRCLIP	1				
17	90501-11M10	SPRING, COMPRESSION	1				
18	61A-44311-01	HOUSING, WATER PUMP	1				
19	61A-44322-02	INSERT, CARTRIDGE	1				
20	93210-86M38	O-RING	1				

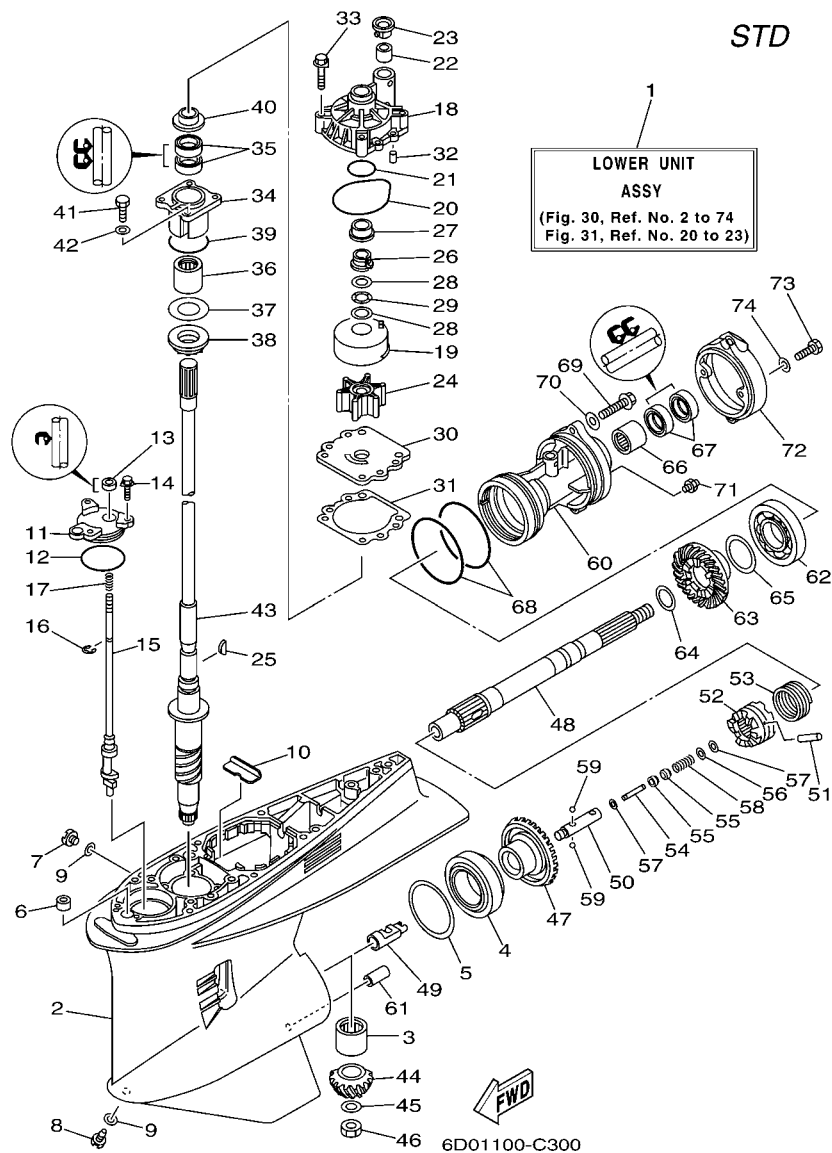


FIG. 30 LOWER CASING & DRIVE 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
21	93210-37160	O-RING	1				
22	6E5-44365-00	DAMPER, WATER SEAL	1				
23	6E5-44312-00	COVER, WATER PUMP HOUSING	1				
24	6E5-44352-01	IMPELLER	1				
25	90280-04M05	KEY, WOODRUFF	1				
26	61A-45538-00	SPACER 1	1				
27	61A-45527-00	COLLAR, DRIVE SHAFT	1				
28	90201-22M01	WASHER, PLATE	2				
29	90206-22M19	WASHER, WAVE	1				
30	6G5-44323-00	OUTER PLATE, CARTRIDGE	1				
31	6E5-44315-A0	GASKET, WATER PUMP	1				
32	93606-12019	PIN, DOWEL	2				
33	90119-08M14	BOLT, WITH WASHER	4				
34	61A-45331-00-94	HOUSING, BEARING	1				
35	93101-28M16	OIL SEAL	2				
36	93317-330U2	BEARING	1				
37	61A-45587-00-10	SHIM (T:0.10MM)	1				UR
	61A-45587-00-12	SHIM (T:0.12MM)	1				UR
	61A-45587-00-15	SHIM (T:0.15MM)	1				UR
	61A-45587-00-18	SHIM (T:0.18MM)	1				UR
	61A-45587-00-30	SHIM (T:0.30MM)	1				UR
	61A-45587-00-40	SHIM (T:0.40MM)	1				UR
	61A-45587-00-50	SHIM (T:0.50MM)	1				UR
38	93341-930U9	BEARING	1				
39	93210-55M14	O-RING	1				
40	6E5-45344-00	COVER, OIL SEAL	1				
41	97095-08025	BOLT	4				

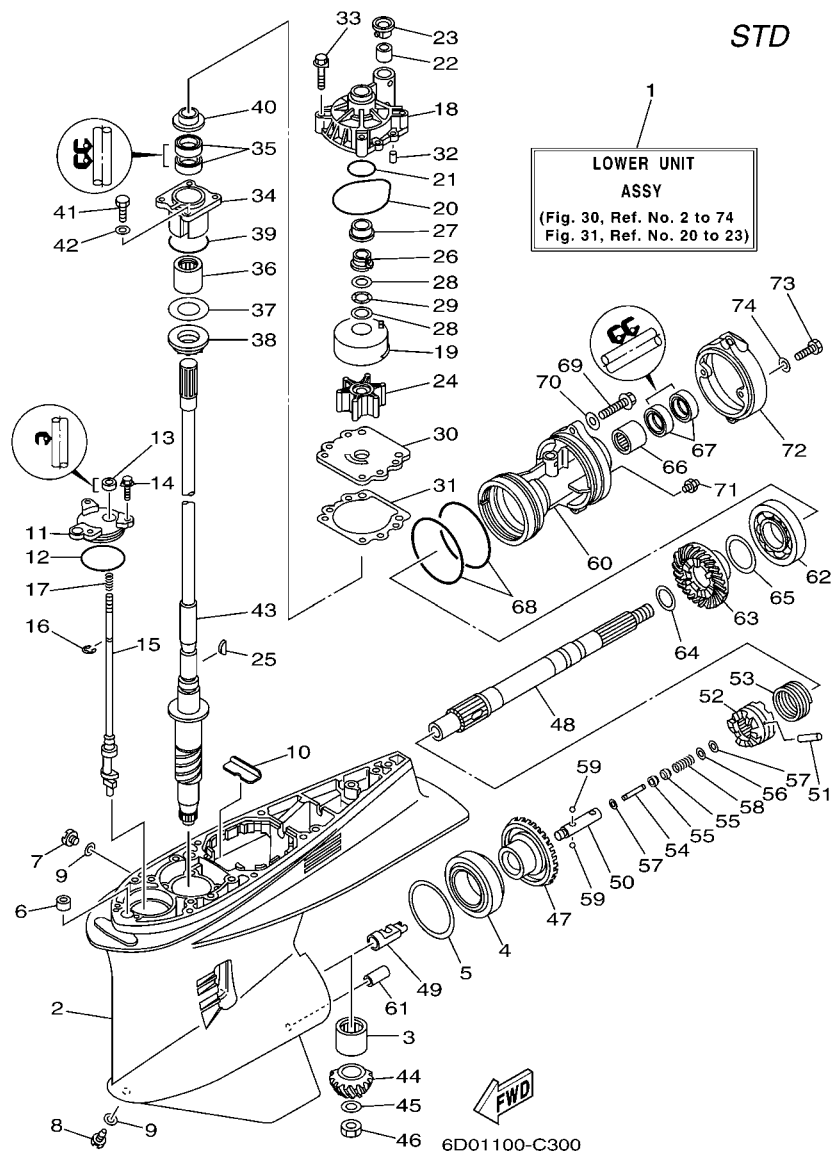


FIG. 30 LOWER CASING & DRIVE 1

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
42	92995-08600	WASHER	4				
43	60V-45501-20	DRIVE SHAFT COMP.	1				X
	60V-45501-30	DRIVE SHAFT COMP.	1				U
44	60X-45551-00	PINION	1				
45	90201-16M00	WASHER, PLATE	1				
46	90170-16M19	NUT	1				
47	60X-45560-00	GEAR	1				
48	60V-45611-00	SHAFT, PROPELLER	1				
49	61A-45641-02	SHIFTER	1				
50	61A-45634-01	SLIDE, SHIFT	1				
51	61A-45632-00	PIN, CROSS	1				
52	60V-45631-00	CLUTCH, DOG	1				
53	61A-45633-00	RING, CROSS PIN	1				
54	6H1-45668-00	SHAFT, FREE	1				
55	61A-45635-00	PLUNGER, SHIFT	2				
56	90201-02M00	WASHER, PLATE	1				
57	90183-02M03	NUT, SPRING	2				
58	90501-10M77	SPRING, COMPRESSION	1				
59	93501-04011	BALL	2				
60	6D0-45332-00-94	HOUSING, BEARING	1				
61	99590-10114	PIN, DOWEL	1				
62	93306-210U0	BEARING	1				
63	69L-45571-00	GEAR	1				
64	90201-31M00	WASHER, PLATE	1				
65	61A-45577-00-10	SHIM (T:0.10MM)	1				UR
	61A-45577-00-12	SHIM (T:0.12MM)	1				UR
	61A-45577-00-15	SHIM (T:0.15MM)	1				UR

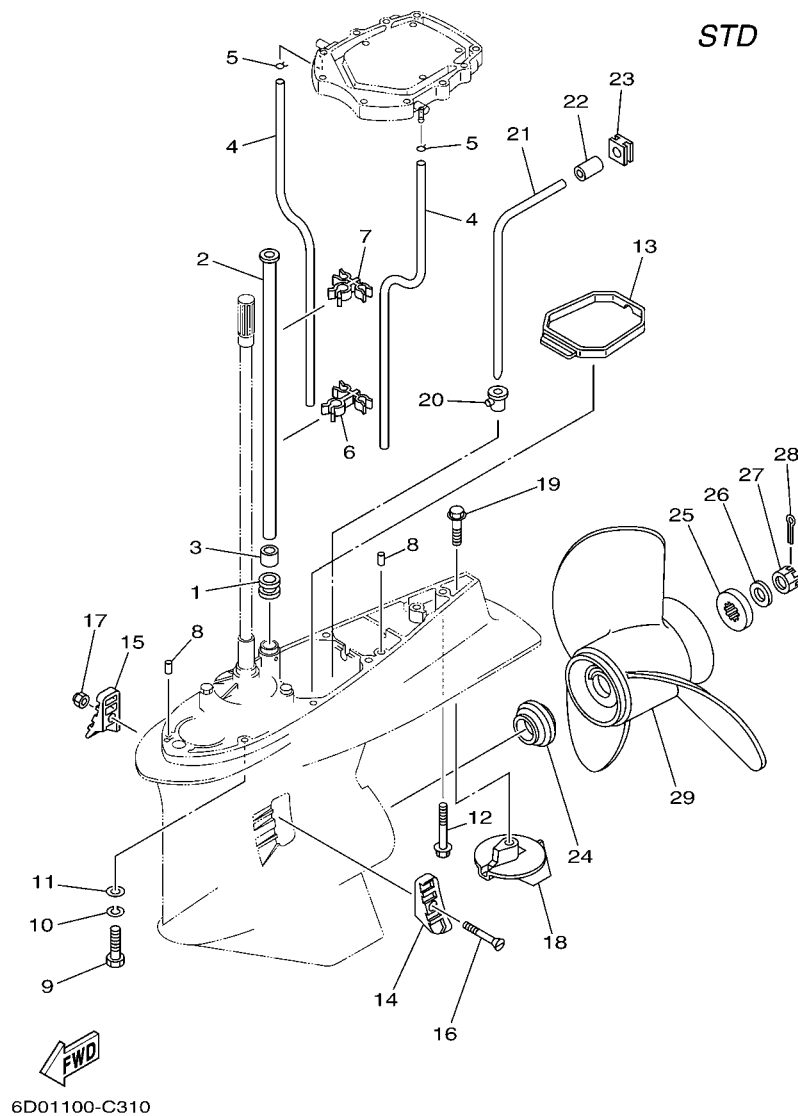


FIG. 31 LOWER CASING & DRIVE 2

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6E5-44366-00	DAMPER, WATER SEAL	1				
2	61A-44361-20	TUBE, WATER	1				X
	61A-44361-30	TUBE, WATER	1				U
3	6E5-44365-00	DAMPER, WATER SEAL	1				
4	90445-09111	HOSE (L430)	2				X
	90445-09024	HOSE (L485)	2				U
5	90467-08M10	CLIP	2				
6	90464-15006	CLAMP	1				
7	90464-15005	CLAMP	1				
8	93608-12M05	PIN, DOWEL	2				
9	97095-10045	BOLT	7				
10	92995-10100	WASHER	7				
11	92995-10600	WASHER	7				
12	90119-10MA2	BOLT, WITH WASHER	1				
13	6D0-45375-00	DAMPER, SEAL	1				
14	61A-45214-10	COVER, WATER INLET	1				
15	61A-45215-10	COVER, WATER INLET	1				
16	90152-05003	SCREW, COUNTERSUNK	1				
17	90185-05002	NUT, SELF-LOCKING	1				
18	69L-45371-00	TAB-TRIM	1				
19	90105-10M00	BOLT, FLANGE	1				
20	6D0-44367-00	DAMPER, WATER SEAL	1				
21	6D0-44362-00	TUBE, WATER	1				
22	6D0-44365-00	DAMPER, WATER SEAL	1				
23	6D0-44366-00	DAMPER, WATER SEAL	1				
24	69J-45987-00	SPACER	1				
25	688-45997-01	SPACER	1				

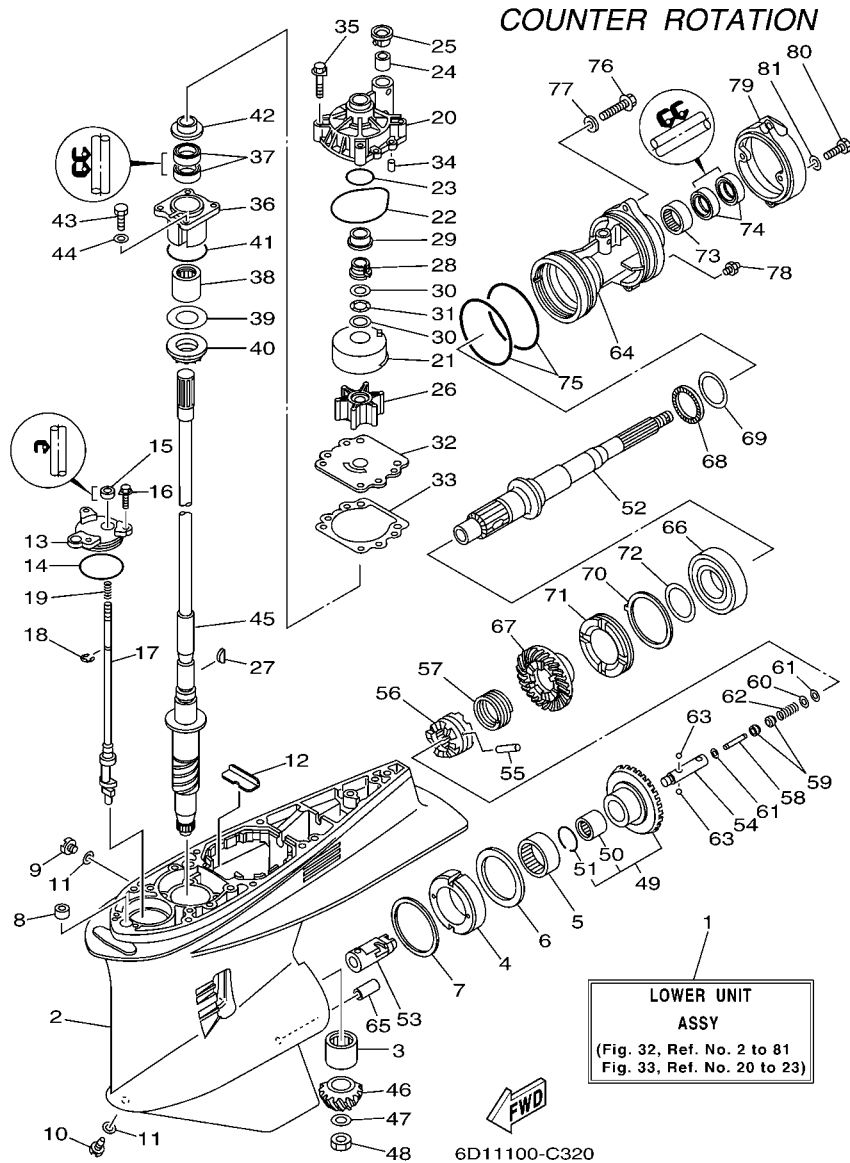


FIG. 32 LOWER CASING & DRIVE 3

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6D1-45300-20-8D	LOWER UNIT ASSY		1			X
	6D1-45300-30-8D	LOWER UNIT ASSY		1			U
2	6D0-45301-00-8D	CASING, LOWER		1			
3	93311-83280	BEARING		1			
4	61B-45538-01	SPACER 1		1			
5	93315-660W3	BEARING		1			
6	93341-670V0	BEARING		1			
7	61A-45567-00-10	SHIM (T:0.10MM)		1			UR
	61A-45567-00-12	SHIM (T:0.12MM)		1			UR
	61A-45567-00-15	SHIM (T:0.15MM)		1			UR
	61A-45567-00-18	SHIM (T:0.18MM)		1			UR
	61A-45567-00-30	SHIM (T:0.30MM)		1			UR
	61A-45567-00-40	SHIM (T:0.40MM)		1			UR
	61A-45567-00-50	SHIM (T:0.50MM)		1			UR
8	663-44366-00	DAMPER, WATER SEAL		1			
9	90340-08002	PLUG, STRAIGHT SCREW		1			
10	688-45341-10	PLUG, DRAIN		1			
11	90430-08020	GASKET		2			
12	61A-45376-00-94	GUIDE, SEAL DAMPER		1			
13	61A-45321-01	PLATE		1			
14	93210-64488	O-RING		1			
15	93106-09014	OIL SEAL		1			
16	90119-06M10	BOLT, WITH WASHER		3			
17	60W-44150-00	SHIFT CAM ASSY		1			
18	99001-08600	CIRCLIP		1			
19	90501-11M10	SPRING, COMPRESSION		1			
20	61A-44311-01	HOUSING, WATER PUMP		1			

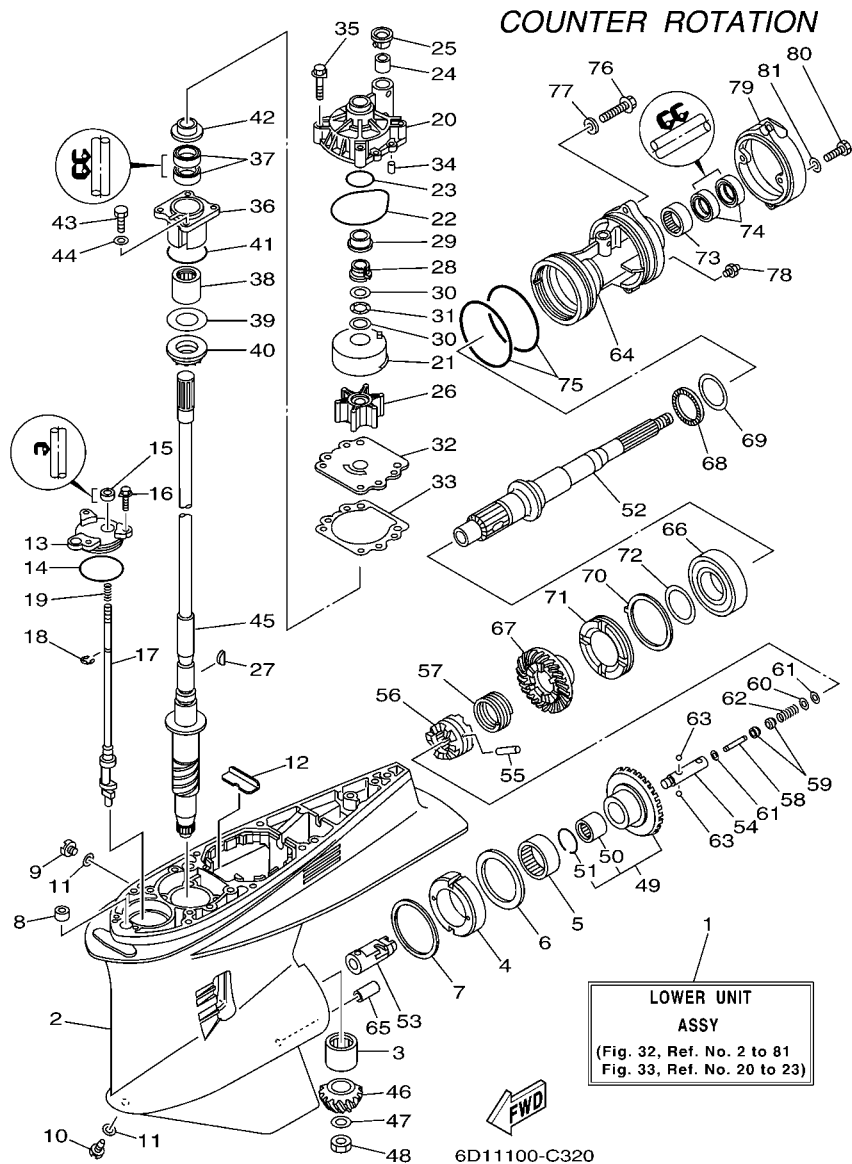


FIG. 32 LOWER CASING & DRIVE 3

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
21	61A-44322-02	INSERT, CARTRIDGE		1			
22	93210-86M38	O-RING		1			
23	93210-37160	O-RING		1			
24	6E5-44365-00	DAMPER, WATER SEAL		1			
25	6E5-44312-00	COVER, WATER PUMP HOUSING		1			
26	6E5-44352-01	IMPELLER		1			
27	90280-04M05	KEY, WOODRUFF		1			
28	61A-45538-00	SPACER 1		1			
29	61A-45527-00	COLLAR, DRIVE SHAFT		1			
30	90201-22M01	WASHER, PLATE		2			
31	90206-22M19	WASHER, WAVE		1			
32	6G5-44323-00	OUTER PLATE, CARTRIDGE		1			
33	6E5-44315-A0	GASKET, WATER PUMP		1			
34	93606-12019	PIN, DOWEL		2			
35	90119-08M14	BOLT, WITH WASHER		4			
36	61A-45331-00-94	HOUSING, BEARING		1			
37	93101-28M16	OIL SEAL		2			
38	93317-330U2	BEARING		1			
39	61A-45587-00-10	SHIM (T:0.10MM)		1			UR
	61A-45587-00-12	SHIM (T:0.12MM)		1			UR
	61A-45587-00-15	SHIM (T:0.15MM)		1			UR
	61A-45587-00-18	SHIM (T:0.18MM)		1			UR
	61A-45587-00-30	SHIM (T:0.30MM)		1			UR
	61A-45587-00-40	SHIM (T:0.40MM)		1			UR
	61A-45587-00-50	SHIM (T:0.50MM)		1			UR
40	93341-930U9	BEARING		1			
41	93210-55M14	O-RING		1			

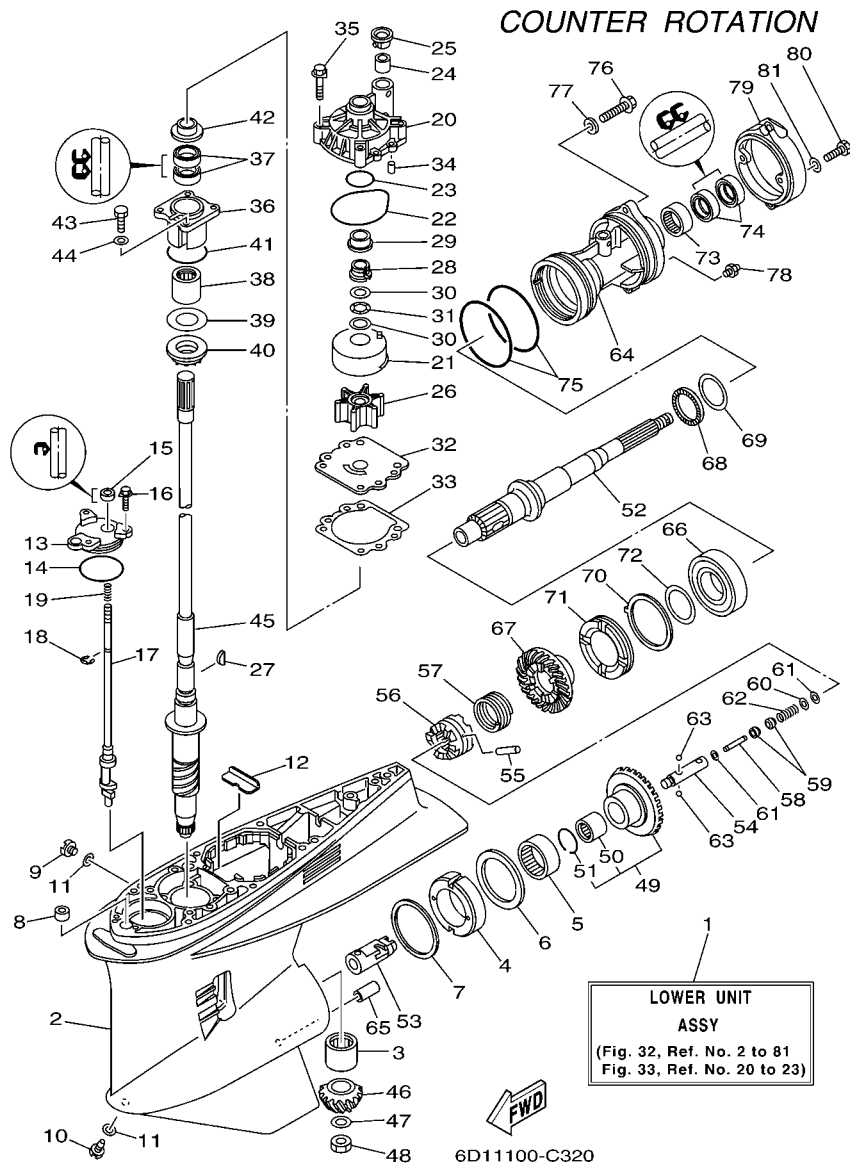


FIG. 32 LOWER CASING & DRIVE 3

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11				REMARKS
42	6E5-45344-00	COVER, OIL SEAL		1				
43	97095-08025	BOLT		4				
44	92995-08600	WASHER		4				
45	60V-45501-20	DRIVE SHAFT COMP.		1				X
	60V-45501-30	DRIVE SHAFT COMP.		1				U
46	60X-45551-00	PINION		1				
47	90201-16M00	WASHER, PLATE		1				
48	90170-16M19	NUT		1				
49	6D1-45560-00	GEAR		1				
50	93317-62891	.BEARING		1				
51	93450-37097	.CIRCLIP		1				
52	69K-45611-00	SHAFT, PROPELLER		1				
53	61B-45641-01	SHIFTER		1				
54	61A-45634-01	SLIDE, SHIFT		1				
55	61A-45632-00	PIN, CROSS		1				
56	60V-45631-00	CLUTCH, DOG		1				
57	61A-45633-00	RING, CROSS PIN		1				
58	6H1-45668-00	SHAFT, FREE		1				
59	61A-45635-00	PLUNGER, SHIFT		2				
60	90201-02M00	WASHER, PLATE		1				
61	90183-02M03	NUT, SPRING		2				
62	90501-10M77	SPRING, COMPRESSION		1				
63	93501-04011	BALL		2				
64	6D1-45332-00-94	HOUSING, BEARING		1				
65	99590-10114	PIN, DOWEL		1				
66	93332-00048	BEARING		1				
67	6D1-45571-00	GEAR		1				

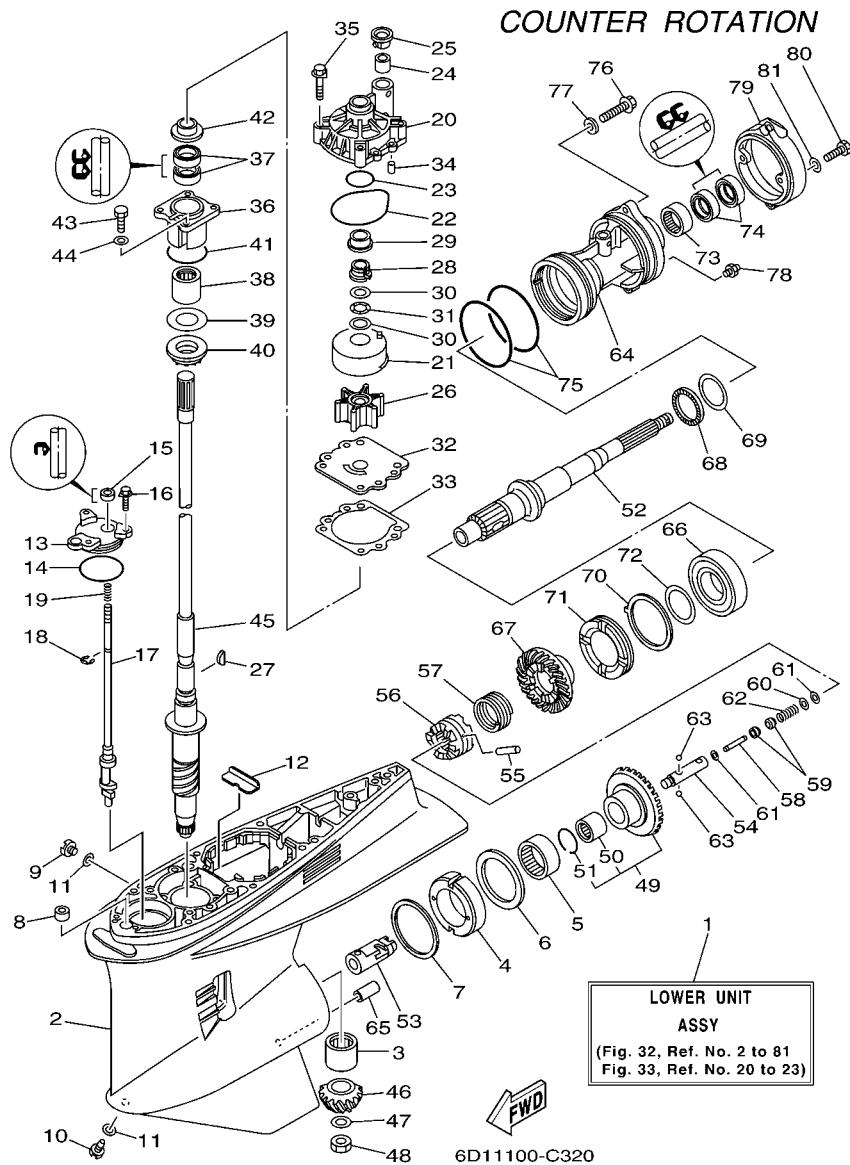


FIG. 32 LOWER CASING & DRIVE 3

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
68	93341-440U5	BEARING		1			
69	6K1-45578-01-10	SHIM (T:0.10MM)		1			UR
	6K1-45578-01-12	SHIM (T:0.12MM)		1			UR
	6K1-45578-01-15	SHIM (T:0.15MM)		1			UR
	6K1-45578-01-18	SHIM (T:0.18MM)		1			UR
---	6K1-45578-01-30	SHIM (T:0.30MM)		1			UR
	6K1-45578-01-40	SHIM (T:0.40MM)		1			UR
	6K1-45578-01-50	SHIM (T:0.50MM)		1			UR
70	61B-45383-00	WASHER, CLAW		1			
71	69K-45384-00	NUT		1			
---	69K-45577-00	SHIM (T:0.10MM)		1			UR
	69K-45577-10	SHIM (T:0.12MM)		1			UR
	69K-45577-20	SHIM (T:0.15MM)		1			UR
	69K-45577-30	SHIM (T:0.18MM)		1			UR
	69K-45577-40	SHIM (T:0.30MM)		1			UR
---	69K-45577-50	SHIM (T:0.40MM)		1			UR
	69K-45577-60	SHIM (T:0.50MM)		1			UR
73	93315-43064	BEARING		1			
74	93101-30002	OIL SEAL		2			
75	93211-04384	O-RING		2			
---	90105-08049	BOLT, FLANGE		2			
77	90201-08023	WASHER, PLATE		2			
78	93700-09M00	NIPPLE, GREASE		1			
79	6D0-45361-00-8D	CAP, LOWER CASING		1			
80	97095-08020	BOLT		2			
---	92995-08600	WASHER		2			


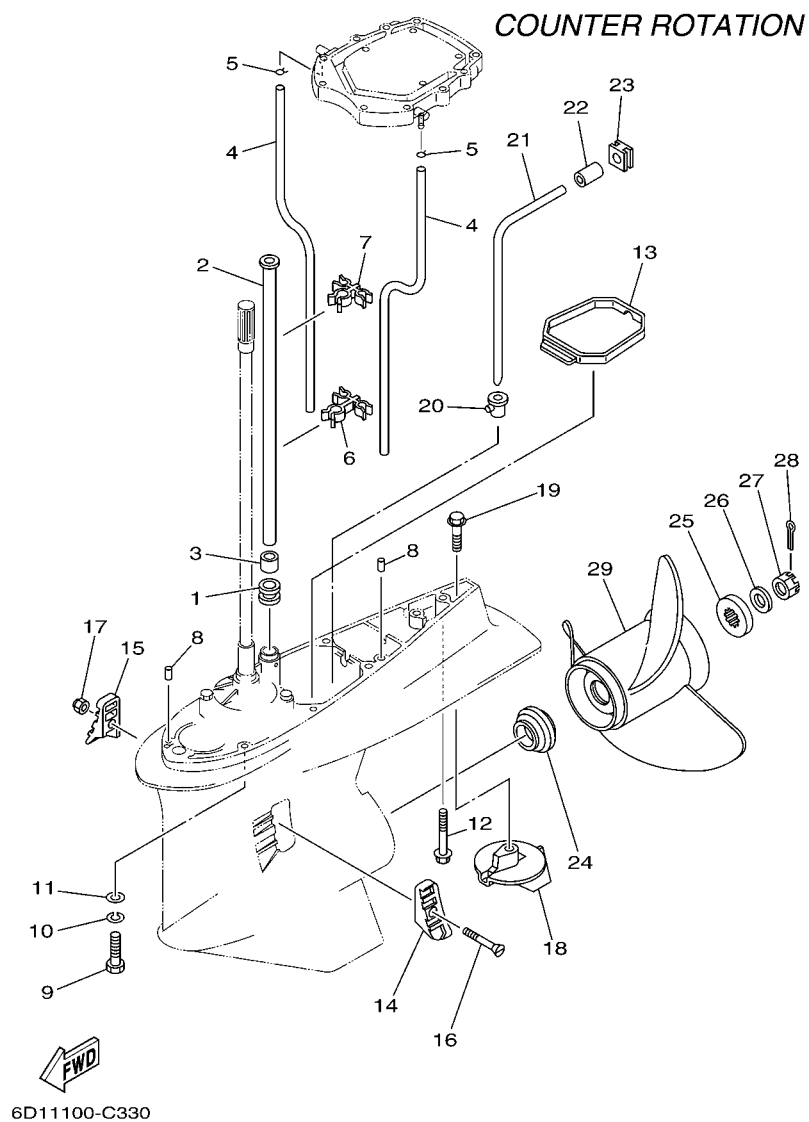


FIG. 33 LOWER CASING & DRIVE 4

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6E5-44366-00	DAMPER, WATER SEAL		1			
2	61A-44361-20	TUBE, WATER		1			X
	61A-44361-30	TUBE, WATER		1			U
3	6E5-44365-00	DAMPER, WATER SEAL		1			
4	90445-09111	HOSE (L430)		2			X
	90445-09024	HOSE (L485)		2			U
5	90467-08M10	CLIP		2			
6	90464-15006	CLAMP		1			
7	90464-15005	CLAMP		1			
8	93608-12M05	PIN, DOWEL		2			
9	97095-10045	BOLT		7			
10	92995-10100	WASHER		7			
11	92995-10600	WASHER		7			
12	90119-10MA2	BOLT, WITH WASHER		1			
13	6D0-45375-00	DAMPER, SEAL		1			
14	61A-45214-10	COVER, WATER INLET		1			
15	61A-45215-10	COVER, WATER INLET		1			
16	90152-05003	SCREW, COUNTERSUNK		1			
17	90185-05002	NUT, SELF-LOCKING		1			
18	69L-45371-00	TAB-TRIM		1			
19	90105-10M00	BOLT, FLANGE		1			
20	6D0-44367-00	DAMPER, WATER SEAL		1			
21	6D0-44362-00	TUBE, WATER		1			
22	6D0-44365-00	DAMPER, WATER SEAL		1			
23	6D0-44366-00	DAMPER, WATER SEAL		1			
24	69J-45987-00	SPACER		1			
25	688-45997-01	SPACER		1			

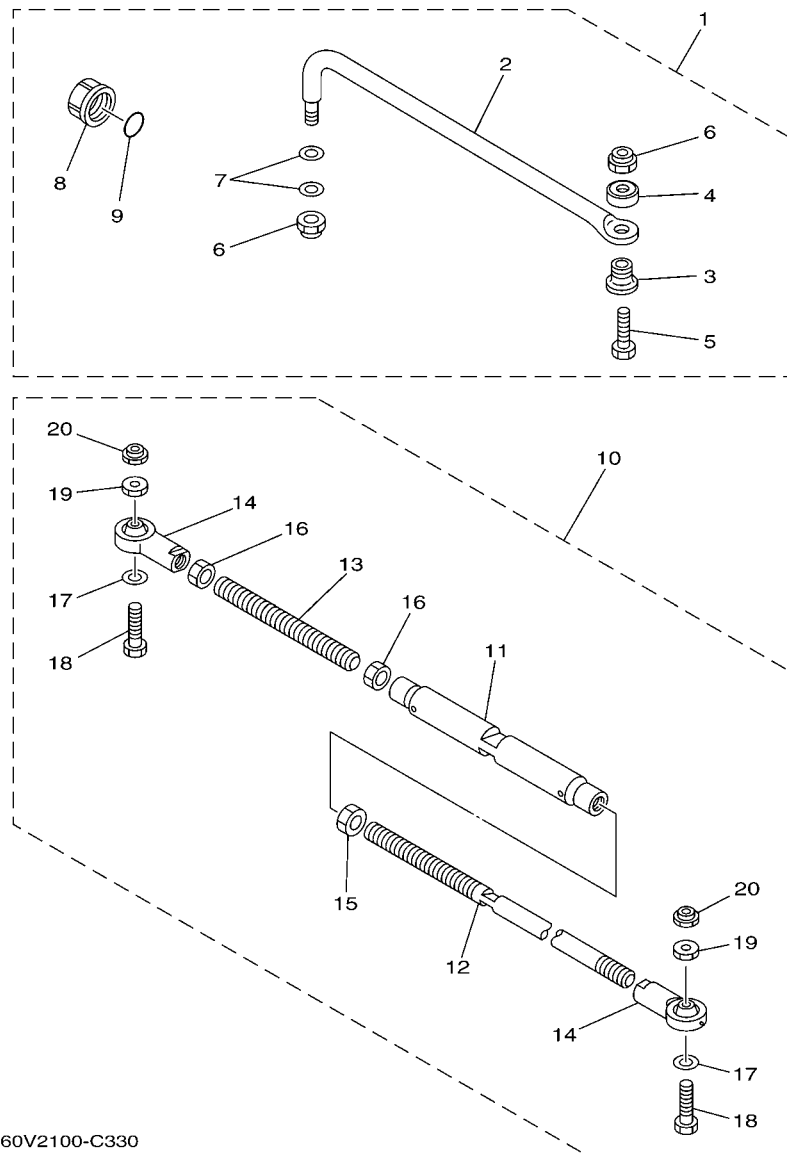

60V2100-C330

FIG. 34 STEERING GUIDE

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6E5-61350-02	STEERING GUIDE ATTACHMENT KIT	1				AP
2	6E5-61351-01	.ROD, STEERING LINK	1				
3	90387-10M61	.COLLAR	1				
4	90560-12M01	.SPACER	1				
5	6E5-61355-00	.BOLT	1				
6	90185-09M01	.NUT, SELF-LOCKING	2				
7	90201-10M20	.WASHER, PLATE	2				
8	6E5-43145-01	.CAP, CLAMP BRACKET	1				
9	93210-16275	.O-RING	1				
10	6E5-61301-01	TWIN KIT (L:600-800MM)	1				AP
11	6E5-61313-00	.ADJUSTER	1				
12	6E5-61311-11	.TIE BAR	1				
13	6E5-61315-00	.TIE BAR	1				
14	6E5-61303-00	.STEERING EYE COMP.	2				
15	90170-14M06	.NUT	1				
16	95380-14700	.NUT	2				
17	90201-10M76	.WASHER, PLATE	2				
18	90101-09M70	.BOLT	2				
19	90170-09M05	.NUT	2				
20	90185-09M01	.NUT, SELF-LOCKING	2				



67H0100-9310

FIG. 35 REMOTE CONTROL BOX

[illegible]

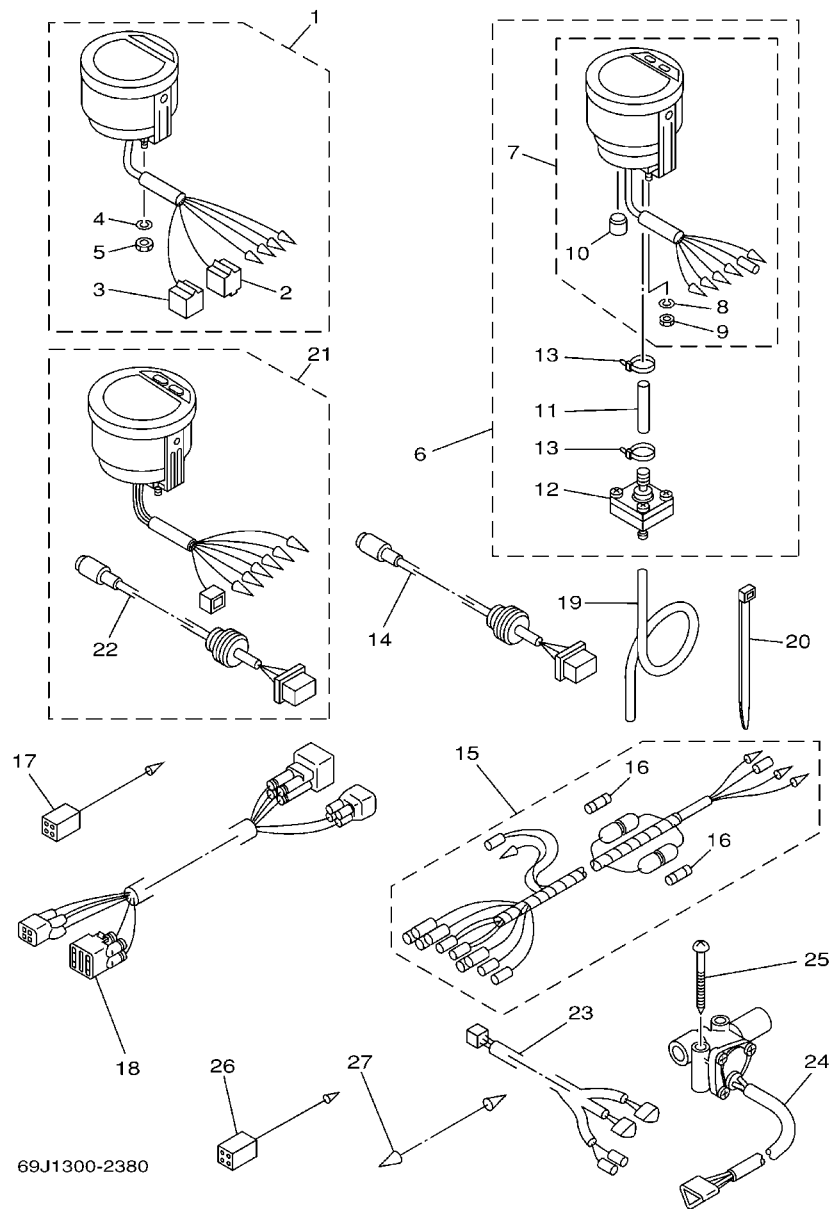


FIG. 36 METER

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6Y5-8350T-03	TACHOMETER ASSY	1	1			AP
2	9E450-04433	.CONNECTOR	1	1			M-4-W
3	9E450-04533	.CONNECTOR	1	1			F-4-W
4	92990-04100	.WASHER, SPRING	2	2			
5	95380-04600	.NUT	2	2			
6	6Y5-83500-S5	DIGITAL SPEEDOMETER ASSY	1				AP
7	6Y5-83570-S5	.SPEEDOMETER ASSY	1				
8	92990-04100	..WASHER, SPRING	2				
9	95380-04600	..NUT	2				
10	6Y5-83533-T2	..GROMMET	1				
11	6Y5-83557-31	.TUBE	1				
12	6Y5-83728-00	.CONNECTOR ASSY	1				
13	90465-11M10	.CLAMP	2				
14	6Y5-87122-S0	CORD ASSY 1	1				AP
15	6Y5-83553-M0	WIRE, LEAD	1				AP
	6Y5-83553-00	WIRE, LEAD		1			AP
16	1E6-82151-00	.FUSE (10A)	2				FOR 6Y5-83553-M0
	1E6-82151-00	.FUSE (10A)		1			FOR 6Y5-83553-00
17	6Y5-82117-00	WIRE, LEAD (BLACK)	1				AP
18	68F-82553-80	EXTENSION, WIRE LEAD	1				AP
	68F-82553-90	EXTENSION, WIRE LEAD		1			AP
19	6Y5-83557-10	TUBE (8M)	1				AP
20	90465-11M10	CLAMP	2				AP
21	6Y5-8350F-00	FUEL MANAGEMENT METER		1			AP
22	6Y5-87122-S0	.CORD ASSY 1		1			
23	6Y5-83553-F1	WIRE, LEAD		1			AP
24	6Y5-85752-01	SENDER UNIT ASSY, FUEL METER		2			AP

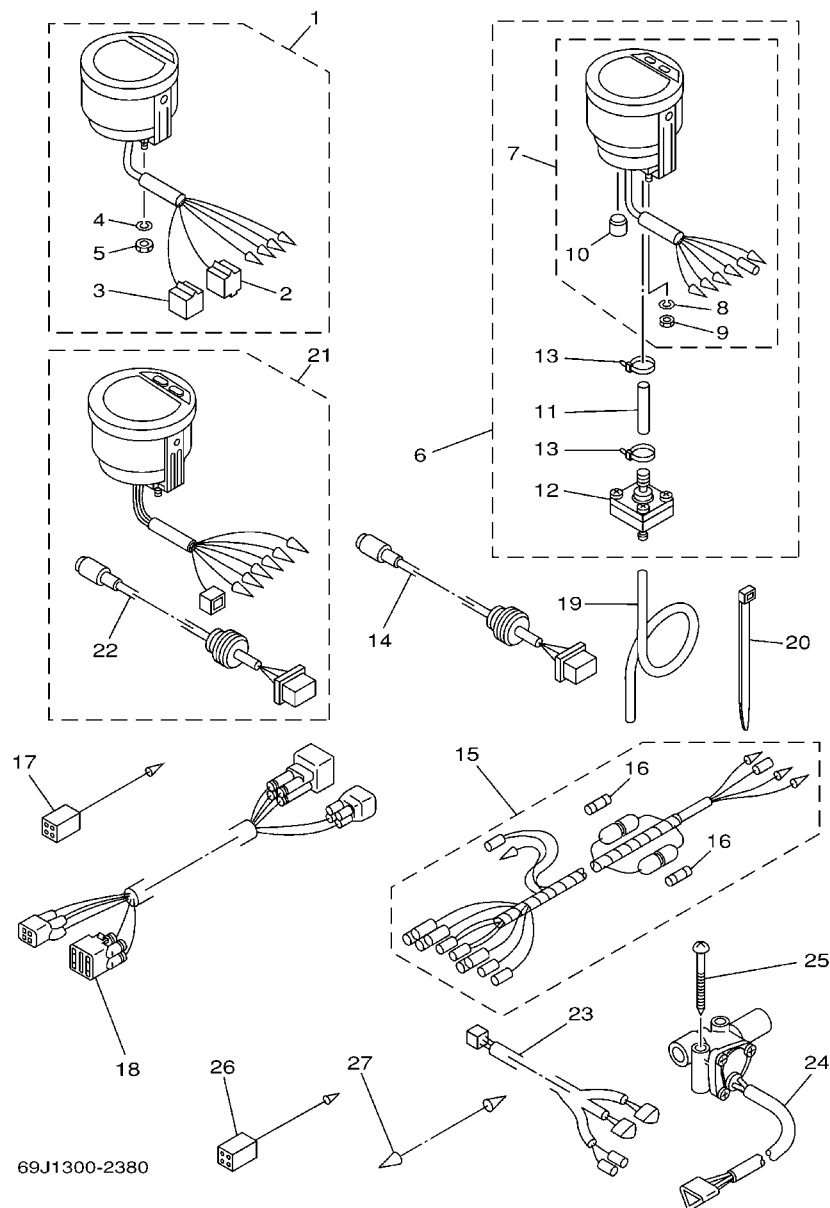


FIG. 36 METER

[illegible]

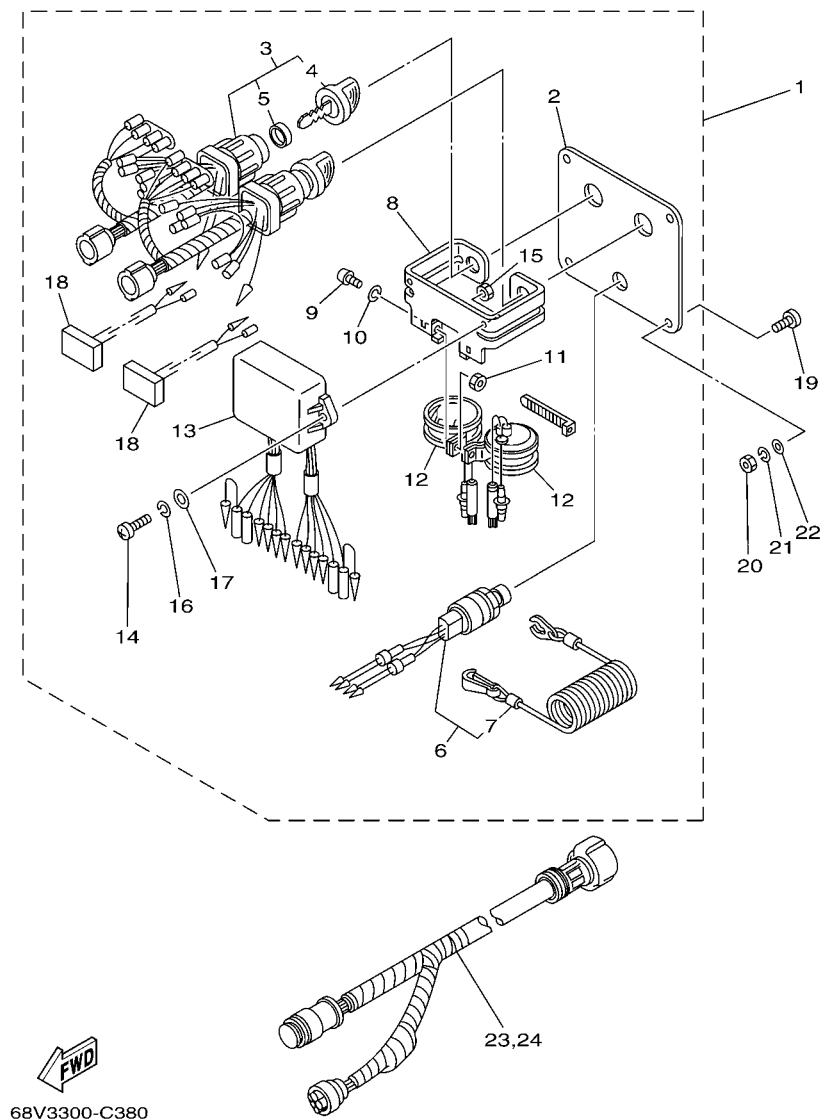


FIG. 37 SWITCH & PANEL

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6K1-82570-07	PANEL SWITCH ASSY		1			AP
2	6K1-82571-01	.PANEL, SWITCH		1			
3	6K1-82510-06	.MAIN SWITCH ASSY		2			
4	703-82577-00	..CAP, KEY		1			
5	6K1-82532-00	..CAP		1			
6	6K1-82575-00	..ENGINE STOP SWITCH ASSY		1			
7	682-82556-00	..STOPPER		1			
8	6K1-83614-01	.BRACKET		1			
9	98980-05010	.SCREW, BIND		2			
10	92990-05100	.WASHER, SPRING		2			
11	95380-05600	.NUT		2			
12	688-83383-11	.BUZZER		2			
13	6K1-85830-01	.CONTROL UNIT ASSY		1			
14	98980-06020	.SCREW, BIND		2			
15	95380-06600	.NUT, HEXAGON		2			
16	92990-06100	.WASHER, SPRING		2			
17	92990-06600	.WASHER, PLATE		2			
18	6K1-81980-00	.DIODE ASSY		2			
19	90149-05M05	SCREW		4			AP
20	95380-05600	NUT		4			AP
21	92990-05100	WASHER, SPRING		4			AP
22	92990-05600	WASHER, PLATE		4			AP
23	6K1-8258A-40	EXTENSION, WIRE HARNESS		1			AP
24	61B-8258A-01	EXTENSION, WIRE HARNESS		1			AP

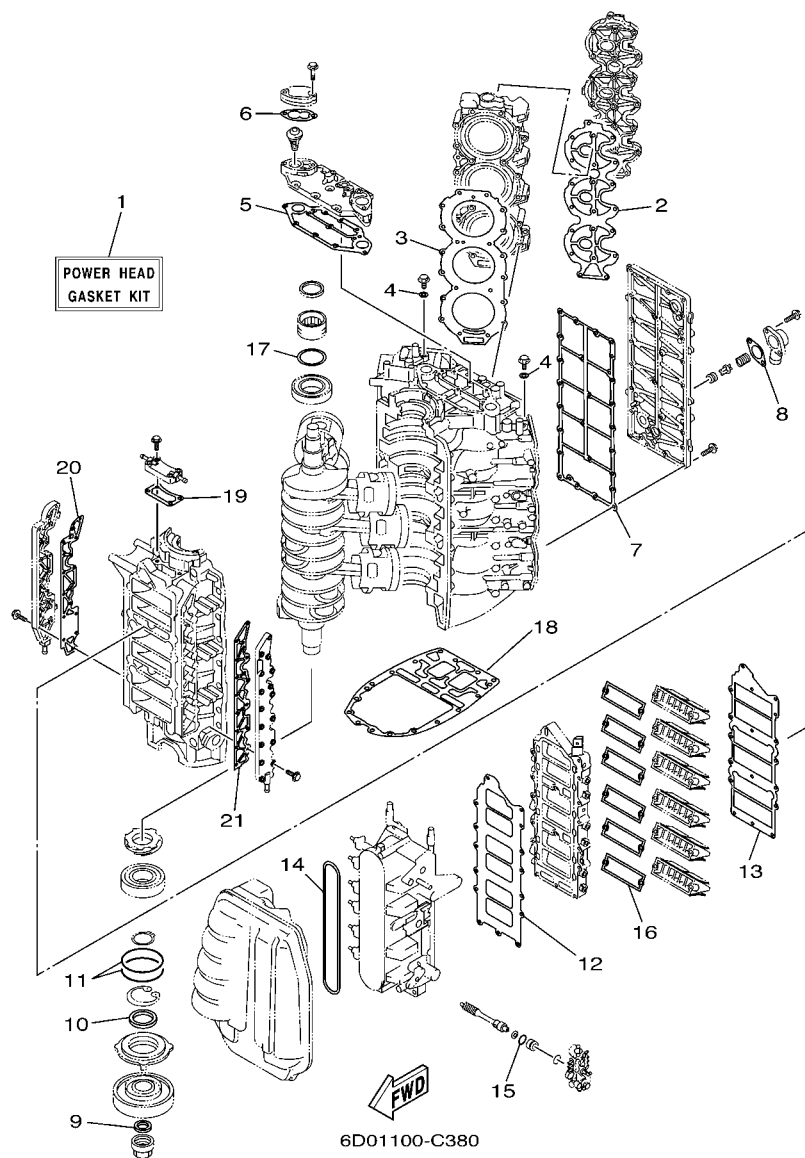


FIG. 38 REPAIR KIT 1

[illegible]

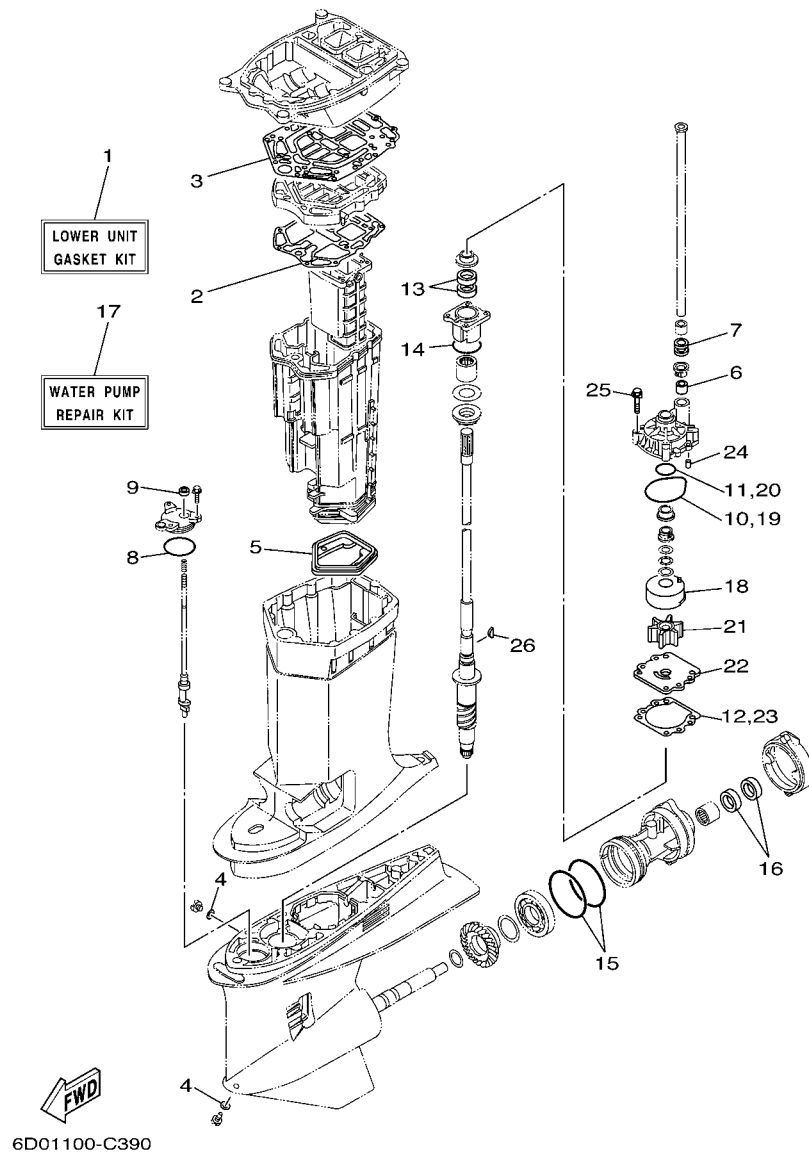


FIG. 39 REPAIR KIT 2

REF. NO.	PART NO.	DESCRIPTION	6D01	6D11			REMARKS
1	6D0-W0001-20	LOWER UNIT GASKET KIT	1	1			
2	61A-41134-A0	.GASKET, EXHAUST MANIFOLD	1	1			
3	60V-45114-00	.GASKET, UPPER CASING	1	1			
4	90430-08020	.GASKET	2	2			
5	6D0-45123-00	.GASKET, MUFFLER	1	1			
6	6E5-44365-00	.DAMPER, WATER SEAL	1	1			
7	6E5-44366-00	.DAMPER, WATER SEAL	1	1			
8	93210-64488	.O-RING	1	1			
9	93106-09014	.OIL SEAL	1	1			
10	93210-86M38	.O-RING	1	1			
11	93210-37160	.O-RING	1	1			
12	6E5-44315-A0	.GASKET, WATER PUMP	1	1			
13	93101-28M16	.OIL SEAL	2	2			
14	93210-55M14	.O-RING	1	1			
15	93211-04384	.O-RING	2	2			
16	93101-30002	.OIL SEAL	2	2			
17	61A-W0078-A3	WATER PUMP REPAIR KIT	1	1			
18	61A-44322-02	.INSERT, CARTRIDGE	1	1			
19	93210-86M38	.O-RING	1	1			
20	93210-37160	.O-RING	1	1			
21	6E5-44352-01	.IMPELLER	1	1			
22	6G5-44323-00	.OUTER PLATE, CARTRIDGE	1	1			
23	6E5-44315-A0	.GASKET, WATER PUMP	1	1			
24	93606-12019	.PIN, DOWEL	2	2			
25	90119-08M14	.BOLT, WITH WASHER	4	4			
26	90280-04M05	.KEY, WOODRUFF	1	1			

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
90465-06M88	6 - 8	91690-30010	24 - 3	92995-06600	23 - 43	93210-37160	39 - 11	93505-32038	27 - 28	97013-08055	7 - 2
90465-08M23	6 - 10	91690-30020	25 - 42		24 - 34	93210-55M14	30 - 39	93605-10108	7 - 14		11 - 39
90465-08M83	25 - 18	92903-05600	3 - 38		25 - 5		32 - 41	93606-12019	29 - 12	97013-08090	11 - 36
90465-11M10	6 - 16		18 - 26		29 - 7		39 - 14		30 - 32	97075-06020	5 - 6
	8 - 57	92903-06100	17 - 6	92995-08200	24 - 13	93210-64488	30 - 12		32 - 34		6 - 28
	13 - 8		24 - 39	92995-08600	5 - 12		32 - 14		39 - 24	97075-08030	6 - 31
	14 - 14	92903-06600	3 - 34		6 - 32		39 - 8	93608-12063	3 - 15	97075-08035	5 - 11
	15 - 7		12 - 20		23 - 52	93210-85M32	4 - 17	93608-12M05	29 - 8		23 - 29
	18 - 24		17 - 7		30 - 42		38 - 11		31 - 8	97075-08055	23 - 51
	19 - 2		18 - 10		32 - 44	93210-86M38	30 - 20		33 - 8	97080-06100	14 - 38
	23 - 49		24 - 40	92995-10100	25 - 30		32 - 22	93700-06M01	24 - 9	97095-05012	3 - 31
	25 - 25	92903-08100	19 - 8		31 - 10		39 - 10	93700-06M03	24 - 30	97095-06010	20 - 23
	29 - 15	92903-08600	7 - 3		33 - 10	93211-04384	30 - 68		25 - 17		25 - 7
	36 - 13		11 - 37	92995-10600	25 - 31		32 - 75	93700-09M00	30 - 71		29 - 6
90465-11M52	19 - 13		22 - 31		26 - 19		39 - 15		32 - 78	97095-06012	18 - 14
90465-13M11	14 - 3	92990-04100	36 - 4		31 - 11	93306-00001	10 - 3	94702-00404	5 - 45		19 - 4
90465-13M18	6 - 41	92990-04600	23 - 40		33 - 11	93306-001U0	10 - 5	95313-08600	24 - 41		20 - 18
90467-08004	6 - 33	92990-05100	37 - 10	92995-14600	26 - 16	93306-209U1	4 - 6	95333-08600	19 - 7		21 - 2
90467-08M10	6 - 12	92990-05200	2 - 19	93101-28M16	30 - 35	93306-210U0	30 - 62	95380-03600	15 - 41	97095-06014	19 - 26
	29 - 21	92990-05600	12 - 5		32 - 37	93306-308U0	4 - 9	95380-04600	36 - 5		25 - 27
	31 - 5		37 - 22		39 - 13	93310-32657	4 - 28	95380-05600	13 - 27	97095-06016	1 - 9
	33 - 5	92990-06100	1 - 4	93101-30002	30 - 67	93310-84106	4 - 30		24 - 57		2 - 9
90467-08M18	13 - 33		2 - 4		32 - 74	93310-959U0	4 - 7		37 - 11		18 - 47
	20 - 7		37 - 16		39 - 16	93311-83280	30 - 3	95380-06600	1 - 5		23 - 15
90468-07M02	3 - 17	92990-06600	14 - 39	93102-40M38	4 - 4		32 - 3		2 - 5	97095-06020	4 - 18
	13 - 17		37 - 17	93103-40011	4 - 15	93311-940V0	4 - 3		14 - 40		13 - 45
90468-18008	24 - 26	92990-08200	24 - 53		38 - 10	93315-43064	30 - 66		24 - 66		23 - 42
90480-06M19	16 - 4	92990-10600	21 - 5	93104-22M07	4 - 13		32 - 73		37 - 15		24 - 7
90480-10M23	11 - 28	92990-18200	31 - 26		38 - 9	93315-660W3	32 - 5	95380-12600	25 - 51	97095-06025	25 - 4
	15 - 22		33 - 26	93106-09014	30 - 13	93317-330U2	30 - 36	95380-14700	34 - 16	97095-06030	24 - 32
90480-20M05	6 - 36	92995-04100	24 - 18		32 - 15		32 - 38	95380-14800	26 - 15	97095-06035	29 - 38
90480-22M15	18 - 23	92995-05100	17 - 9		39 - 9	93317-62891	32 - 50	95670-06660	12 - 21	97095-08020	30 - 73
90480-22M81	23 - 26	92995-05600	3 - 32	93106-19N50	27 - 6	93332-00048	32 - 66	95707-08600	7 - 20		32 - 80
90480-25161	18 - 19		17 - 10	93210-06001	27 - 38	93332-000W1	30 - 4	95780-10300	26 - 35	97095-08025	7 - 17
90501-10M77	30 - 58	92995-06100	4 - 19	93210-06270	2 - 14	93341-440U5	32 - 68	95895-06016	23 - 56		30 - 41
	32 - 62		13 - 46	93210-064A5	27 - 27	93341-670V0	32 - 6	95895-06020	19 - 33		32 - 43
90501-11M10	30 - 17		20 - 24	93210-07003	27 - 37	93341-930U9	30 - 38		23 - 33	97095-08035	24 - 12
	32 - 19		24 - 33	93210-09165	24 - 36		32 - 40	95895-06030	17 - 22	97095-10045	25 - 29
90501-16M11	6 - 35	92995-06600	1 - 10		27 - 56	93399-999T6	28 - 3	97013-05012	3 - 37		26 - 18
90506-16M34	23 - 18		2 - 10	93210-10M74	27 - 50	93410-18M02	25 - 47	97013-05020	18 - 25		31 - 9
90506-20011	25 - 43		5 - 7	93210-16275	34 - 9	93410-37M04	26 - 7	97013-06012	24 - 38		33 - 9
90508-20M31	24 - 14		6 - 29	93210-18397	27 - 34	93410-40M03	4 - 10	97013-06014	18 - 9	97513-08570	11 - 35
90560-12M01	34 - 4		13 - 47	93210-18MA9	13 - 24	93420-36M01	29 - 17	97013-06020	3 - 33	97513-10590	3 - 18
91490-12012	13 - 29		17 - 16		38 - 15	93420-61M07	4 - 16	97013-06035	17 - 5	97575-08550	5 - 10
91490-20012	24 - 43		18 - 15	93210-19M82	13 - 4	93450-37097	32 - 51	97013-06060	12 - 19	97595-06416	15 - 17
91490-40030	31 - 28		19 - 5	93210-35321	26 - 4	93501-04011	30 - 59	97013-08012	7 - 9	97595-06510	6 - 9
	33 - 28		20 - 19	93210-37160	30 - 21		32 - 63	97013-08045	22 - 30	97595-06514	15 - 20
91609-10014	27 - 62		21 - 3		32 - 23	93501-08001	27 - 72		24 - 52	97607-04230	27 - 19

NUMERICAL INDEX

PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.	PART NO.	REF. NO.
97607-05210	27 - 24										
97780-50612	1 - 18										
97780-50616	1 - 13										
	2 - 18										
97780-50620	2 - 29										
	20 - 41										
97780-60620	20 - 33										
97880-04016	23 - 39										
97880-05016	12 - 4										
97885-04016	24 - 17										
97885-05012	21 - 7										
97885-05030	17 - 8										
97885-06008	24 - 48										
97885-06010	17 - 15										
	25 - 13										
97885-06012	25 - 10										
97885-06016	26 - 33										
97985-05212	9 - 12										
97985-05330	9 - 16										
98580-06520	19 - 31										
98980-05010	37 - 9										
98980-06020	37 - 14										
99001-08600	30 - 16										
	32 - 18										
99480-06012	3 - 44										
99590-10114	5 - 19										
	30 - 61										
	32 - 65										
9E450-04433	36 - 2										
9E450-04533	36 - 3										

Z300TRC/LZ300TRC
Z300AETO/LZ300AETO
PARTS CATALOGUE
©2003 by Yamaha Motor Co., Ltd.
1st edition, June 2003
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.
Printed in Japan.